

Troubleshooting Guidelines

SYMPTOM	COMMENTS/SOLUTION
If the filter does not start. . .	• Make sure the AC adapter is plugged into a working electrical source. Also make sure that the AC Adapter Jack is inserted fully into the plug on the back of the Waterfall Globe.
If the filter still will not start. . .	• Unplug and remove the filter holder. Grasp the bottom of the filter and pull downward, to remove the pump. • Remove pump cover and use Needle Nose Pliers to remove impeller. Remove any material that may have twisted around the impeller shaft. Reassemble the pump and place it back on the Glass Globe.
If the LED Light won't turn on. . .	• Make sure that the AC Adapter is plugged into an electrical source. Check to make sure that the AC Adapter Jack is inserted fully into the plug on the back of the Waterfall Globe.

LIMITED WARRANTY

Within one year from the date of original purchase, we will repair or replace, at our option, any Waterfall Globe which is deemed defective in workmanship or materials. This includes: Glass Globe, Base with LED Light, AC Adapter, Filter Housing and motor. If the Waterfall Globe is found to be defective, and has not been modified, damaged or misused, please return the unit with a copy of the receipt and proof of date of purchase:

Call (800) 526-0650 for return authorization and shipping address.

Damage or injuries resulting from improper installation, negligence or misuse are expressly not covered by this warranty. Incidental or consequential damages are specifically excluded.*

Fish loss, personal injury, property loss or damage resulting from use of these products are not covered by this warranty. Incidental or consequential damages are specifically excluded.*

This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

* Because some states do not allow the exclusion of incidental or consequential damages, this exclusion may not apply to you.

Copyright © 2012 Tetra Holding (US), Inc.
3001 Commerce Street • Blacksburg, VA 24060-6671, U.S.A.
www.tetra-fish.com • 800-526-0650

© Registered Trademark of United Pet Group, Inc.
or one of its subsidiaries.

IMPORTANT:

Always unplug the LED Waterfall Globe before inspecting or beginning any maintenance procedures.

Tetra

LED Waterfall Globe



For Optimum Waterfall Performance

1. Replace filter cartridge (Tetra Bio-Bag size small) every 3 to 4 weeks for optimal fish health. Available at your local retailer.
2. NEVER plug the waterfall globe adapter in without water in the globe and the filter assembled in water.

 
IMPORTANT SAFEGUARDS

WARNING: To guard against injury, basic safety precautions should be observed, including the following:


READ AND FOLLOW ALL SAFETY INSTRUCTIONS

DANGER: Since water is employed in the use of aquarium equipment, special care should be taken to avoid electric shock. For each of the following situations, do not attempt to repair the appliance yourself. Return it to an authorized service facility for service, or discard it.


- If the appliance falls into the water, do not reach for it. First unplug it and then retrieve it.
 - If electrical components of the appliance get wet, unplug the appliance immediately.
 - Carefully examine the appliance after installation. It should not be plugged in if there is water on parts not intended to get wet.
 - Do not operate any appliance if it has a damaged cord or plug, if it is malfunctioning, or if it has been dropped or damaged in any manner.
 - To avoid the possibility of water dripping onto the appliance plug or outlet, position aquarium stand and tank to one side of a wall-mounted outlet. A "drip loop" (see illustration) should be arranged for each cord connecting an aquarium appliance to an outlet. The "drip loop" is the part of the cord below the level of the outlet (or extension cord connector) that prevents water from traveling along the cord to the outlet. If the plug or outlet gets wet, do not unplug the cord. Disconnect the fuse or circuit breaker that supplies power to the appliance. Then unplug the appliance and examine the outlet for presence of water.
- Close supervision is necessary when any appliance is used by or near children.
- To avoid injury, do not contact moving parts or hot parts such as heaters, reflectors, lamp bulbs, etc.
- Always unplug an appliance from an outlet when it is not in use, before putting on or taking off its parts, and before cleaning it. Never yank cord to pull plug from outlet. Grasp the plug and pull to disconnect.
- If an extension cord is necessary, a cord with a proper rating should be used. A cord rated for fewer amperes or watts than the appliance rating may overheat. Care should be taken to arrange the cord so that it will not be tripped over or pulled.
- Do not use an appliance for other than its intended use. The use of attachments not recommended or sold by the appliance manufacturer may cause an unsafe condition.
- Do not install or store the appliance where it will be exposed to the weather or to temperatures below freezing.
- Make sure the appliance is securely mounted on aquarium before operating it.

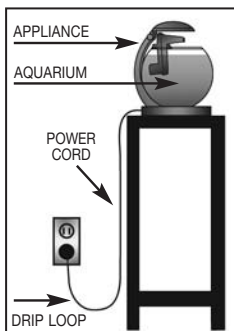


To Remove Impeller for Cleaning

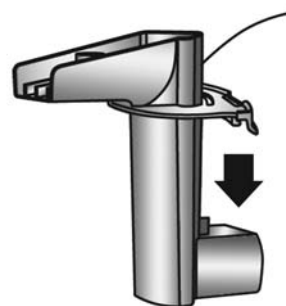 

 1) Grasp the bottom of the filter and pull downward, to remove the pump.

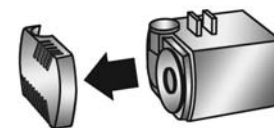


 2) Remove pump cover.

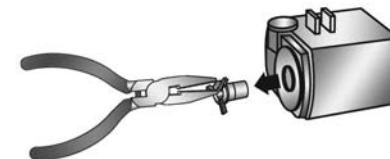

3) Use Needle Nose Pliers to remove the Impeller. Clean impeller with tap water when needed.

 Replacement Parts List

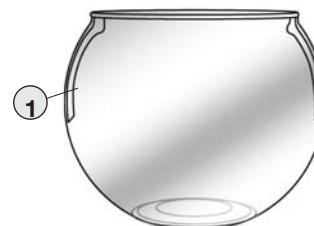

Key	Description	Item #
1	1.8g Glass Globe	29008-300
2	Low Voltage AC Adapter	29008-401

**For questions or missing parts
contact customer service at
(800) 526-0650 • www.tetra-fish.com**

M-F 7:30 A.M. to 5:30 P.M. Eastern Time

SAVE THESE INSTRUCTIONS