

Collapsible Crate



I. Remove top support bars from storage pocket on bottom of crate.



2. Unfold front and back of frame into an upright position. Unzip top opening of crate.









3. Attach bar to the top of the frame by inserting the end over the pin on the end of the frame.



4. Push the bar in with the white tension spring and fit the other end of the bar over the pin on the opposite end of the frame.





5. Attach other top support bar on the other side of the frame.

To Disassemble:

- I. Unzip top opening of crate.
- 2. Push in on the tension spring and remove each top support bar.
- 3. Fold down front and back of frame.





