


Cleaning Your CritterTrail® One Level Habitat

Remove the U-tube (J) and set aside. Push the bottom Side Latches (G) down and lift the entire upper assembly off the Scatter-less Base (A). Set the assembly on a flat surface while you empty the base. (A). For better results, remove the Exercise Wheel (H) from the Back Wire Panel (F).

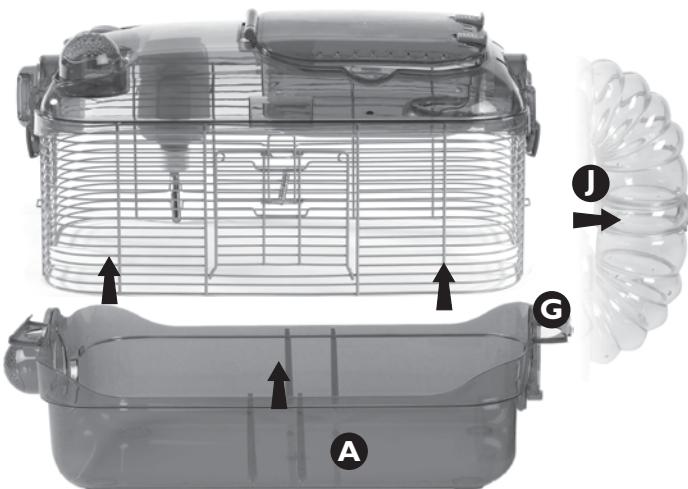

Empty and wash the Scatter-less Base (A) with soap and water or spray with Super Pet® Clean Cage (item #100079553) and wipe dry. Super Pet Clean Cage neutralizes odors, safely cleans surfaces, and is non-toxic to all pets.


After cleaning, replace the soiled bedding. Place the upper cage portion back onto the Scatter-less Base (A). Line up the grooves and gently press up on the Bottom Side Clips to secure the cage assembly. Reattach the U-Tube to side openings and any other parts removed during cleaning.



CritterTrail® Habitats

Assembly Instructions

DESCRIPTION	MATERIAL NO.	UPC
Critter Trail One Level Habitat	100079210	045125605150
Critter Trail Clear Habitat	100512766	045125605143
Critter Trail Glow Habitat	100512763	045125605242
Critter Trail Pink Habitat	100079209	045125605136

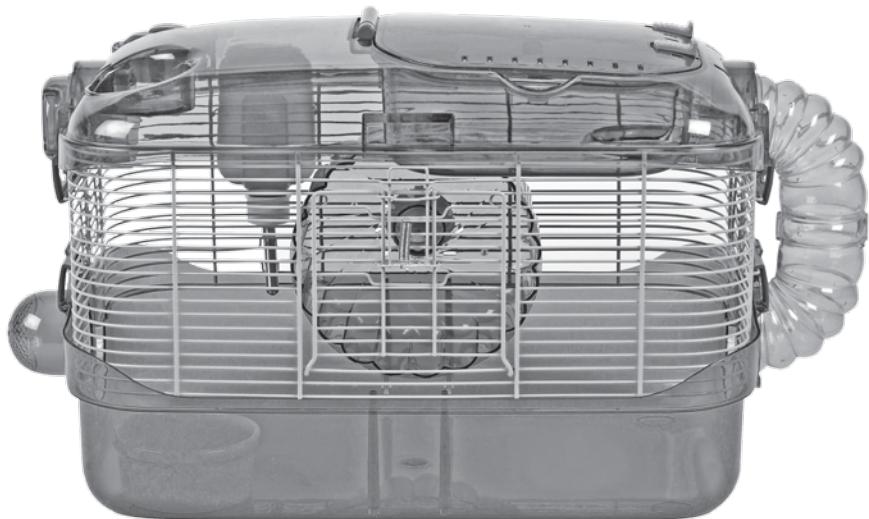

Important:

Carefully Unpack and Sort All Components on the Parts List

If your new pet home has experienced damage during shipping, please do not return your cage to the store. Our Customer Service Department is available to help with any problems.

Our Toll-Free Number (within the USA and Canada only) is 800-954-3003 or call 414-423-8544, Monday - Friday from 8:00 a.m. to 4:00 p.m. (Central Standard Time).

SAVE YOUR INSTRUCTIONS FOR FUTURE REFERENCE


Manufactured by: KAYTEE Products, Inc., Chilton, WI 53014 USA

©2013 KAYTEE Products, Inc.

For more information on bird and small animal products,
visit us at: kaytee.com

Examine each part and identify each component using the parts identification list

Habitat Measures/Dimensions de l'habitat /El hábitat mide: 20"(51cm) L x 11.5"(29cm) W x 11"(28cm) H

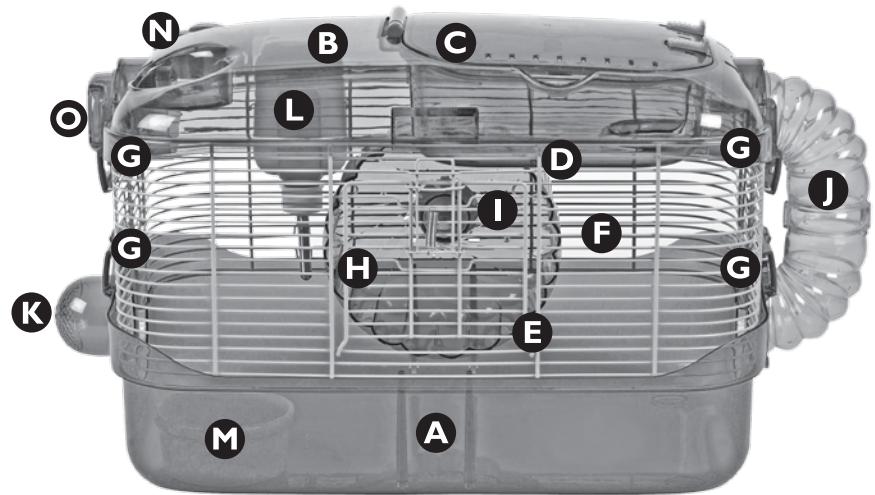



QTY.	KEY	DESCRIPTION	COLOR
1	A	Scatter-less Base	Green
1	B	Roof Top	Purple
1	C	Petting Zone™ Lid	Green
1	D	Petting Zone™ Base	Purple
1	E	Front Wire Panel w/ Door	Yellow
1	F	Back Wire Panel	Yellow
4	G	Side Latch	Red
1	H	Bubble Wave Wheel	Blue
1	I	Wheel Connector Clip	Yellow
1	J	U-Tube	Yellow
1	K	Bubble Plug	Blue
1	L	Water Bottle	Blue
1	M	Round Food Dish	Yellow
1	N	Petting Zone™ Cap	Blue
1	O	Twist Lock Opening Cap	Red

STEP 1 Fill Scatter-less Base with Bedding


Fill the Scatter-less Base (A) with a liberal amount of bedding material. (Not Included)



STEP 2 Connect the Wire Panels

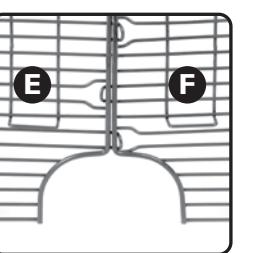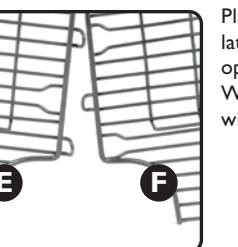


Place the Front Wire Panel w/ Door (E) so the spring loaded door latch opens downward. Place the Back Wire Panel (F) so that the opening for the bottle nozzle is on the bottom. Connect the Front Wire Panel w/ Door (E) to the Back Wire Panel (F) by hooking the wire into each other (as pictured).

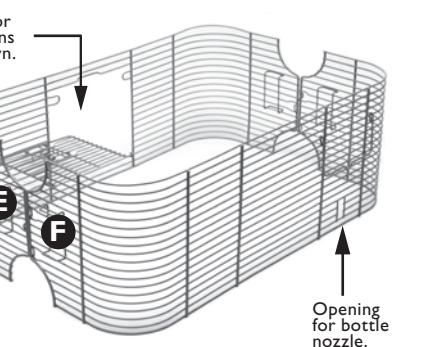

STEP 3 Attach Wire Panels

Place the assembled Front Wire Panel w/Door (E) and the assembled Back Wire Panel (F) on to the Scatter-less Base (A). The Wire Panel Assembly should fit inside the tabs of the Scatter-less Base (A). To secure, snap the two Side Latches (G) on the Scatter-less Base (A) to the Wire Panel Assembly (E & F).


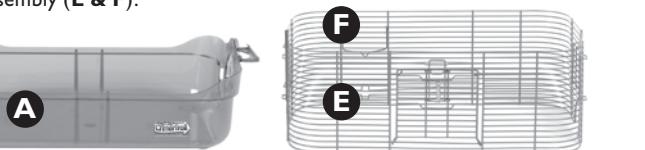


Unlocked

Locked

STEP 4 Bubble Wave Wheel Assembly

Insert the Wheel Connector Clip (I) into the center hole of the Bubble Wave Wheel (H). Attach the Bubble Wave Wheel to the center of the Back Wire Panel (F) between the fifth and sixth bar up from the bottom. Simply press the Wheel Connector Clip (I) through the Back Wire Panel (F) and twist Connector half way to lock Wheel into place.


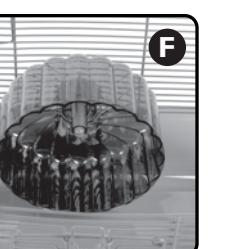
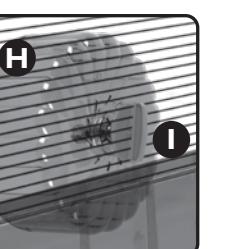


Tip: To keep your Bubble Wave Wheel silent, place a drop of vegetable oil directly on the spindle of the Wheel Connector Clip.

STEP 5 Roof Top Attachment and Petting Zone™ Assembly

First, attach a Roof Top Passageway (P) with Latch Assembly (G) to the left and right side of the Roof Top. Press firmly, the Assembly snaps tightly into Roof Top.

Place the Roof Top (B) onto the top of the assembled bottom portion of the habitat. Line up the Roof Top (B) over the assembled Wire Panel Assembly (E & F). To secure, connect the two Side Latches (G) on the Roof Top (B) to the Wire Panel Assembly (E & F).

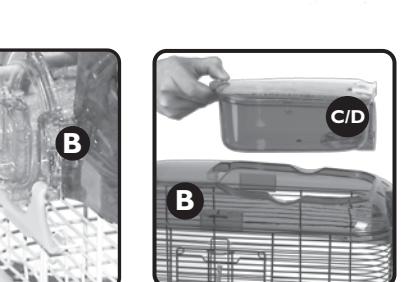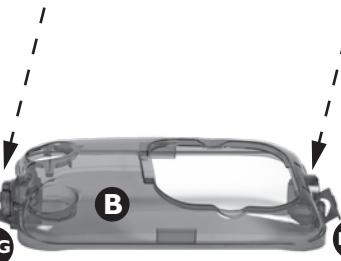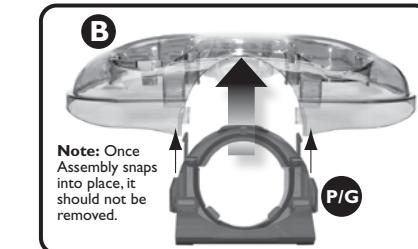

Unlocked


Locked

Next insert the assembled Petting Zone™ (C/D) into the large hole on the Roof Top (B) so that the opening in the Petting Zone is aligned with the hole in the Right Side Passageway.

STEP 6 Removing Petting Zone™



The entire Petting Zone™ can be removed for use as a temporary pet carrier, or to hold your pet while you clean its cage. Simply remove the Petting Zone™ from the Roof Top and insert the Petting Zone™ Cap (N) into the opening of the Petting Zone™. (Do not leave your pet unattended in the removable Petting Zone™)

Special Note: The Petting Zone™ Cap (N) can also be used to close off the Roof Top openings in the CritterTrail® One Level Habitat™ unit.

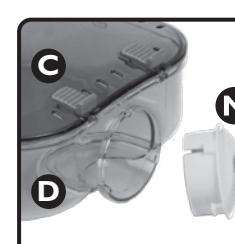

STEP 7 Accessory Attachment

On the left side, lock the Bubble Plug (K) into the bottom hole opening and slide the Twist Lock Opening Cap (O) downward into the Roof Top hole opening. To lock the Twist Lock Opening Cap, turn it so the gap on the cap faces downward. To unlock the Twist Lock Opening Cap, turn so the gap on the cap faces upward and slide the cap up. Next, slide the U-Tube (J) onto the circular openings on the right side. The U-Tube will allow your pet to have access to the Petting Zone™.


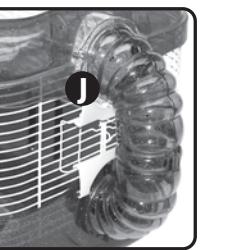
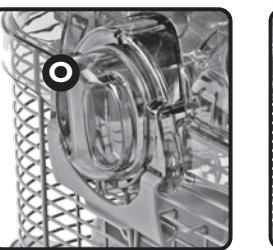


Hint: Accessory Access Holes

There are four unused access holes that will allow you unlimited expansion of your pet's home with the use of CritterTrail® Add-on accessories. DO NOT punch out the additional access holes until you are ready to expand your pet's home and have already purchased your accessories! Access holes CANNOT be closed once opened. To close an opened access hole on the Roof Top (B) you will need to use a CritterTrail® 10" Fun-nel #100079222 with any of the Critter Trail® Fun-nel™ Tube accessories.

STEP 8 Using the Water Bottle and Food Dish

To fill Water Bottle (L), remove the twist off cap with rubber stopper. Fill Bottle completely by placing it under a light stream of running water. Close the bottle by pushing in the rubber stopper and twisting the cap. Turn the bottle upright and allow the vacuum to form. You may experience a few initial drips. Locate the attached wire bottle holder and bottle sipper tube hole location on the Back Wire Panel (F). Place the sipper tube into the hole and pull the wire holder down to secure the bottle in place. When refilling your Water Bottle, **never squeeze it**. This may cause a fracture in the plastic and make it impossible for the necessary vacuum to form.

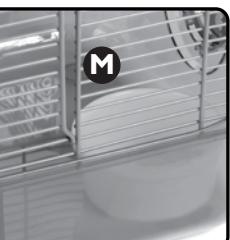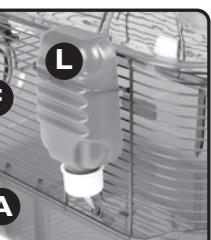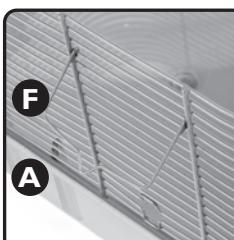

Note: Temperature fluctuations and excessive cage vibrations sometimes cause occasional dripping. Whenever you move your CritterTrail® One Level Habitat™ always remove the Water Bottle.

Place a quality food mixture (not included) into your pet's Round Food Dish (M). Place the Round Food Dish (M) into any corner of your new CritterTrail® habitat. Do not place Food Dish (M) under the Water Bottle (L).