

BENCH CAR SEAT COVER

MACHINE WASHABLE

Secure fit with multiple attachments. This cover is designed to fit most automotive rear seats.

OVERVIEW:

This cover is designed to fit most automotive rear seats equipped with headrests. It is held in place at the top by the two adjustable straps which loop around the back headrest and with two seat anchors that are inserted horizontally into the gap between the rear seat cushions. On some car models, the cover may also be secured to the front corners of the seat with the straps located on the bottom edges of the cover.

INSTALLATION:

Fasten the cover on the back seat and headrests

Lay the cover in place on the back seat, loop the straps over the headrests, and adjust the strap length for a secure fit around the headrest. (Figure 1)

Secure with the seat anchors

Locate the two seat anchors sewn to the back of the cover. Push each anchor into the gap between the rear seat's back cushion and bottom cushion. The anchors can be removed with a strong tug, but hold firmly enough to keep the cover in place under normal use. (Figure 2)

Anchor with bottom corner straps (used only on some car models)

Find the two straps on the bottom corners of the cover and loop each one under the front corners of the seat. Adjust the straps for a snug fit (this is optional and might not work on some models if the seat is mounted to the vehicle floor.)

ADDITIONAL FEATURES:

Side vents and seat belt "keepers"

The cover includes two side vents with a metal snap along each side and two hook-and-loop strips in each upper corner. These can be used to hold a seat belt in place, if it is not being used. These features will provide easy access and normal function of the seat belts. (Figure 3)

Slits for seat belt access

The cover also includes two slits, which allow seat belt buckles to pass through for use with pet vehicle restraint systems, or to allow the use of the seat belt while riding with a human companion. These slits are oversized to fit most vehicle configurations. If seat belts are not in use, we suggest stowing the buckles under the cover and closing the flaps to keep debris from falling through the slits.

CLEANING:

Promptly wipe up any foreign matter or standing liquid. Machine wash separately on gentle cycle in a front load washing machine. Use cold water with mild detergent. Do not bleach. Hang to dry. Always make sure the cover and vehicle seat are dry before installing the seat cover.

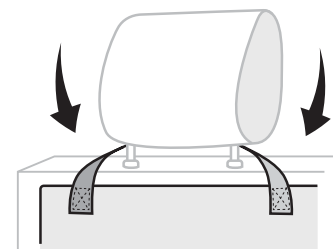


Figure 1



Figure 2



Figure 3