




protect. teach. love.®

PFD00-15956

Six Meal Feeder

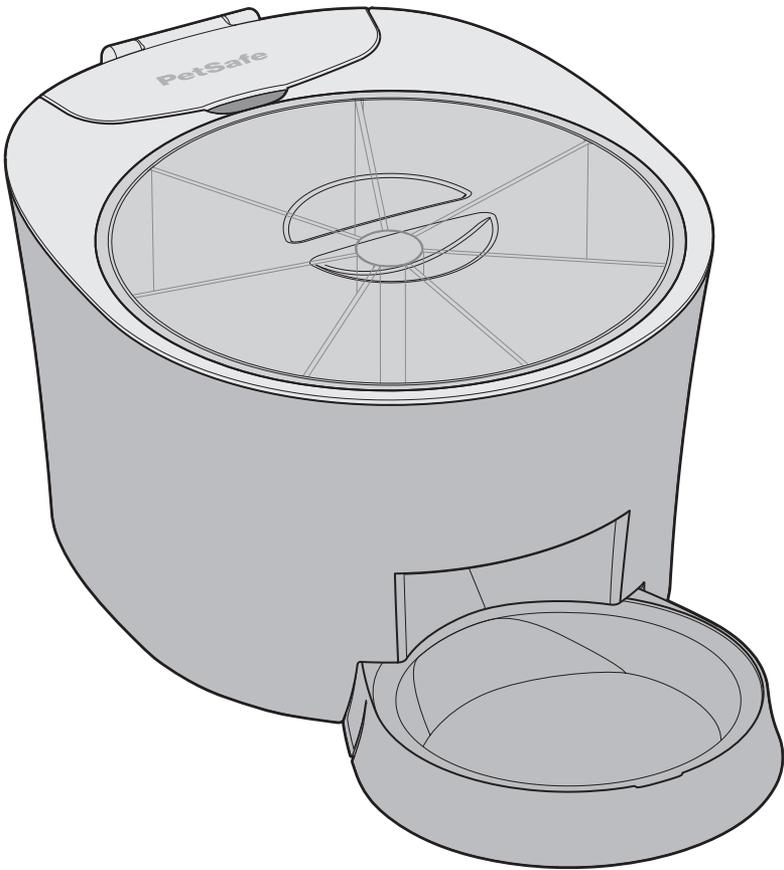

Please read this entire guide before beginning. For the full Product Manual, visit petsafe.com.

Welcome.

You and your pet were made for each other. Our aim is to help you have the best companionship and the most memorable moments together. Your new feeder is designed to help you automate your pet's healthy eating routine, so you can care for your pet even when you can't be there.

We know that safe pets make happy owners. Before getting started, please take a moment to read through the important safety information. If you have any questions, please don't hesitate to contact us.

Hereinafter Radio Systems Corporation and any other affiliate or Brand of Radio Systems Corporation may be referred to collectively as "We" or "Us".

IMPORTANT SAFETY INFORMATION

Explanation of Attention Words and Symbols used in this guide

 This is the safety alert symbol. It is used to alert you to potential personal injury hazards. Obey all safety messages that follow this symbol to avoid possible injury or death.

WARNING WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION CAUTION, used without the safety alert symbol, indicates a hazardous situation which, if not avoided, could result in harm to your pet.

NOTICE NOTICE is used to address safe use practices not related to personal injury.

WARNING

When using electrical appliances, basic safety precautions should always be followed to reduce the risk of fire, electric shock and/or injury to persons, including the following:

- Do NOT place anything on top of the feeder. The unit starts automatically. Keep clear.
- Dispose of all packaging materials properly. Some items may be packed in polybags; these bags could cause suffocation; keep away from children and pets.
- Do NOT allow small children to play with, in or around feeder.
- To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.

CAUTION


- Do not use this pet feeder with dogs or cats less than 6 months old, those unable to reach the food tray or with any physical disability.
- Intended for use with dogs or cats only.
- Before leaving for extended time, always replace batteries with new batteries.
- Check operation frequently to be sure the feeder is dispensing properly.

NOTICE

- Do NOT use outdoors. FOR INDOOR, HOUSEHOLD USE ONLY.
- For dry or semi-moist food use only. DO NOT use wet, canned or moist food.
- Pet feeder should be placed on level surface.
- Do NOT place any foreign object in the pet feeder.
- Do NOT disassemble the pet feeder other than components as instructed.
- Do NOT allow electronics to contact liquids.
- Use only ALKALINE batteries for proper operation of the feeder.
- Read all instructions before operating product. Save these instructions for future reference.

To get the most protection out of your warranty, please register your product within 30 days at petsafe.com. By registering and keeping your receipt, you will enjoy the product's full warranty and should you ever need to call the Customer Care Center, we will be able to help you faster. Most importantly, your valuable information will never be given or sold to anyone. Complete warranty information is available online at petsafe.com.


Components and Features

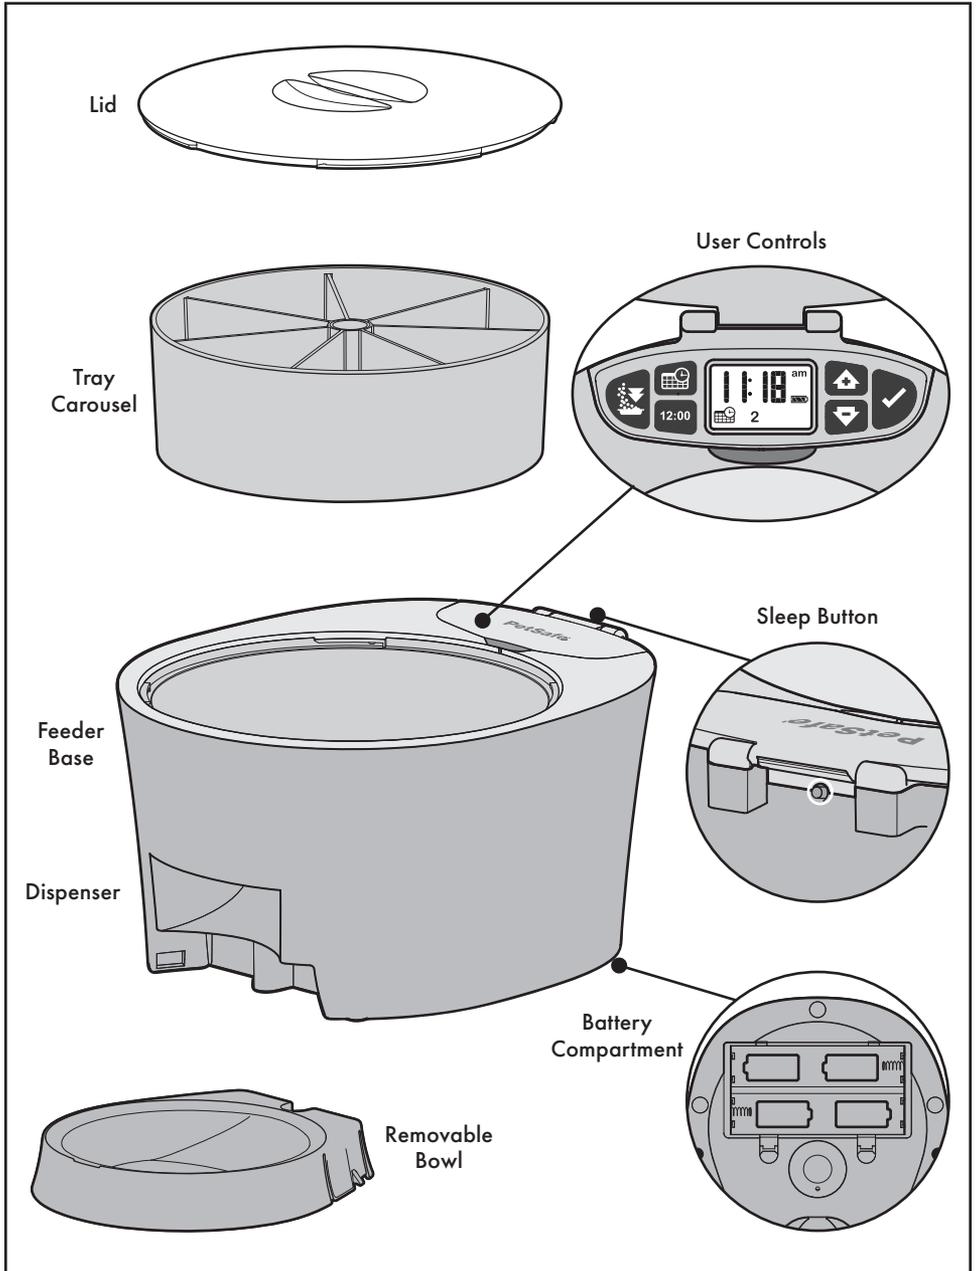


System Requirements and Specifications

- Works with dry or semi-moist pet food
- DO NOT use wet, canned or moist food
- Tray carousel rotates clockwise to dispense scheduled meals
- Can schedule 1 to 6 meals a day
- Each tray slot holds up to 1 cup of food
- Bowl holds up to 1 cup of food
- For indoor, household use only
- Bowl and tray carousel only are dishwasher safe
- Requires 4 D-cell alkaline batteries
- Estimated battery life is 9 months


Setup and Assemble Feeder

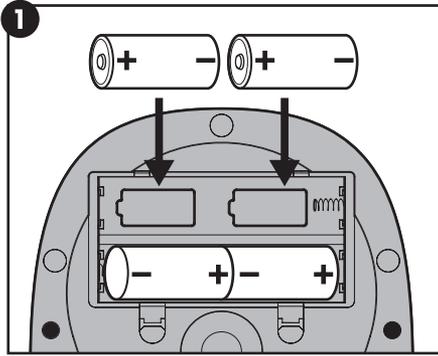


1. Insert four D-cell alkaline batteries into the battery compartment located on the bottom of the feeder.

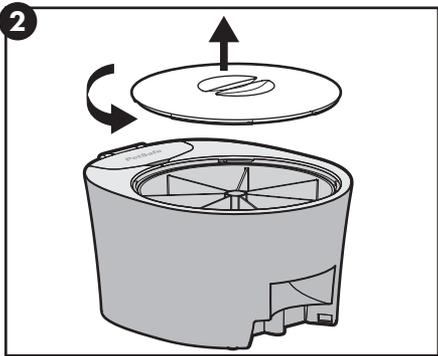


2. Unlock and open the lid by rotating counter-clockwise and lifting up.

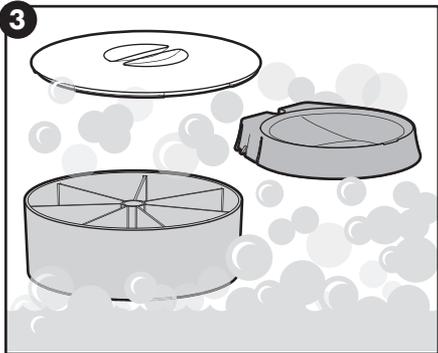


3. If you want, wash and rinse the lid, bowl and tray carousel. Wipe inside and outside the feeder base with a non-abrasive cloth. Once parts are completely dry, replace the tray carousel ensuring it is completely inserted against the inside bottom of the feeder.

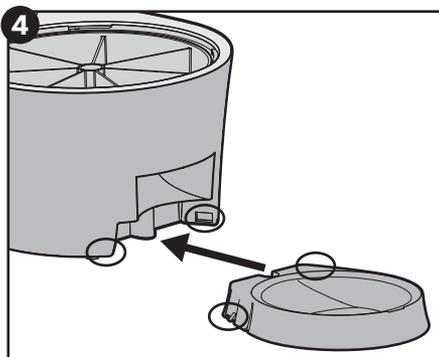

4. Attach the bowl by inserting the side tabs into the slots on the bottom front of the feeder.

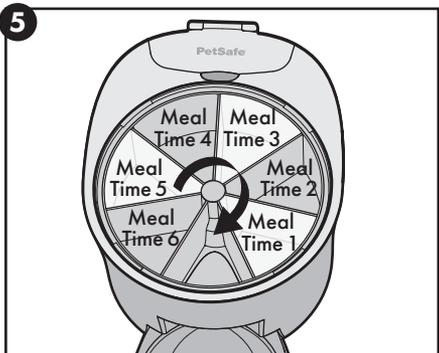

5. The tray carousel rotates clockwise. The tray slot to the right of the dispenser feeds the first scheduled meal time. The next slot feeds the second scheduled meal time and so forth. Keeping this in mind, fill each slot with the desired portion of dry or semi-moist pet food. Each slot holds up to 1 cup of food. **DO NOT** mound food or overfill. Level the food.

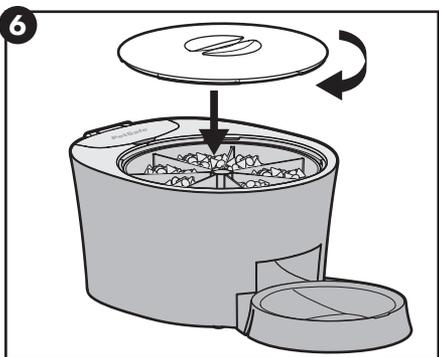

6. Replace the lid and turn clockwise to lock into place.

LCD Display	Button	Function
<p>Next Scheduled Meal Number</p> <p>Current Time</p> <p>Battery Status</p>		FEED NOW - Dispenses the next scheduled meal immediately.
		MEAL SCHEDULE - Push for 2 seconds to program the time for each meal to dispense. Can schedule 1 to 6 meals a day in 15 minute increments. Push and release to view the next scheduled meal time.
	12:00	CLOCK - Push to set the clock.
		UP - Increases selection.
		DOWN - Decreases selection.
		ENTER - Confirms the on-screen selection.

Program Clock

1. Push the **12:00** button to set the current time. To set 24 hour format, press the sleep button on the back of the feeder behind the LCD display.
2. Use the and buttons to set the current time. Push the button to confirm the time and exit the clock screen.

Note: The feeder uses the clock time to dispense the programmed meals.

Program Meals

1. You can schedule 1 to 6 meals a day to feed at specific times in 15 minute increments. **Push** the button for **2 seconds** to program the desired number of meals.
2. Use the and buttons to enter the time for the meal to dispense. Push the button to schedule the meal. Repeat for each meal you want to schedule. **For any meal you do not want to schedule, leave the time at --:--.**
Example: If you only want to feed your pet 2 times a day, only meal times 1 and 2 need to be scheduled. Tray slots 3 and 4 will dispense at the same scheduled times the following day. Tray slots 5 and 6 will dispense the day after that.
3. After scheduling the desired number of meals, continue to push the button to confirm the meal schedule and exit the schedule screen.

Additional Features

Feed Now: To immediately dispense the next scheduled meal, push the button. The feeder then returns to the programmed schedule and will dispense remaining meals at their scheduled times.

Sleep Mode: To stop the feeder from dispensing food without losing the programmed meal schedule, push the sleep button on the back of the feeder behind the LCD display. To wake the feeder from sleep mode, push the sleep button again. The feeder automatically returns to the programmed meal schedule and will feed at the next scheduled meal time. Also the sleep button can be used to set the clock to 24 hour format. See "Program Clock" for detailed instructions.

Cleaning the Feeder

- The lid, bowl and tray carousel can be cleaned in warm, soapy water.
 - The bowl and tray carousel are dishwasher safe.
 - Make sure all parts are rinsed and completely dry before reassembling the feeder.
 - Wipe feeder with a non-abrasive cloth.
 - DO NOT submerge the feeder in water at any time, as this may damage electronic parts.
-

Customer Care International

USA & Canada - Tel: 800-732-2677 – Monday - Friday 8 AM - 8 PM / Saturday 9 AM – 5 PM

Australia - Tel: 1800 786 608 – Monday - Friday 8:30 AM - 5 PM

New Zealand - Tel: 0800 543 054 – Monday - Friday 10:30 AM - 7 PM

Terms of Use and Limitation of Liability

- 1. Terms of Use:** This Product is offered to you conditioned upon your acceptance without modification of the terms, conditions and notices contained herein. Usage of this Product implies acceptance of all such terms, conditions and notices.
 - 2. Proper Use:** This Product is designed as a system for automatic dispensing of dry or semi-moist pet food. The specific temperament of your pet may not work with this Product. If you are unsure whether this is appropriate for your pet, please consult your veterinarian, certified trainer or contact our Customer Care Center or visit our website at petsafe.com. Proper use includes reviewing the entire Operating Guide for your product and any specific Caution statements.
 - 3. No Unlawful or Prohibited Use:** This Product is designed for use with pets only. This device is not intended to harm, injure or provoke. Using this product in a way that is not intended could result in violation of Federal, State or local laws.
 - 4. Limitation of Liability:** In no event shall Radio Systems Corporation be liable for any direct, indirect, punitive, incidental, special or consequential damages, or any damages whatsoever arising out of or connected with the use or misuse of this Product. Buyer assumes all risks and liability from the use of this Product.
 - 5. Modification of Terms and Conditions:** Radio Systems Corporation reserves the right to change the terms, conditions and notices under which this Product is offered.
-

Compliance

FCC - USA

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warranty

One Year Non-Transferrable Limited Warranty

This Product has the benefit of a limited manufacturer's warranty. Complete details of the warranty applicable to this Product and its terms can be found at petsafe.com and/or are available by contacting your local Customer Care Center: Radio Systems Corporation, 10427 PetSafe Way, Knoxville, TN 37932 USA.

Australia/New Zealand – In compliance with the Australian Consumer Law, Warranties Against Defects, effective January 1, 2012, warranty details of this Product are as follows:

One year Non-Transferrable Limited Warranty

What is covered: Radio Systems Australia Pty Ltd (hereinafter referred to as "Radio Systems")

warrants to the original retail purchaser, and not any other purchaser or subsequent owner, that its Product, when subject to normal and proper residential use, will be free from defects in material or workmanship for a period of one (1) year from the purchase date. An "original retail consumer purchaser" is a person or entity who originally purchases the Product, or a gift recipient of a new Product that is unopened and in its original packaging. When serviced by Radio Systems Customer Service, Radio Systems covers labor and parts for one year of ownership; after the first year, a service or upgrade charge will apply relative to replacement of the Product with new or refurbished items at Radio Systems' sole discretion.

The limited warranty is non-transferrable and shall automatically terminate if the original retail consumer purchaser resells the Radio Systems Product or transfers the property on which the Radio Systems Product is installed. This Limited Warranty excludes accidental damage due to dog chews; lightning damage; or neglect, alteration and misuse. Consumers who purchase products outside of Australia, New Zealand or from an unauthorized dealer will need to return the Product to the original place of purchase for any warranty issues.

Please note that Radio Systems does not provide refunds, replacements or upgrades for change of mind, or for any other reason outside of these Warranty terms.

Claims Procedure: Any claim made under this Warranty should be made directly to Radio Systems Australia Pty Ltd Customer Care Centre at:

Radio Systems Australia Pty Ltd., PO Box 7266, Gold Coast Mail Centre QLD 9726, Australia
Australia Residents: 1800 786 608
New Zealand Residents: 0800 543 054
Email: aus-info@petsafe.net

To file a claim, a proof of purchase must be provided. Without a proof of purchase, Radio Systems will not repair or replace faulty components. Radio Systems requests the Consumer to contact the Radio Systems Customer Care Centre to obtain a Warranty Return number, prior to sending the Product. Failure to do so may delay in the repair or replacement of the Product.

If the Product is deemed to be faulty within 30 days from date of original purchase, Radio Systems will organize for a replacement to be sent in advance of returning the faulty Product. A Post Bag will be included with the replacement Product for the return of the faulty Product. The Product must be returned within 7 days of receiving the replacement. If the Product is deemed to be faulty after 30 days from the date of original purchase, the consumer will be required to return the Product to Radio Systems at the consumer's own expense. Radio Systems will test and replace the faulty unit or its components and return to the consumer free of charge provided the Product is within its said warranty period. This warranty is in addition to other rights and remedies available to you under the law. Radio Systems goods come with guarantees that cannot be excluded under the Australia Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

Should you have any queries or require any further information, please contact our Customer Care Centre on 1800 786 608 (Australia) or 0800 543 054 (New Zealand).

Radio Systems Corporation

10427 PetSafe Way
Knoxville, TN 37932
+1 (800) 732-2677
petsafe.com

©2017 Radio Systems Corporation

J400-2059