 
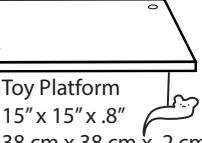
 
 
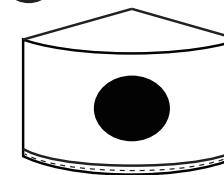


Parts List

- 1  1 PC Base Platform
23.6" x 15.7" x .8"
67 cm x 43 cm x 2 cm
- 2  1 PC House Bottom & Top
14.2" x 14.2" x .8"
36 cm x 36 cm x 2 cm
- 3  1 PC Hammock (Bowl)
15.7" dia x 8"
40 cm x 20 cm
- 4  1 PC Hammock Platform
15" x 15" x .6"
38 cm x 38 cm x 1.5 cm
- 5  1 PC Rope Toy Platform
15" x 15" x .8"
38 cm x 38 cm x 2 cm
- 6  1 PC Toy Platform
15" x 15" x .8"
38 cm x 38 cm x 2 cm
- 7  1 PC Wand Toy Platform
15" x 15" x .8"
38 cm x 38 cm x 2 cm
- 8  3 PC House Interior Post (2.25"dia)
- 9  3 PC House Base Post
3.25"dia x 15"
8.5 cm dia x 38 cm

- 10  4 PC Sisal Post
3.25"dia x 19.3"
8.5 cm dia x 49 cm
- 11  3 PC Center Post
3.5"dia x 12.6"
8.5 cm dia x 32 cm
- 12  1 PC Center Post (Sisal)
3.5"dia x 12.6"
8.5 cm dia x 32 cm
- 13  1 PC Top Connect Post (Long)
3.5"dia x 11"
8.5 cm dia x 28 cm
- 14  1 PC Top Connect Post (Short)
3.5"dia x 5.5"
8.5 cm dia x 14 cm
- 15  1 PC Ceiling Brace
3.9"dia x 12.6"
10 cm dia x 32 cm
- 16  1 PC Ceiling Brace Cover
3.9"dia x 22.8"
10 cm dia x 58 cm
- 17  1 PC House Cover
- 18  1 PC Rope Toy
- 19  1 PC Spring-y Ball Wand Toy

Hardware	Size	Quantity
A Screw	8mm x 40mm	7pcs
B Dowel	8mm x 65mm	12pcs
C Washer	25mm	4pc
Allen Wrench	5mm	1pc

97400 Series

Tiger Tough™
FOR CATS AT PLAY™



**Skyscraper
Playground
with adjustable height**


26.4" x 16.9" x 100~114"
(67 x 43 x 253~289 cm)

FurHaven Pet™ Products
Bellingham, Washington USA

Thank you for choosing Tiger Tough™ for your pet!
For questions and inquiries, please contact FurHaven Customer Service
at 1.888.459.2337 or via email at service@furhaven.com

Warning: Choking hazard. Contains small parts not suitable for children under 3 years old. Be alert during assembly.

Problems or Questions? Please contact FurHaven Customer Service at 1.888.459.2337 or via email at service@furhaven.com. Monday through Friday ~ 7:30 am to 4:00 pm

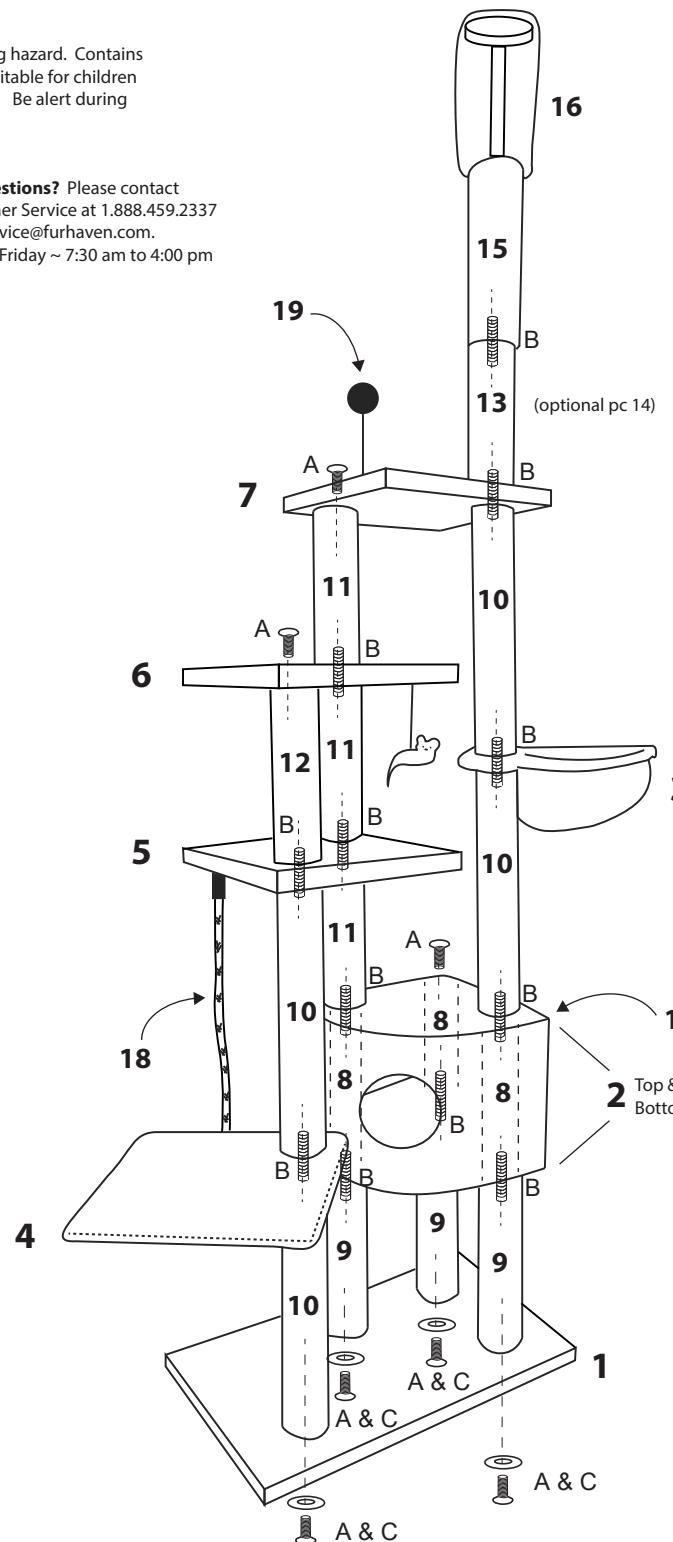

Thank you for choosing Tiger Tough™ for your pet! Our products are manufactured of high quality materials and feature natural sisal fibers. Sisal textiles are durable, economical and biodegradable. They are also an excellent surface for scratching!

Assembly Instructions

1. Product must be assembled **vertically beginning with the base and building up**. Do not assemble lying down as damage may occur to unit when righting and hardware may not be secure for use.
2. Assemble product on a flat, stable surface using the tools provided. Before beginning, please verify all parts against the parts lists. Tighten all connections as you build until they are firm. Do not overtighten.
3. Beginning with Base 1, attach Posts 9 (x3) using Screw A & Washer C.
4. Insert one Dowel Screw B into each Post 9. Place Platform 2 House Bottom fur side up onto Dowel ends. Then attach one Interior House Post 8 to each exposed Dowel end and tighten.
5. Insert one Dowel Screw B into only left and right corner Interior House Post 8. Place Platform 2 House Top onto Dowel Ends. Using one Screw A, secure center House Post 8 to Platform top.
6. Carefully place House Cover 17 over house frame, aligning corner holes with Dowel Ends.
7. Attach Post 11 to left corner of house. Attach Post 10 to right corner of house. Tighten.
8. Attach Bowl Hammock 3 to right Post 10 using Dowel Screw B. Then attach an additional Post 10 and tighten. Attach a Dowel Screw B to top Post 10.
9. Attach Post 10 to Base 1 using Screw A & Washer C. Then attach Hammock 4 to Post 10 using Dowel Screw B. Attach an additional Post 10 and then attach Dowel Screw B.
10. Secure Platform 5 to left Post 10 and Post 11 using 2 x Dowel Screw B. Then attach Post 12 to Post 10. Attach an additional Post 11 to existing Post 11; tighten. Attach Rope 18 to Platform 5.
11. Secure Platform 6 to Post 12 using Screw A. Attach last Post 11 to remaining Post 11 using Dowel Screw B; tighten.
12. Place Platform 7 on Post 10 exposed Dowel Screw End. Attach Top Connect Post 13 (or optional Top Connect Post 14) to Post 10. Secure left side of Platform 7 to Post 11 using Screw A. Attach Ball Wand 19 to platform.
13. Attach Ceiling Brace 15 to Top Connect Post 13 (or optional Top Connect Post 14).

Care Instructions

- Periodically inspect unit and tighten as needed.
- Spot clean as needed with gentle detergent diluted with water. Towel & air dry.

Hints & Tips

- Because it is a natural fiber, it is normal for sisal to discolor over time.
- Exposure to direct sunlight or moist conditions may damage the unit.
- For greater stability, place the playground in an area where it will not be bumped.
- Never let children or larger animals play on or climb the playground unit. This is extremely unsafe and may lead to damage or harm.
- Not recommended for outdoor use.
- Keep tools and instructions for future use and reference.