

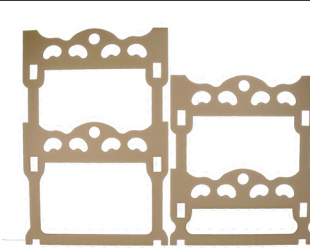
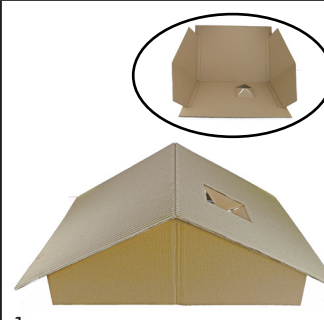




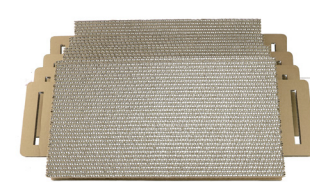
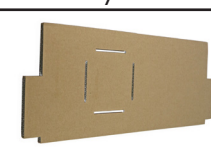
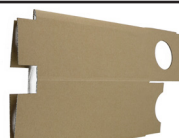



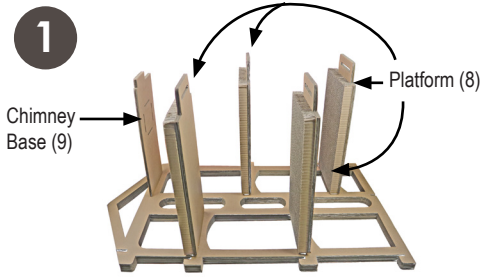
Helpful Hints and Care

- Verify you have all parts before beginning assembly. If you are missing any parts, please contact FurHaven Customer Service at 888-459-2337. Do not return to retailer.
- Periodically inspect joints of product and maintain as needed.
- Moisture, humidity or wet conditions may damage product resulting in a shorter use life.
- Prolonged exposure to sun or heat may damage product resulting in a shorter use life.
- This product is recyclable. Please recycle when your pet is done using this toy.

Model: 403053

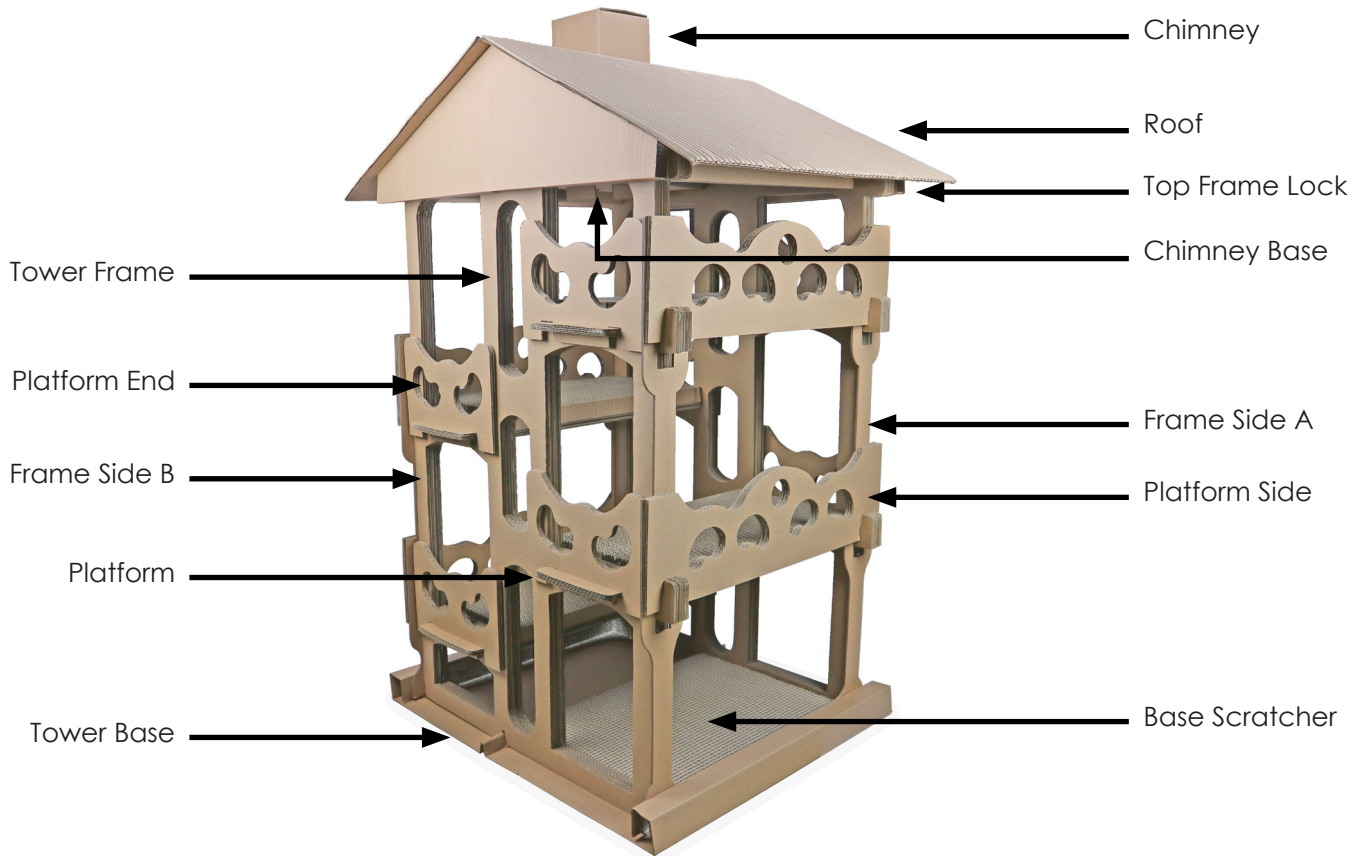

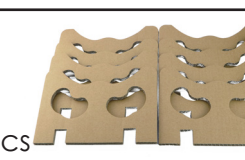
<p>1 Tower Frame</p>  <p>2 pcs</p>	<p>2 Frame Side A&B</p>  <p>A B</p> <p>1 pc each</p>	<p>3 Roof</p>  <p>1 pc</p>	<p>4 Platform Side</p>  <p>4 pcs</p> <p>5 Base Scratcher</p>  <p>1 pc</p>
<p>6 Platform End</p>  <p>8 pcs</p> <p>7 Top Frame Lock</p>  <p>2 pcs</p>	<p>8 Platform</p>  <p>4 pcs</p>	<p>9 Chimney Base</p>  <p>1 pc</p> <p>10 Chimney</p>  <p>1 pc</p>	<p>11 Tower Base</p>  <p>1 pc</p>




Insert the Chimney Base (9) into the top horizontal slot (nearest to the triangle "roof frame" section of the form) of a Tower Frame (1).

Insert the four Platforms (8) into the remaining horizontal slots of the Tower Frame (1) with the scratcher facing up.

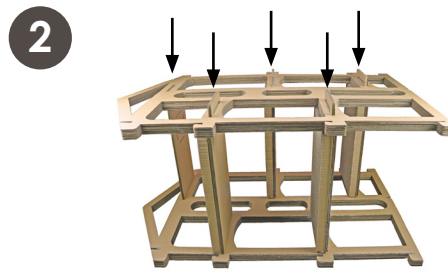


Carefully attach the other Tower Frame (1) to the other ends of the Chimney Base (9) and Platforms (8). *(Caution: The frame may be unstable during assembly. Take care not to bend or apply weight onto the frame during this step.)*

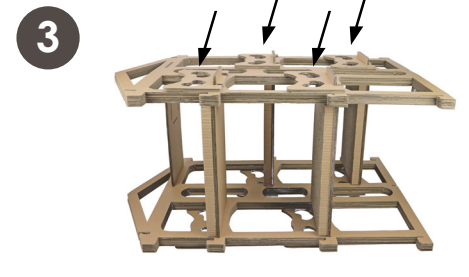


Carefully push the Platform Ends (6) through the Platform (8) slots (on the outside of the Tower Frame(1)) to lock the Platforms in place.

Repeat for both sides and all ends (total of eight Platform Ends installed - four on each Tower Frame).

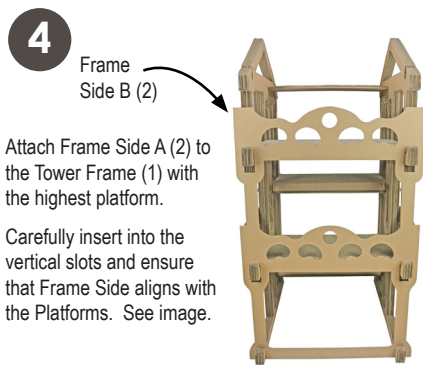


Attach Frame Side A (2) to the Tower Frame (1) with the highest platform. Carefully insert into the vertical slots and ensure that Frame Side aligns with the Platforms. See image.

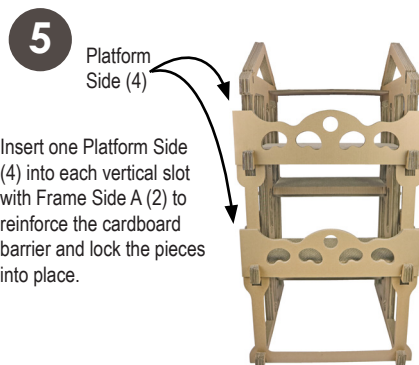

Insert one Platform Side (4) into each vertical slot with Frame Side A (2) to reinforce the cardboard barrier and lock the pieces into place.




Repeat Steps 4 & 5 on the other side of the Tower Frame (1) using the shorter Frame Side B (2) to align with the lower platform set. Remember to lock into place using Platform Side (4) for each Platform level.

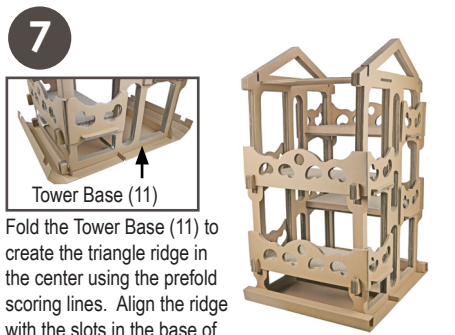


Fold the Tower Base (11) to create the triangle ridge in the center using the prefold scoring lines. Align the ridge with the slots in the base of the Tower Frames (1). Place the Tower on top of the base.

Carefully fold over the edges of the Tower Base (11) into the vertical slots located at the bottom of the Tower.

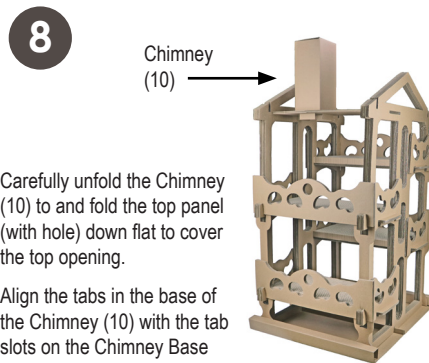

Carefully unfold the Chimney (10) to and fold the top panel (with hole) down flat to cover the top opening.


Align the tabs in the base of the Chimney (10) with the tab slots on the Chimney Base (9) at the top of the Tower Frame (from Step 1) and insert to attach.

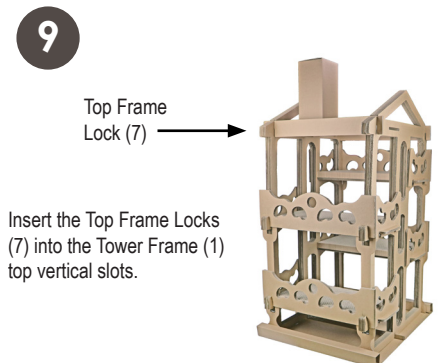

Insert the Top Frame Locks (7) into the Tower Frame (1) top vertical slots.



Carefully unfold Roof (3). Position Roof (3) over Tower and align cutout with Chimney (10). Keeping roof cutout tabs folded under, slide Roof (3) over Chimney (9) and set on Tower Frame (1). Fold under gable ends of roof to finish edge.

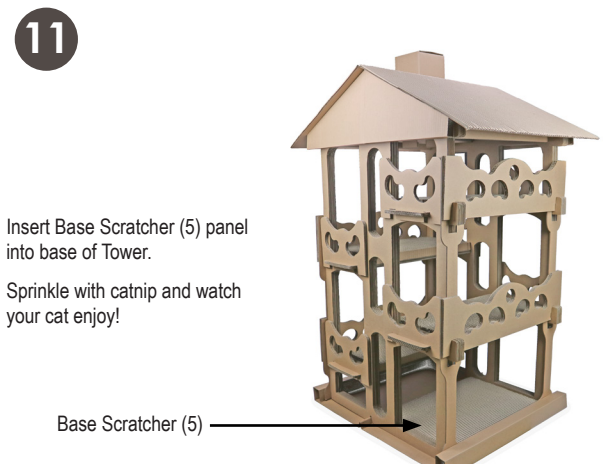

Insert Base Scratcher (5) panel into base of Tower. Sprinkle with catnip and watch your cat enjoy!