

RAISED FEEDER INSTRUCTION MANUAL









RAISING AND LOWERING THE FEEDER



STEP 1 - BUTTONS ON THE LOWER SIDE

The lower button controls the lift of the lever. When the lever is to be pulled out, press this button.



STEP 2 - PRESS THE BUTTON

The lock position can be unlocked only after being held down.



STEP 3 - PULL DOWN

With the button held down pull the lever down.



STEP 4 - RELEASE

After pressing the button, you must release the button to allow the self-locking mechanism in the lever.



STEP 5 - PUSH UP

The lock position can be unlocked only after being held down. The intermediate state must be achieved by pushing the lever back after the highest state.



STEP 6 - NOTE THAT THE CLIP POPS INTO PLACE

The clip must be ejected to achieve height adjustment.



BOWL CLIPS HELP THE BOWLS STAY FIXED IN PLACE ON THE TABLE.

CLIP - HOW TO USE



STEP 1 - PUSH THE CLIP UP



STEP 2 - PUSH THE CLIP UP



STEP 3 - ROTATE THE CLIP TO THE MIDDLE



STEP 4 - REMOVE THE BOWLS



STEP 5 - ROTATE AND PRESS TO RESET