 



# REMOTE TRAINING COLLAR OPERATING AND TRAINING GUIDE

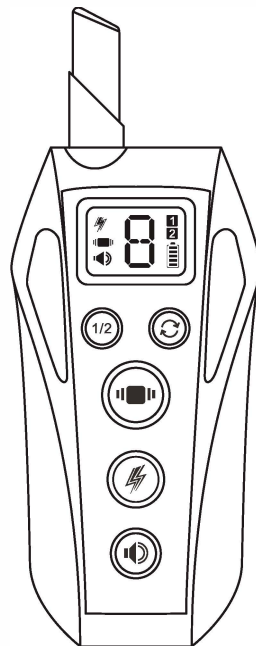

**T700**


FC CE RoHS

 Made in China



For 1 Dog  
**T700-1**

 OR



For 2 Dogs  
**T700-2**

PLEASE READ THIS ENTIRE GUIDE BEFORE BEGINNING

T700-TEX-011(1)

# Important Safety Information

## **⚠ WARNING**

**Not for use with aggressive dogs.** Do not use this Product if your dog is aggressive, or if your dog is prone to aggressive behavior. Aggressive dogs can cause severe injury and even death to their owner and others. If you are unsure whether this product is appropriate for your dog, please consult your veterinarian or certified trainer.

## **⚠ CAUTION**

**Safety during on-leash training.** It is vitally important that you and your dog remain safe while learning during on-leash training.

Your dog should be on a strong leash, long enough for him to attempt to chase an object, but short enough for him not to reach a road or other unsafe area. You must also be physically strong enough to restrain your dog when he tries to chase.

## **CAUTION**

**Risk of skin damage.** Please read and follow the instructions in this manual. Proper fit of the collar is important. A collar worn for too long or made too tight on the pet's neck may cause skin damage.

Ranging from redness to pressure ulcers; this condition is commonly known as bed sores.

- Avoid leaving the collar on the dog for more than 12 hours per day.
- When possible reposition the collar on the pet's neck every 1 to 2 hours.
- Check the fit to prevent excessive pressure; follow the instructions in this manual.
- Never connect a lead to the electronic collar; it will cause excessive pressure on the contacts.
- When using a separate collar for a lead, don't put pressure on the electronic collar.

 
- Wash the dog's neck area and the contacts of the collar weekly with a damp cloth.
- If a rash or sore is found, discontinue use of the collar until the skin has healed.
- If the condition persists beyond 48 hours, see your veterinarian.

These steps will help keep your pet safe and comfortable. Millions of pets are comfortable while they wear stainless steel contacts. Some pets are sensitive to contact pressure. You may find after some time that your pet is very tolerant of the collar. If so, you may relax some of these precautions. It is important to continue daily checks of the contact area. If redness or sores are found, discontinue use until the skin has fully healed.

## Table of Contents

Components.....	6
Other Items You May Need.....	6
Main Features.....	7
Overview.....	8
<b>Operating Guide</b> .....	9
How to turn the T700 on/off.....	9
How the transmitter buttons work.....	10
Collar fitting.....	12
How to find the best Vibration/Shock level.....	13
To maximize the distance.....	14
The LCD & LED indicator.....	15–16
Charging the unit.....	16–17
How to pair the Transmitter and Receiver Collar... ..	18
How to use the Test Light.....	19
<b>Training Guide/General Tips</b> .....	20
<b>Frequently Asked Questions</b> .....	21
<b>Troubleshooting</b> .....	22
<b>Warranty and Repair Information</b> .....	23–26
<b>Reference Size for Difference Dogs</b> .....	27
<b>Reference Weight for Dogs</b> .....	27

## Components

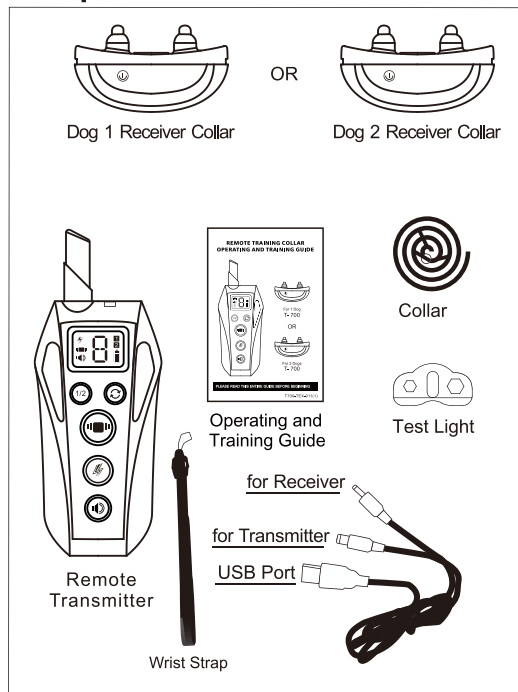



## Other Items You May Need

- Screwdriver
- Scissors
- Lighter

## Main Features

- 3** Vibration, Shock and Tone
- 0-8 Adjustable Intensity Levels for Vibration and Shock**
- IPX7 Waterproof Receiver Collar and IPX5 Waterproof Transmitter**
- 2-hour Rapid Charging Lithium Polymer Battery**
- 600M Remote Training Range**
- User Expandable to a Two-dog System**
- Backlit LCD Display Shows Intensity Level, Battery and Dog 1/2**
  
## Overview

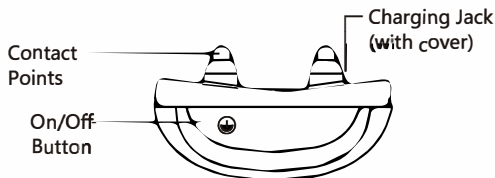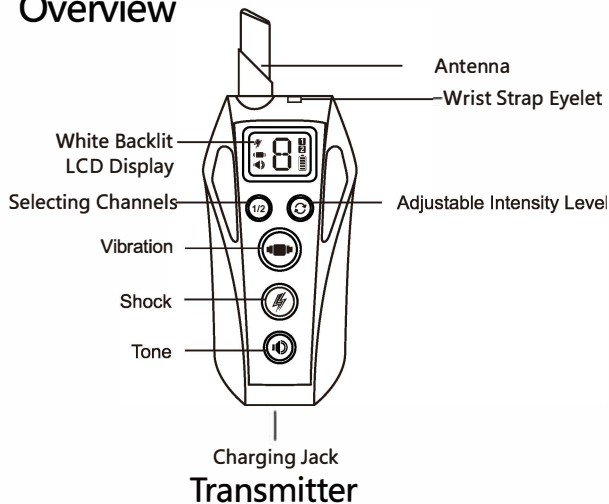

**Receiver Collar**


## Operating Guide

### Step 1 How to turn the T700 on/off

#### To turn the Transmitter on

1. Press any button to activate the Transmitter. The backlight on.
2. Backlight will stay for about 10 seconds. if no operation then, backlight off.
3. LCD display will stay for about 60 seconds. if no operation then, LCD display shuts off.

#### To turn the Receiver Collar on

 
1. Touch the receiver  switch button lightly and the light will turn on with a sound.
2. After the receiver starts up, the indicator light flashes on every 10 seconds, indicating the receiver is ready to receive the action instructions of the transmitter.
3. If there is no command received one minute later, the receiver will automatically go into hibernation state, which can be awakened by remote control signal.

#### To turn the Receiver Collar off

Press the On/Off Button two times, the indicator light is on and then let go, and the receiver will turn off after two beep.

**Note:** To extend the life of the batteries, turn the Receiver Collar off when it is not in use,

## Step 2 How the Transmitter buttons work

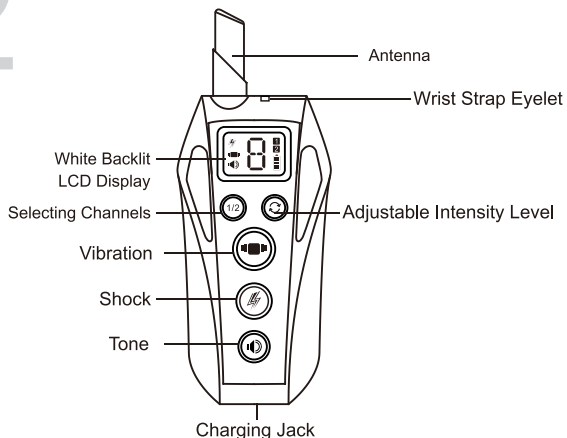

1. Short press once to send a vibration, shock, tone command to Receiver Collar.

2. Press and hold for more than ten seconds will enter the timeout state, the instruction will not be sent within 5 seconds after timeout or if the button is not released.

Note: Do not suggest to press and hold for long time to avoid physical or psychological hurt to the dog.

### Dog 1/2 Button

1. Press once to switch between Dog 1 and Dog 2, and you can pick both 1 and 2. Two dogs can be controlled at the same time, for example, they fight or foul at the same time.

2. Press the Vibration button, and press " " to adjust Vibration Level from 0-8.

 
3. Press the Shock button, and press " " to adjust Shock Level from 0-8.

## Step 3 Collar fitting

3

The Receiver/Collar should be fitted so that the surgical stainless steel contact points press firmly against the dog's skin. When properly fitted, you should be able to fit a finger or two snugly in between the collar and your dog's skin. When properly fitted, the Receiver/Collar should not move on the dog. The best location for the Receiver/Collar box is either side of the dog's windpipe.

A loose fit can allow the Receiver/Collar to move around on the dog's neck. When this happens, the contact points may rub the skin and cause irritation. If the Receiver/Collar is too tight, the dogs may have difficulty in breathing.

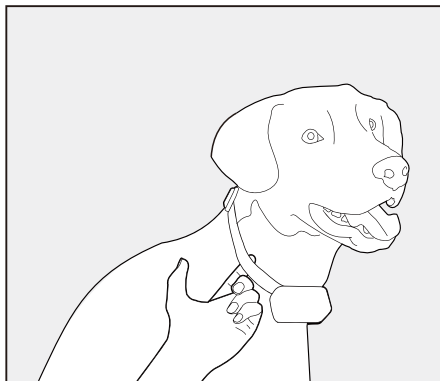

## Step 4 How to find the best Vibration/Shock Level

4

The unit comes with ☺ button to control the Vibration/Shock Level, with Level 0 being the lowest level for Both Vibration and Shock, Level 8 being the highest for Vibration and Shock.

 
The level of Vibration/Shock best suited for your dog depends on your dog's temperament and threshold for Vibration/Shock. Always start at the lowest level and work your way up.

The appropriate level can be found when the dog responds to the Vibration/Shock with a mild reaction, such as a tensing of the neck muscles. The Vibration/Shock Level may vary depending on the training situation. When highly distracted, dogs will require a higher level of Vibration/Shock.

## Step 5 To maximize the distance

5

The unit has a 600 meters range. The range may vary depending on the way the Transmitter is held. Hold the Transmitter away from your body to receive the greatest range. For maximum signal strength, keep the device properly charged.

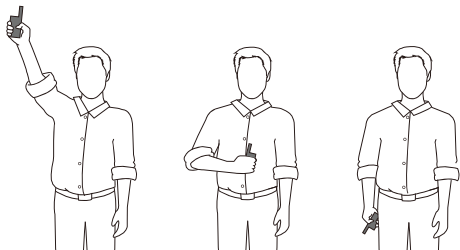





Maximum range    Typical range    Minimum range




\*Avoid touching the antenna or the range may decrease substantially.

## Step 6 The LCD & LED indicator

6

	Indicates Vibration levels ranging from 0-8, and appears in the middle left.
	Indicates Shock levels ranging from 0-8, and appears in the top left.
	Indicates the active dog receiver and appear in the top right.
	Indicates battery's power level and appear in the bottom right. Note: The battery indicator will flash every second to indicate low battery.

### Transmitter LED Indicator Light – Function

Button	Button Function
	Delivers audible tone to collar
	Delivers vibration to collar base on current level shown on Digital Display (vibration will time-out if pressed continuously for 10 seconds and will reset after release the VIBRA button)
	Delivers shock to collar base on current level shown on Digital Display (shock will time-out if pressed continuously for 10 seconds and will reset after release the SHOCK button)



## Receiver Indicator Light – Function and Response

Receiver Collar Function	Blue LED Response
Power on	Flashes once
Battery level indicator	Battery indicating bar flashing when charging
Normal operation - Good battery	1 flash every 10 seconds
Training tone	On length of TONE button press
In pairing position	Flashes once every second within 6 seconds
Pairing Complete	Flashes rapidly for 3 times
Charging Complete	On length of the charger connected

Receiver Collar Function	Blue LED Response
Power off	Flashes twice
Normal operation -Low battery	Flashes rapidly
Vibration/Shock	On length of VIBRA/SHOCK button press
Charging	On length of charging within 2-3 hours

## Step 7 Charging the unit

The unit uses Lithium-Polymer batteries.

1. Charge the unit before using the unit for the first time.
2. Do not charge the unit near any flammable substances.
3. Fully charge if the unit is to be stored without use for a period of 3 months or more.

## Transmitter Charging Procedure

NOTE: The unit has a partial charge when it leaves our facility, upon receipt of the collar, be sure to give it a 3-hour initial charge before the first use.

1. Plug the charger into a 220V standard socket or wall outlet.
2. Lift the rubber covers protecting the Transmitter/Receiver Collar Charging Jack.
3. Connect the charger connectors to the Transmitter and Receiver Collar Charging Jack.
4. Connect the USB port to the Charging Adapter.
5. Charge the unit for 3 hours for the first charge. Recharges take only 1.5-2 hours.

Note: During the charging process, the LCD battery box of the transmitter will scroll and display, 5 grids of which are fully charged. After the battery is fully charged, the LCD battery box of the transmitter will display 5 grids of full power statically, and then turn off the screen.

6. When charging is completed, remove the charger connector.

## Receiver Charging Procedure

1. Insert the DC5.5 end of the charging line into the receiver charging hole to ensure a good contact.
2. Connect the USB port to the safety charging adapter.
3. Plug the charger into a 220V standard socket or wall outlet.
4. For the first charge, the receiver needs to be charged for about 3 hours, and it only takes 1.5-2 hours to be recharged.

Note: The battery indicating bar is in the form of breathing during charging. Once fully charged, the receiver LED will long time light up and turn off.

## Step 8 How to pair the Remote Transmitter & Receiver Collar

8

If your Receiver Collar does not beep when the TONE Button of the Remote Transmitter is pushed, or if you feel the Receiver Collar is not responding to the Remote Transmitter, follow these steps to pair:

1. With the Receiver Collar off your pet, turn the receiver Collar off. Long press the switch button for around 5 seconds, the indicator light starts flashing, release the switch button, the indicator light starts flashing once per second, flashing will last for 6 seconds, within which pairing should be completed.
2. By pressing channel button on the transmitter, select the channel you are going to use, Dog 1 or Dog 2.
3. Press and hold the TONE, VIBRA or Shock Button of the Remote Transmitter, the receiver makes a long sound, and then enters the corresponding working state with the indicator light flashes, indicating pairing is completed.
4. Press the TONE button, the receiver receives the command and makes a sound.

### Two Dog System


NOTE: If you wish to add another Receiver Collar to the training system, extra Receiver Collars are available where you bought your unit.

### Remote Transmitter

1. Switch Dog1 to Dog2 by pressing and releasing the Dog 1/2 Button.
2. Turn on the Receiver Collar for Dog 2, press any Mode Buttons to verify function.
3. If Dog 2 Receiver Collar does not respond. Pairing may be needed. Repeat steps in How to pair the Remote Transmitter & Receiver Collar above.

## Step 9 How to use the Test Light

9

1. Turn the Receiver Collar on.
  2. Hold the Test Light Contacts to the Contact Points.
  3. Press the SHOCK  Button on the Remote Transmitter.
  4. The Test Light will flash.
- Note: At higher Shock Levels, the Test Light will flash brighter.
5. Turn the Receiver Collar off.

Save the Test Light for future testing.

Note: If the Test Light does not flash, recharge the Receiver and re-test. If Test Light still does not flash, contact us for Customer Service.



# Training Guide

## General Tips

- Eliminate one misbehavior or teach one obedience command at a time. If you move too fast with training, your pet may become confused.
- Be consistent. Correct your pet every time he misbehaves.
- Unless you can supervise him, it is recommended that you restrict your pet from situations in which he has a history of misbehaving. However, setting up a situation as a training session can dramatically improve your chances of success.
- If your pet reacts to the tones by hiding or acting fearful, redirect his attention to a simple and appropriate behavior, such as the "sit" command.
- Pets should be at least 6 months old before using the Training Collar.
- Only let responsible family members use the Training Collar. It is not a toy!
- Other pets in hearing range will be affected by the training tones. Therefore, training sessions should be conducted out of hearing range of other pets.

### **⚠ WARNING**

Never use the Remote Training Collar to correct or eliminate any form of aggressive behavior. We recommend you contact your local veterinarian or professional trainer to determine if your pet might be aggressive. See page 3 for more information.

## Frequently Asked Questions

Is the Vibration/Shock safe for my pet?	While the Vibration/Shock is unpleasant, it is harmless to your pet. Electronic training devices require interaction and training from the owner to achieve desired results.
Once my pet is trained and has been obeying my commands, will he have to continue to wear the Receiver Collar?	Probably not. You may need to reinforce training with the Receiver Collar from time to time.
Is the Receiver Collar waterproof?	Yes.
Will I get exactly 600 meters of range with the Remote Training Collar?	The range of the Remote Training will vary according to terrain, weather, vegetation, as well as transmission from other radio devices. See "To maximize the distance" for tips on maximizing your range.
How long can I continuously deliver Vibration/ Shock to my pet?	The maximum amount of time you can press the Vibration/Shock Button and deliver Vibration/Shock to your pet continuously is 10 seconds. After this, Vibration/Shock cannot be delivered until You release and press the button again.

## Troubleshooting

**My pet does not respond when I press a button.**

- Make sure the Receiver Collar has been turned on.
- If your range has reduced from the first time you used the Remote Training Collar, the battery(s) may be low in either the Remote Transmitter or Receiver Collar.
- Terrain, weather, vegetation, transmission from other radio devices and many other factors can impact the amount of range you have with the unit.
- Test the Receiver Collar. See "How to use the Test Light" for details.
- Increase the Vibration/Shock Level. Refer to "How to find the best Vibration/Shock Level" for more information.
- Make sure the Receiver Collar's Contact Points are placed snugly against your pet's skin. Refer to "Collar fitting" for more information.

**The Receiver Collar will not turn on.**

- Make sure the Receiver Collar has been charged. For the initial charge, be sure to charge it for 3 hours. Subsequent charges only take 1.5-2 hours.

**The Receiver Collar is not responding to the Remote Transmitter.**

- Verify the Receiver Collar is on.
- If the Indicator Light does not come on when any button is pressed on the Transmitter, ensure that the batteries are fully charged.
- If the first two solutions did not resolve your problem, see "How to pair the Remote Transmitter & the Receiver Collar".

## Warranty and repair information

### 1-Year Limited Lifetime Warranty

The original purchaser for this unit is provided with 1-YEAR WARRANTY.

The warranty begins from the date of purchase. For the first year, coverage is for both Parts and Labor on warranty repair services.

Accessories such as chargers, splitter cables, antennas, straps, and batteries are covered for the first year only. After the first year, the Limited Lifetime Warranty covers Parts only and does not cover Labor Fees and Accessories. All shipping fees incurred, the cost of Accessories after the first year, and Labor fees associated with out of warranty repair work, are the customer's responsibility. Labor fees will be variable depending on the extent of the work required. The Limited Lifetime Warranty expires 5 years after a model is discontinued from production.

### To Qualify for the Warranty

All products must provided a proof of purchase is required to initiate repair work under warranty. We strongly recommend keeping the original receipt. If a proof of purchase is not available at the time of service, we will estimate the age of unit by the serial number. Serial number estimates can differ from the actual purchase date. A serial number estimate is the only method of determining an approximate date of purchase without a proof of purchase.

## **Not Covered Under Warranty**

We DO NOT offer warranty for products that have been bought secondhand or as a resold product. We DO NOT replace defective units or provide refunds for products purchased from us after 30 days from the date of purchase.

Issues of replacement and refunds on units purchased less than 30 days from an authorized dealer must be addressed to the dealer directly. If the products purchased from an authorized dealer are after 30 days from the date of purchase, please send the units to us for service and repair. We DO NOT cover the cost of repairs and replacements due to misuse by the owner or dog, improper maintenance, and/or lost units. Any water damage on the Water Resistant Transmitters and the Water Resistant Receivers of our product series will not be covered. All replacement costs for either the transmitter or receiver will be the owner's responsibility.

The warranty is void if the unit has been altered or an unauthorized person has damaged the unit while attempting repair work.

Battery replacement by the customer during the first year of the Limited Lifetime Warranty is not recommended. If the customer chooses to replace the batteries, any damage to the unit during the change-out by the owner will void the warranty. We reserve the right to retain and discard any parts or accessories that have been found damaged upon replacement and repair.

## **Procedure for Repair Work**

If the unit is malfunctioning, please refer to the "Troubleshooting Guide" in the Operating and Training Guide before sending it back for Service.

The cost of shipping products under warranty back is the customer's responsibility. We are not responsible for units damaged or lost in transition. We are not responsible for loss of training time or inconvenience while the unit is in for repair work. We do not provide loaner units or any form of compensation during the repair period.

A copy of the sales receipt showing the purchase date may be required before warranty work is initiated. Please include a brief explanation outlining the problem and include your name, address, city/state/zip code, daytime phone number, evening phone number, and email address.

## **Compliance**

### **FCC - USA**

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

**CAUTION: Modification or changes to this equipment not expressly approved by Shenzhen Wellturn Technology Co.,Ltd may void the user's authority to operate the equipment.**

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a specific installation. If interference does occur to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and the receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult customer care, the dealer, or an experienced radio/TV technician for help.

## Reference Size for Different Dogs

Size	Neck (in)	Chest Measurement (in)	Back Length (in)	Type
Mini	7.8-8.6	9.8-11.8	7.5	Chihuahua, Yorkshire Terrier
Small	7.8-9.5	11.4-14.2	9	Chihuahua, Yorkshire Terrier Poodle, Pomeranian
Medium	9-11	13.7-16.5	11	Maltese Dog, Shih Tzu
Large	10.6-12.2	16.2-18.5	12.2	Miniature Schnauzer, Pekingese
Large	11.8-13.4	18.1-20.8	13.8	Schnauzer, English Cocker Spaniel
Large	13-14.5	20.5-23.2	15.7	Beagle
Huge	17-18.9	30-33	23.6	Husky
	18.5-20.5	34.6-38.2	25.6	Labrador Retriever
	21.6-24.4	36.2-39.3	27.5	Golden Retriever, Old English Sheepdog

## Reference Weight for Dogs

Large Dog (Body height above 24 inch, Weight above 88 lbs)

Medium Dog (Height 16-24 inch, Weight 24.2-66 lbs)

Small Dog (Height 10-16 inch, Weight 8.8-22 lbs)

Mini Dog (Height under 10 inch, Weight under 8.8 lbs)