 


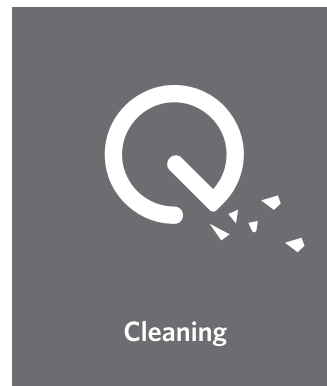

For FAQs and more information, please visit:

www.eufylife.com



Handheld Vacuum Cleaner

Owner's Manual

Manual del propietario

T2520 51005001908 V01

Table of Contents

- 01 Important Safety Instructions**
- 11 What's in the Box**
- 12 Charging**
- 14 Vacuuming**
- 16 Using the Ozone Purification Function**
- 17 Cleaning and Maintenance**
- 19 Specifications**
- 20 Customer Service**

Thank you for purchasing the handheld vacuum cleaner. Carefully read all instructions before using this product, and keep this manual for future reference.

Important Safety Instructions

When using an electrical appliance, you should always follow these basic precautions.

READ ALL INSTRUCTIONS BEFORE USING YOUR VACUUM CLEANER

WARNING - TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:



- Do not store this appliance in a car.
- Do not use or store this appliance in an environment with a high temperature, as it may damage the device or cause battery explosion.

- Fully assemble before operating.
- Intended for household use only.
- Do not use outdoors or on wet surfaces.
- Do not leave the vacuum cleaner unattended when it is plugged in. Unplug it to an outlet when you are not using it and before servicing.

- Do not allow to be used as a toy. Close attention is necessary when used by or near children.
- Use only as described in this manual. Use only manufacturer recommended attachments.
- Do not use with a damaged cord or plug. If the appliance is not working as it should, or has been dropped, damaged, or submerged in water, contact our customer service for advice.
- Do not handle the plug or appliance with wet hands.
- Do not unplug the adapter by pulling on the cord. To unplug, grasp the plug, not the cord.
- Do not pull the cord around sharp edges or corners. Do not run the appliance over the cord. Keep the cord away from heated surfaces.
- Do not put any object into openings or vents. Do not use if any opening is blocked. Keep free of dust, lint, hair, and anything else that may reduce airflow.
- Keep hair, loose clothing, fingers, and other body parts away from openings and moving parts.
- Turn off all controls before unplugging.
- Use extra care when cleaning on stairs.
- Do not carry the appliance with your finger on the power switch, doing so may cause accidents.
- Do not use to pick up flammable or combustible liquids, such as gasoline, or use in areas where they may be present.

- Do not pick up anything that is burning or smoking, such as cigarettes, matches, or hot ashes.
- Do not pick up hard or sharp objects such as glass, nails, screws, coins, etc.
- Do not use without the dust collector and/or filters in place.
- Store your vacuum cleaner indoors, in a cool and dry area.
- Do not attempt to repair or disassemble the appliance. There are no user-serviceable parts inside. Repair or service must be performed by a qualified repairman and only identical replacement parts can be used. This will ensure the safety of the appliance.
- Children should be supervised to ensure that they do not play with the vacuum.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be done by children without supervision.
- This appliance includes a rechargeable lithium-ion battery pack. Do not expose the battery pack or appliance to fire or excessive temperature (above 130°C), as it may catch fire and/or explode.
- Do not use a damaged or modified battery pack, as it may catch fire and/or explode.

- Usage and storage of the appliance should be within the ambient temperature range of 0-40°C.
- The charging speed may become slower in environments with temperatures below 10°C, which is a common phenomenon.
- Follow all the charging instructions and do not charge the battery pack out of the temperature range specified in the instructions, otherwise, it may damage the battery and increase the risk of fire.
- Do not attempt to disassemble the battery pack.
- The battery must be removed from the device before the device is disposed of.
- The device must be disconnected from the mains supply when removing the battery.
- The used battery should be placed in a sealed plastic bag and disposed of safely according to local environmental regulations.
- Leaks from battery cells can occur under extreme conditions. If any liquid gets on the skin, wash quickly with soap and water. If any liquid gets into the eyes, do not rub eyes, immediately flush them with clean water continuously for a minimum of 15 minutes. Seek medical attention immediately.

SAVE THESE INSTRUCTIONS



This symbol on the device or its packaging indicates:

Do not dispose of electrical appliances as unsorted municipal waste; use separate collection facilities. Contact your local authority for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obliged to take back your old appliance for disposal at least free of charge.

FCC Statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: (1) Reorient or relocate the receiving antenna. (2) Increase the separation between the equipment and receiver. (3) Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. (4) Consult the dealer or an experienced radio / TV technician for help.

The following importer is the responsible party (for FCC matters only).

Company Name: POWER MOBILE LIFE, LLC
Address: 400 108th Ave NE Ste 400, Bellevue, WA 98004-5541
Telephone: 1-206-383-8247

ISED Compliance Statement

This device contains licence-exempt transmitter(s)/ receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Declaration of Conformity

Hereby, Anker Innovations Limited declares that the product type T2520 is in compliance with Directives 2014/35/EU & 2014/30/EU.

The full text of the EU declaration of conformity is available at the following internet address:

<https://www.eufylife.com/>

Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong

AUSTRALIA & NEW ZEALAND WARRANTY

This document details the terms and conditions of the warranty provided with this product.

Please disregard any other representations contained on this product's packaging or provided with this product, which constitute or appear to constitute a warranty.

Subject to the exclusions and limitations set out below, we warrant to you that if you purchase a product directly from us, or, from any of our authorized resellers, that it will not contain defects which are a result of faulty manufacturer workmanship or materials. This warranty subsists for 24 months from the date of purchase. This warranty is provided in addition to your rights under the Australian & New Zealand Consumer Law.

Subject to any rights you have under the Australian & New Zealand Consumer Law, we will not be liable for defects which

are a result of damage or loss caused by factors beyond our control, any product which has not been maintained according to any care or maintenance instructions provided with the product, any alterations to a product which are not performed by us, or damage or defects caused to the product due to unusual or non-recommended use. We will not be liable for any special, indirect, consequential or economic loss or damage or loss of profits whatsoever suffered by you or any other person resulting from any act or omission by us. Our total liability in respect of this Warranty against Defects is limited to the replacement of the goods.

This Warranty against Defects is provided in addition to other rights and remedies that you may have at law. Our goods come with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any reasonably foreseeable loss or damage. You are also entitled to have the goods repaired or replaced if the goods fail to be of acceptable quality and the failure does not amount to a major failure.

 
In order to claim the warranty, you must return the product to the retailer from which it was purchased or if that retailer is part of a National network, a store within that chain, along with satisfactory proof of purchase. The retailer will then return the goods to Directed Electronics Australia authorized by Anker Innovations Limited. Directed Electronics Australia will repair,

replace or refurbish the product at its discretion. The retailer will contact you when the product is ready for collection. All costs involved in claiming this warranty, including the cost of the retailer sending the product to Directed Electronics Australia, will be borne by you.

This warranty is offered by Directed Electronics Australia.

Customer service support number (+61) 3 8331 4800 Mon-Fri 8:30am - 5:00pm (AEST) and customer service email address support@myanker.com.au.

What's in the Box

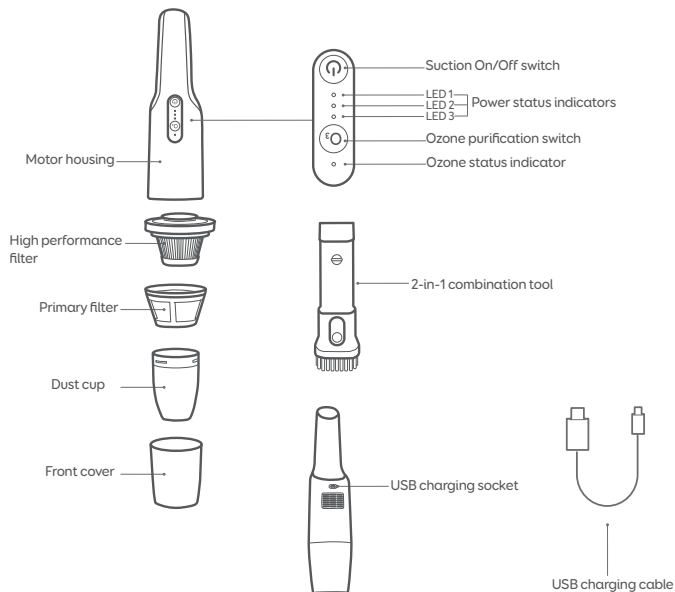


Charging

The vacuum cleaner is powered by the built-in lithium battery. Before first use, charge the battery for more than 2.5 hours.



 - The vacuum cleaner cannot work while charging.
- The vacuum cleaner cannot be charged when the ambient temperature is above 40°C.
- It is not recommended to charge through a USB socket on a computer, as it cannot provide enough charging current.

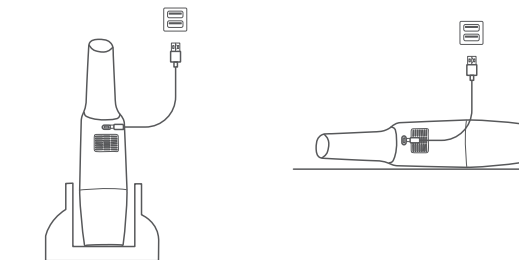

1. Place the vacuum cleaner on a flat surface.
2. Charge the vacuum cleaner with the supplied USB cable through the USB charging socket.

Lights During Charging

 LED 1: flashing white Charging, low battery	 LED 1 & 2: solid white LED 3: flashing white Charging, nearly full
 LED 1: solid white LED 2: flashing white Charging, medium battery	 LED 1 & 2 & 3: solid white, then off after 90 seconds Fully charged

Lights During Vacuuming

 LED 1 & 2 & 3: solid white High battery level	 LED 1: solid white Low battery level
 LED 1 & 2: solid white Medium battery level	 LED 1: flashing white for 5 times, then off Empty, needs charging

Lights When Experiencing Issues

 LED 1 & 2 & 3: slowly flashing white for 7 times, then off	High temperature during discharging
 LED 1 & 2 & 3: quickly flashing white for 11 times, then off	Motor fault

 
Vacuuming




Before use, make sure that

- the battery is fully charged.
- the dust cup and filters are cleaned, dried, and fixed in place.
- the power status indicators are white.


1. Hold the cleaner in hand, and pull out the front cover.

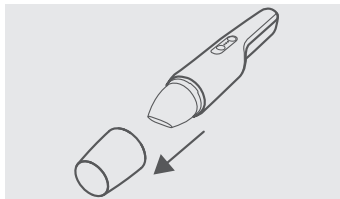

 2. To clean dust and garbage adhering to corners, crevices and other places, insert the 2-in-1 combination tool into the dust cup.

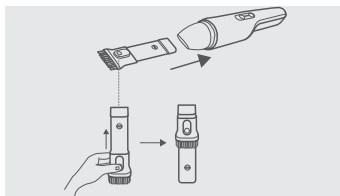

 3. Press  to start vacuuming.
• To turn off, press  again.

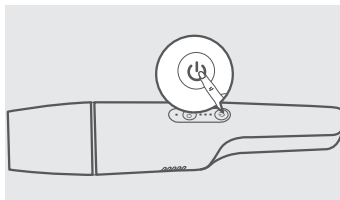


Do not use to clean up water.

Using the Ozone Purification Function




- The ozone purification function should be used in a sealed space without human beings or livestock.
- The dust suction and ozone purification function can not work at the same time.

 1. Install the front cover and place the vacuum cleaner on a flat surface.

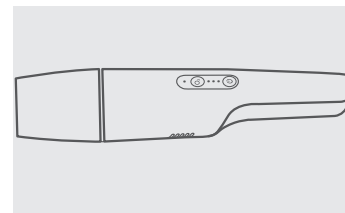


2. Press  twice to start ozone purification. At full power, ozone purification can work about 15 times.

 → The vacuum cleaner will automatically stop ozone purification after 20 minutes.

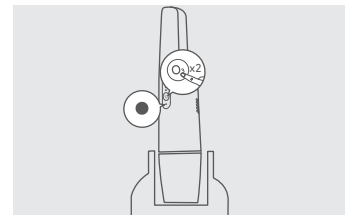


Light During Ozone Purification Mode

 	Working
Solid blue	
	Not working
Off	
	Error alert
Flashing blue for 7 times, then off	


Cleaning and Maintenance

 1. Remove the front cover and other accessories.

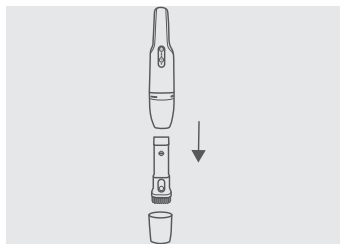


17

 
2. Remove the high performance filter and primary filter from the dust cup.

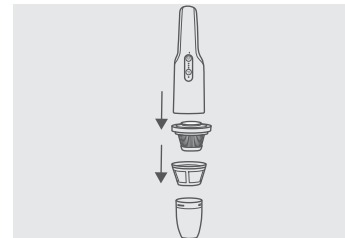

 3. Empty the dust cup.

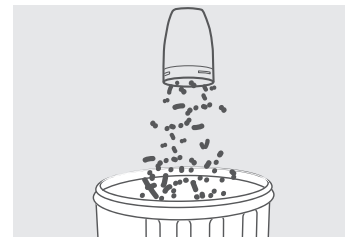


 4. Wash the filters and dust cup. Air-dry them completely before next use. Do not wash the motor housing and other parts.

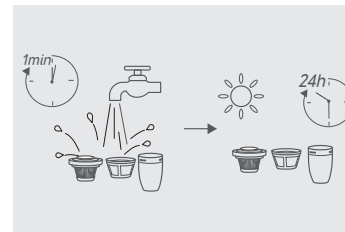

18

 5. Reassemble the filters and dust cup before next use.

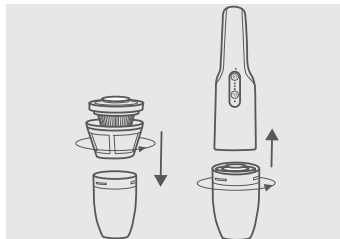

HomeVac Part	Cleaning Frequency	Replacement Frequency
Dust Cup	After each use	-
Filter	Once every week (Twice a week if you have a pet)	Every 6 months or after every 50 rounds of cleaning

Specifications

Model	T2520
Charging Input	5V $\overline{\text{---}}$ 2A
Rated Power	70W
Max Running Time	13 minutes
Charging Time	2.5 ~ 3.5 hours

Customer Service

For FAQs and more information, please visit www.eufylife.com.

✉ Email: support@eufylife.com

💬 Live Chat: www.eufylife.com

☎ Customer service hotline:

(US) +1 (800) 988 7973 Mon-Fri 9:00am - 5:00pm (PT)

(UK) +44 (0) 1604 936200 Mon-Fri 6:00 - 11:00 (GMT)

(DE) +49 (0) 69 9579 7960 Mo-Fr 6:00 - 11:00

(AU) (+61) 3 8331 4800 (AUS) Mon-Fri 9:00 - 17:00 (AEST)

(中国) +86 400 0550 036 周一至周五 9:00 - 17:30

(日本) +81 03 4455 7823 月-金 9:00 - 17:00

📘 @EufyOfficial 🐦 @EufyOfficial

📷 @EufyOfficial 📌 @EufyOfficial

Tabla de contenidos

- 22 Instrucciones de seguridad importantes
- 27 Contenido de la caja
- 28 Carga en curso
- 30 Aspiración
- 32 Uso del modo de purificación de ozono
- 33 Limpieza y mantenimiento
- 35 Especificaciones
- 36 Servicio de atención al cliente

Gracias por la compra de esta aspiradora de mano. Lea detenidamente todas las instrucciones antes de utilizar este producto y conserve este manual para referencia futura.

Instrucciones de seguridad importantes

Respete estas precauciones básicas siempre que utilice un aparato eléctrico.

LEA TODAS LAS INSTRUCCIONES
ANTES DE UTILIZAR LA ASPIRADORA

ADVERTENCIA. PARA REDUCIR EL
RIESGO DE INCENDIO, DESCARGA
ELÉCTRICA O LESIONES:



- No almacene este dispositivo en un coche.
 - No utilice ni almacene este dispositivo en entornos con temperaturas elevadas, ya que podría provocar daños en el dispositivo o la explosión de la batería.
- Supervise a los niños para garantizar que no jueguen con la aspiradora.

- Esta aspiradora la pueden utilizar niños a partir de 8 años y personas con facultades físicas, sensoriales o mentales reducidas, así como con falta de experiencia y conocimientos, si se les ha proporcionado supervisión o instrucciones acerca del uso de la aspiradora de forma segura y entienden los riesgos involucrados. No permita que los niños jueguen con la aspiradora. No permita que los niños realicen la limpieza y el mantenimiento sin supervisión.
- Antes de desechar el dispositivo, se debe extraer la batería.
- El dispositivo se debe desconectar del suministro eléctrico cuando se vaya a extraer la batería.
- La batería usada se debe colocar en una bolsa de plástico sellada y se debe desechar de forma segura y de conformidad con las normativas ambientales locales.
- La aspiradora se debe montar por completo antes del uso.
- Previsto únicamente para uso doméstico.
- No utilice la aspiradora en exteriores ni sobre superficies mojadas.
- No deje la aspiradora sin supervisión cuando esté conectada al suministro eléctrico. Desconéctela de la toma de corriente cuando no vaya a utilizarla y antes de realizar las tareas de mantenimiento.
- No permita el uso de la aspiradora como un juguete. Se requiere supervisión atenta tanto si los niños utilizan la aspiradora como si se utiliza cerca de ellos.
- Utilice la aspiradora según las instrucciones descritas en este manual. Utilice únicamente los accesorios recomendados por el fabricante.
- No utilice la aspiradora si el cable o el enchufe están dañados. Si

la aspiradora no funciona como debería, se ha caído, ha sufrido algún daño o se ha sumergido en agua, póngase en contacto con el servicio de atención al cliente para obtener asistencia.

- No toque el enchufe ni el dispositivo con las manos mojadas.
- No desenchufe la aspiradora tirando del cable. Para desenchufarla, tire del enchufe, no del cable.
- No tire del cable cerca de bordes o esquinas afiladas. No pase la aspiradora por encima del cable. Mantenga el cable alejado de superficies calientes.
- No coloque ningún objeto en las aberturas o salidas de aire. No utilice la aspiradora si alguna de las aberturas está bloqueada. Manténgalas libres de polvo, pelusas, cabello y cualquier otra cosa que pueda reducir el flujo de aire.
- Mantenga el cabello, la ropa suelta, los dedos y otras partes del cuerpo alejados de las aberturas y las piezas móviles.
- Apague todos los controles antes de desenchufar el dispositivo.
- Extreme la precaución al utilizar la aspiradora en escaleras.
- No transporte la aspiradora con el dedo sobre el interruptor de encendido, ya que esto podría provocar un accidente.
- No utilice la aspiradora para recoger líquidos inflamables o combustibles, como gasolina, ni en lugares donde haya presencia de dichos líquidos.
- No utilice la aspiradora para recoger objetos que estén ardiendo o que echen humo, como colillas de cigarrillos, cerillas o cenizas calientes.
- No utilice la aspiradora para recoger objetos duros o afilados, como vidrio, clavos, tornillos, monedas, etc.
- No utilice la aspiradora sin el depósito de polvo o los filtros instalados.
- Guarde la aspiradora en un lugar interior, fresco y seco.

- No intente reparar ni desmontar la aspiradora. No contiene piezas que el usuario pueda reparar. Un técnico cualificado debe encargarse de realizar las tareas de reparación o mantenimiento, y deberá utilizar únicamente piezas de repuesto idénticas. Esto garantizará que se mantenga la seguridad de la aspiradora.
- La aspiradora está equipada con una batería recargable de iones de litio. No exponga la batería ni el dispositivo al fuego o a temperaturas excesivas (superiores a 130 °C), ya que podrían incendiarse o explotar.
- No utilice una batería dañada o modificada, ya que podría incendiarse o explotar.
- Utilice y almacene la aspiradora en un rango de temperatura ambiente de 0 a 40 °C.
- La velocidad de carga puede verse reducida en entornos con temperaturas inferiores a 10 °C, lo que es un fenómeno común.
- Respete todas las instrucciones de carga y no cargue la batería fuera del rango de temperatura especificado en las instrucciones; de lo contrario, la batería podría sufrir daños y aumentar el riesgo de incendio.
- No intente desmontar la batería.
- En condiciones extremas, es posible que se produzcan fugas de las celdas de la batería. Si algún líquido entra en contacto con la piel, lávese rápidamente con agua y jabón. Si el líquido entra en contacto con los ojos, no los frote; enjuáguelos con agua limpia inmediatamente y continúe durante 15 minutos como mínimo. Busque atención médica inmediatamente.

CONSERVE ESTAS INSTRUCCIONES



Este símbolo en el dispositivo o en su embalaje indica lo siguiente:

No deseche los aparatos eléctricos como residuos urbanos sin clasificar; utilice instalaciones de recogida independientes. Póngase en contacto con las autoridades locales para obtener información acerca de los sistemas de recogida disponibles. Si se desechan dispositivos eléctricos en vertederos o basureros, pueden filtrarse sustancias peligrosas hasta las aguas subterráneas y llegar a la cadena alimenticia, lo que supondría un daño para su salud y bienestar. Al cambiar dispositivos antiguos por nuevos, el minorista tiene la obligación legal de recuperar el dispositivo antiguo para su eliminación, sin cargo alguno.

Declaración de conformidad


Por la presente, Anker Innovations Limited declara que el producto tipo T2520 cumple con las Directivas 2014/35/EU y 2014/30/EU.

El texto completo de la declaración de conformidad de la UE está disponible en la siguiente dirección de Internet:
<https://www.eufylife.com/>

Anker Innovations Limited

Room 1318-19, Hollywood Plaza, 610 Nathan Road, Mongkok, Kowloon, Hong Kong

 Contenido de la caja

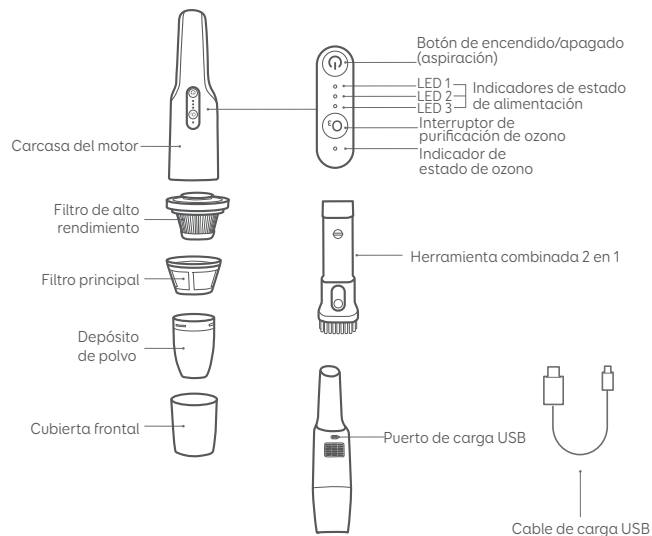


Carga en curso

La aspiradora recibe alimentación de la batería de litio integrada. Antes del primer uso, cargue la batería durante dos horas y media como mínimo.



 - La aspiradora no se puede utilizar durante la carga.
- La aspiradora no se puede cargar cuando la temperatura ambiente supere los 40 °C.
- No se recomienda cargar la aspiradora a través del puerto USB de un ordenador, ya que la corriente de carga suministrada no será suficiente.

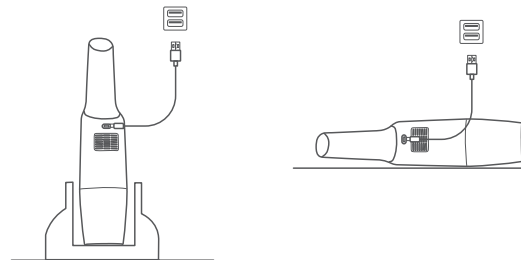

- 1..Coloque la aspiradora sobre una superficie plana.
- 2..Para cargar la aspiradora, utilice el cable USB suministrado y enchúfelo al puerto de carga USB.

Indicadores luminosos durante la carga

 LED 1: blanco intermitente carga en curso, batería baja	 LED 1 y 2: blanco fijo LED 3: blanco intermitente carga en curso, casi completa
 LED 1: blanco fijo LED 2: blanco intermitente carga en curso, batería media	 LED 1, 2 y 3: blanco fijo, luego se apaga 90 segundos después Carga completa

Indicadores luminosos durante el uso

 LED 1, 2 y 3: blanco fijo Nivel de batería alto	 LED 1: blanco fijo Nivel de batería bajo
 LED 1 y 2: blanco fijo Nivel de batería medio	 LED 1: blanco intermitente 5 veces, luego se apaga Batería baja, requiere carga

Indicadores luminosos cuando se produce un problema

 LED 1, 2 y 3: blanco intermitente lento 7 veces, luego se apaga Temperatura elevada durante la descarga
 LED 1, 2 y 3: blanco intermitente rápido 11 veces, luego se apaga Error en el motor

 
Aspiración




Antes del uso, asegúrese de que:

- La batería esté totalmente cargada.
- El depósito de polvo y los filtros estén limpios, secos e instalados en su lugar.
- Los indicadores de estado de alimentación estén iluminados en color blanco.

1. Sujete la aspiradora con la mano y retire la cubierta frontal.

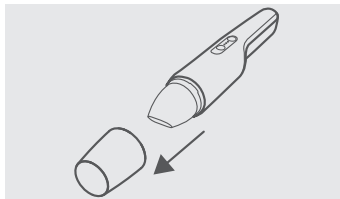


 2. Para limpiar el polvo y la suciedad adheridos a las esquinas, grietas y otros lugares de difícil acceso, inserte la herramienta combinada 2 en 1 en el depósito de polvo.

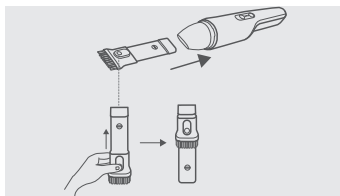

3. Pulse  para empezar a limpiar.

 - Para apagar la aspiradora, vuelva a pulsar .

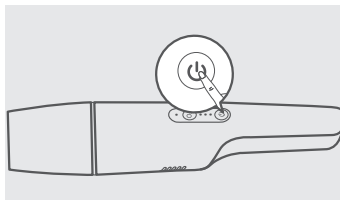


No utilice la aspiradora para recoger agua.

Uso del modo de purificación de ozono




- El modo de purificación de ozono se debe utilizar en un espacio sellado en el que no haya personas ni animales.
- La función de aspiración de polvo y el modo de purificación de ozono no se puede utilizar al mismo tiempo.

 1. Instale la cubierta frontal y coloque la aspiradora sobre una superficie plana.

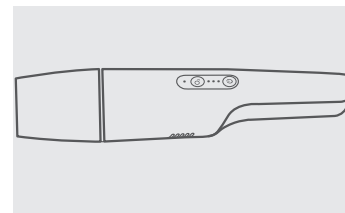

2. Pulse  para iniciar la purificación de ozono. La purificación de ozono se puede ejecutar unas 15 veces a máxima potencia.

 → La aspiradora detendrá la purificación de ozono automáticamente después de 20 minutos.

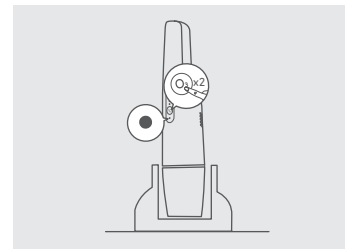

Indicadores luminosos durante el modo de purificación de ozono



 
Azul fijo

En funcionamiento



APAGADO

Desactivado




Azul intermitente 7 veces,
luego se apaga

Alerta de error


Limpieza y mantenimiento

 1.Retire la cubierta frontal y
otros accesorios.

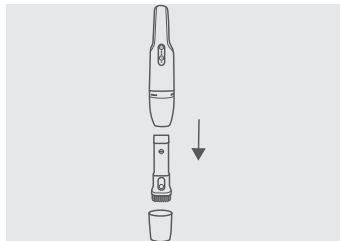


33

 
2.Retire el filtro de alto
rendimiento y el filtro
principal del depósito de
polvo.

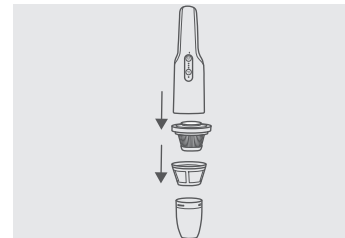

 3.Vacíe el depósito de polvo.

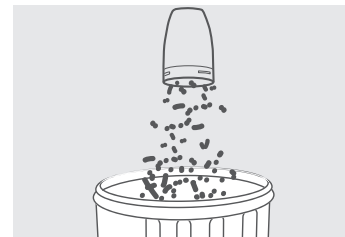


 4.Lave los filtros y el depósito
de polvo. Permita que se
sequen por completo antes
de volver a utilizarlos. No lave
la carcasa del motor ni otras
piezas.

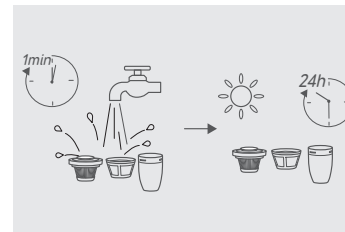

34

 5. Vuelva a instalar los filtros y el depósito de polvo antes del próximo uso.

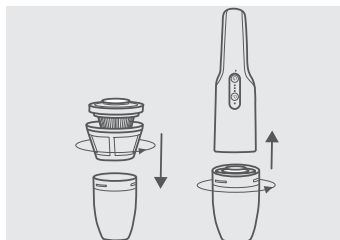

Pieza del HomeVac	Frecuencia de limpieza	Frecuencia de sustitución
Depósito de polvo	Después de cada uso	-
Filtro	Una vez por semana (Dos veces por semana si hay mascotas)	Cada 6 meses o tras 50 ciclos de limpieza

Especificaciones

Modelo	T2520
Entrada de carga	5 V  2 A
Potencia nominal	70 W
Tiempo de funcionamiento máximo	13 minutos
Tiempo de carga	2,5-3,5 horas

35

Servicio de atención al cliente

Para acceder a las preguntas frecuentes y obtener más información, visite www.eufylife.com.

✉ Correo electrónico: support@eufylife.com

💬 Chat en tiempo real: www.eufylife.com



(US) +1 (800) 988 7973 Mon-Fri 9:00am - 5:00pm (PT)

(UK) +44 (0) 1604 936200 Mon-Fri 6:00 - 11:00 (GMT)

(DE) +49 (0) 69 9579 7960 Mo-Fr 6:00 - 11:00

(AU) (+61) 3 8331 4800 (AUS) Mon-Fri 9:00 - 17:00 (AEST)

(中国) +86 400 0550 036 周一至周五 9:00 - 17:30

(日本) +81 03 4455 7823 月-金 9:00 - 17:00



@EufyOfficial



@EufyOfficial



@EufyOfficial



@EufyOfficial

36