 

# **Graveyard Cat Scratcher**



Step 1

Remove middle protective film from double-sided tape of Front Panel (B). Connect Scratch Board (A) and Front Panel (B) as shown below.

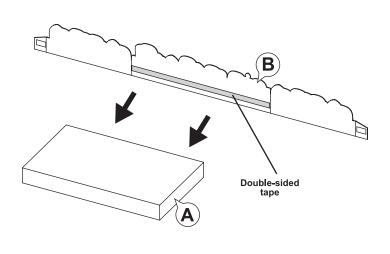


#### Step 2


Remove both small protective films from double-sided tape of Front Panel (B). Fold Front Panel (B) and connect to Scratch Board (A) as shown below.

DISNEP

F x 2 (23047)

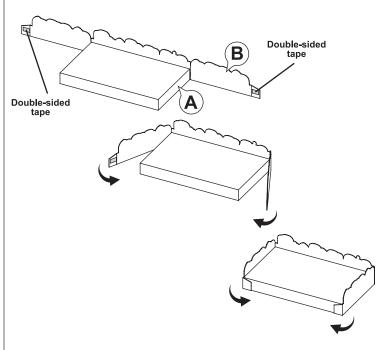


Step 3 Fold Brace (D) as pictured below

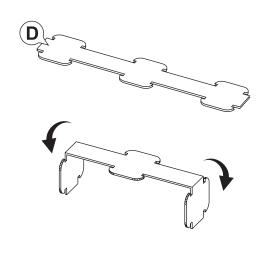

### Step 4


Connect Characters (C), Brace (D) and Back (E) as pictured below. Note that the double sided tape should be facing inward on Back (E).

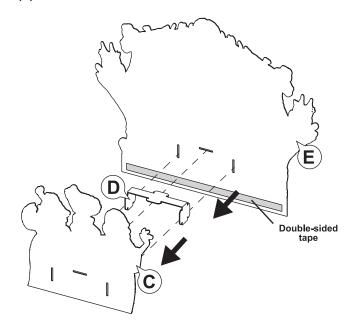

©Disney disney.com




**Step 5**Remove protective film from double-sided tape of **Back (E)**. Connect to **Scratch Board (A)** as shown below.

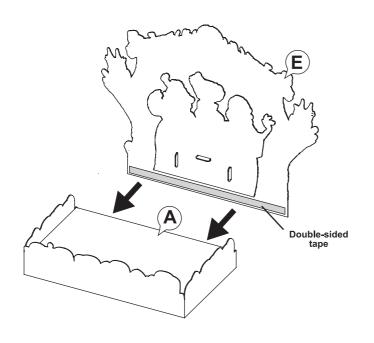


#### Step 6

Reinforce connections by placing **Clear Stickers (F)** over the back connections as shown.

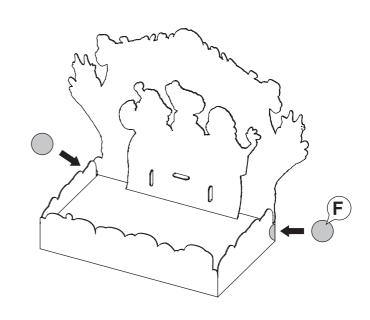

## **Completed Item**

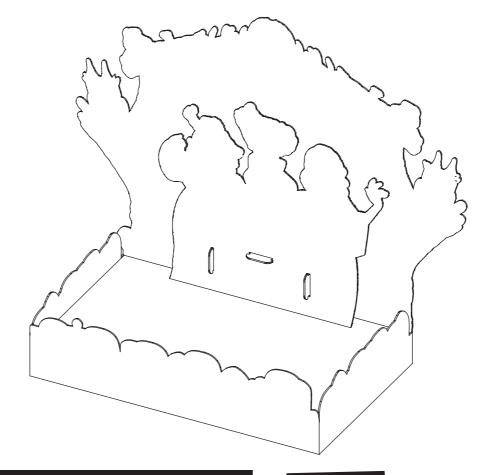



Because every cat is different, it is important to monitor your cat's behavior with this product. If at any time your cat damages this item, or any portion of this item becomes damaged, remove the damaged portion or discontinue use of the product.

#### **QUESTIONS?**

CALL OUR FRIENDLY CUSTOMER SERVICE TEAM ANYTIME. WE'RE HERE 24/7! 1-800-67-CHEWY (672-4399)

©Disney disney.com