

frisco[®]
by **chewy**



Wooden Outdoor Chicken Run Instruction Manual

SKU# 541478

FOR CHICKEN USE ONLY.

Assembly Instructions


Please Read Through All Instructions Before Starting

Before Assembly


You'll need a Phillips Head Screwdriver (not included) to complete the assembly.
This item has predrilled holes to make set up easier.

Parts Included

Prior to assembly, please be sure to identify and sort all parts shown below.

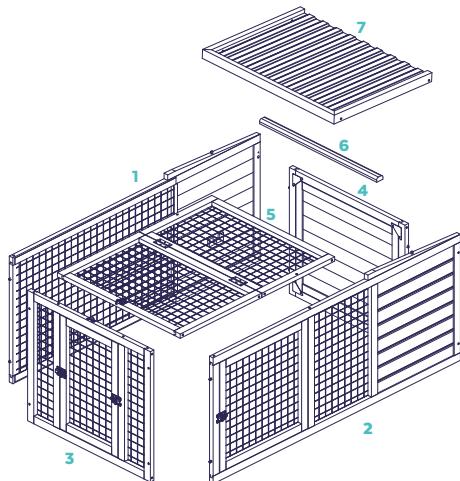


A	3.5mm x 40mm Nut and Bolt	14PCS
B	3.0mm x 16mm Screw	8PCS
C	Washer	4PCS
D	Connector	2PCS

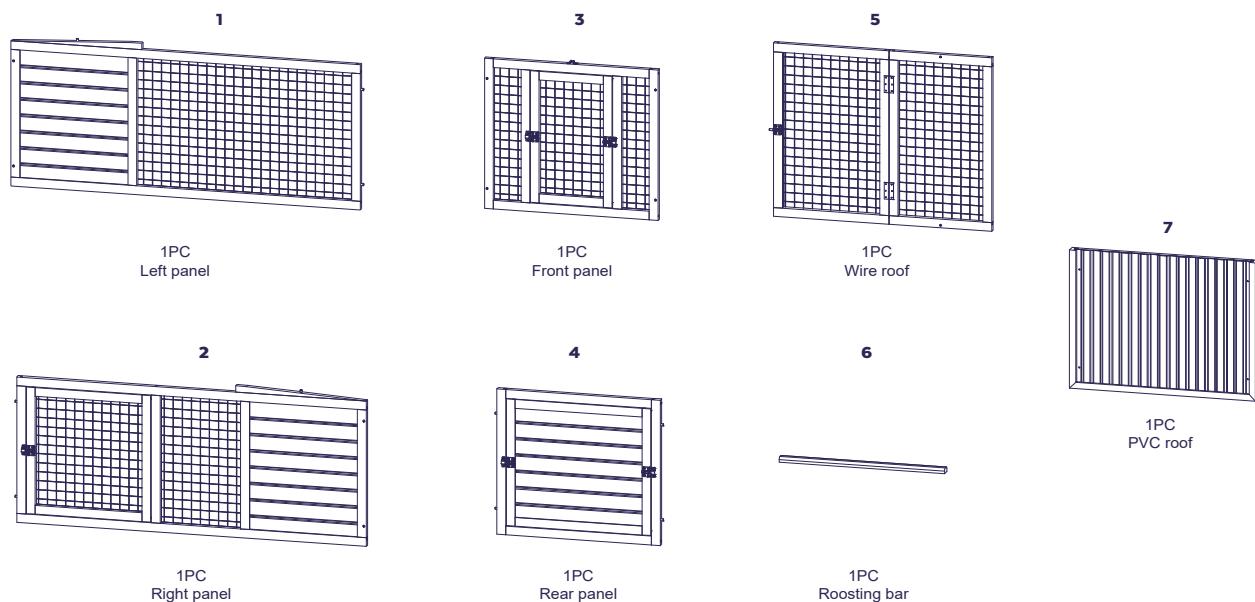


Assembly Instructions


Please Read Through All Instructions Before Starting

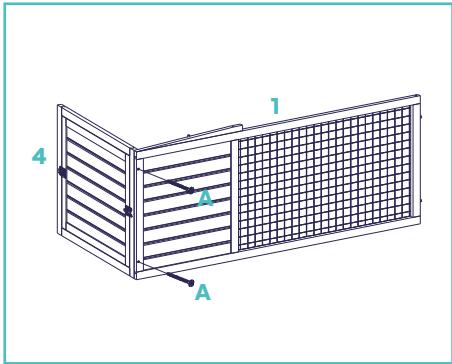


Step 1. Attach Rear panel (4) to Left panel (1) using Screw (A).

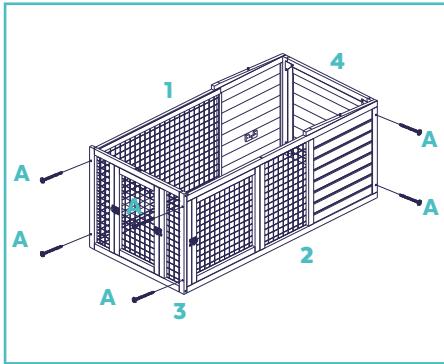


Step 2. Attach Right panel (2) to Rear panel (4) using Screw (A). Then attach Front panel (3) to Left panel (1) and Right panel (2) using Screw (A).

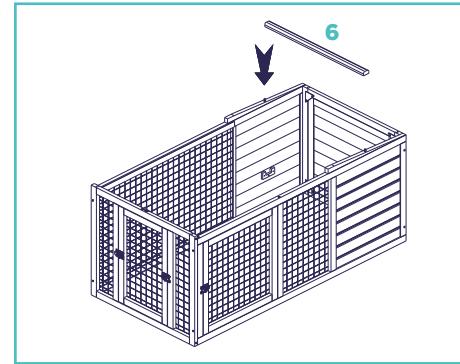


Step 3. Insert Roosting bar (6).

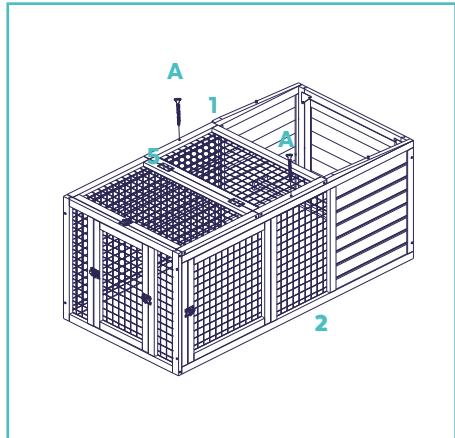

Step 4. Attach Wire roof (5) to Left panel (1) and Right panel (2) using Screw (A).

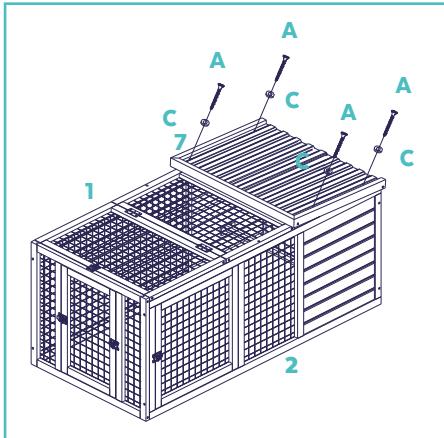

Step 5. Assemble PVC roof (7) to Left panel (1) and Right panel (2) using Screw (A) and Washer (C).

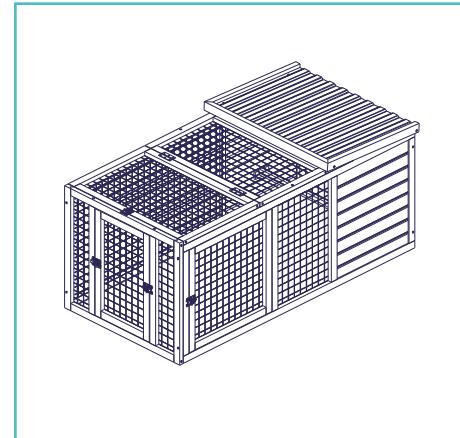




Step 6. FINISHED ASSEMBLY

Assembly Instructions

Please Read Through All Instructions Before Starting

Attaching the chicken run to Frisco Wooden Outdoor Chicken Coop (Sku#304041)

**(Chicken coop sold separately)*

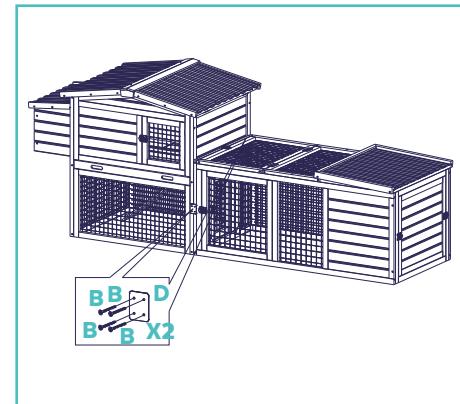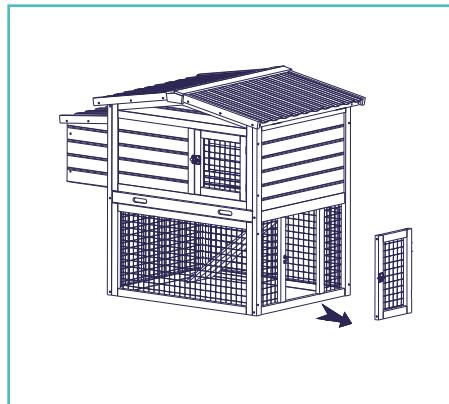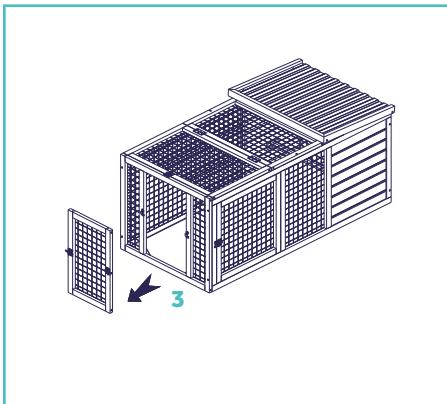

Step 7. Remove door from Front panel (3).

Step 8. Remove door from chicken coop by taking the screws off the hinges.

Step 9. Use Screw (B) to connect chicken run to chicken coop with connector (D). (Use 1 connector on the front and 1 on the back.)

Warning & Cautions

Please read all warnings and instructions thoroughly before assembling.

This product is not for human use. Please, never allow children to play in or on the house. For chicken use only.

Follow the instructions carefully and make sure you've completed each step.

Keep away from heat sources and open flames.

Do not sit on, climb on or shake the product!

This wooden product is suitable for providing temporary shelter for your pets in an outdoor environment.

This product has been treated with a harmless water-based wood preservative solution, which provides basic protection against the elements.

This product should be re-treated at least once a year with a similar harmless solution to protect the wood.

Choose a location that is leveled and dry, as well as being as sheltered from the weather as possible.

Cleaning & Maintenance

Always check the chicken run and discontinue use if any parts are missing, worn or damaged. Check regularly to make sure all hardware and mountings are tightened securely. Wash with mild detergent. Don't use any abrasive cleaners or bleach.

Questions

Questions? Call our friendly customer service anytime. We're here 24/7 at 1.800.672.4399