



USE AND CARE



MODEL RACA

Item pictured may differ from actual product
Il est possible que l'article sur la photo soit différent du produit réel
El artículo ilustrado puede diferir del producto real
Das abgebildete Gerät kann sich vom eigentlichen Produkt unterscheiden
Il prodotto reale può essere diverso da quello rappresentato
De afbeelding kan verschillen van het werkelijke product
Item da foto pode diferir do produto real
图示可能与实际产品不同

Form #60222

Printed in China

ENGLISH

Congratulations! You just went First Class when you bought this Andis clipper. Careful workmanship and quality design have been the hallmarks of Andis products since 1922.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using the Andis Clipper. **This product not for use by children.**

DANGER: To reduce the risk of electric shock:

- 1. Do not reach for an appliance that has fallen into water. Unplug immediately. Never use clipper near water.
- 2. Do not use while bathing or in a shower.
- 3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
- 4. Always unplug this appliance from the electrical outlet immediately after using. Unplug by holding and pulling on plug, not cord.
- 5. Unplug this appliance before cleaning, removing, or assembling parts.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:


- 1. An appliance should never be left unattended when plugged in.
- 2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- 3. Children should be supervised to ensure that they do not play with the appliance.
- 4. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Andis.
- 5. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an Andis Authorized Service Station for examination or repair.
- 6. Keep the cord away from heated surfaces.
- 7. Never drop or insert any object into any opening.
- 8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
- 9. Do not use this appliance with a damaged or broken blade or comb, as injury to the skin may occur.
- 10. To disconnect turn control to "0" then remove plug from outlet.
- 11. **WARNING:** During use, do not place or leave appliance where it may be (1) damaged by an animal or (2) exposed to the weather.
- 12. Oil blades frequently. Blades may become hot during use.

SAVE THESE INSTRUCTIONS

OPERATING INSTRUCTIONS

Please read the following instructions before using your new Andis clipper. Give it the care that a fine precision built instrument deserves and it will give you years of service.

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. • Children should be supervised to ensure that they do not play with the appliance.

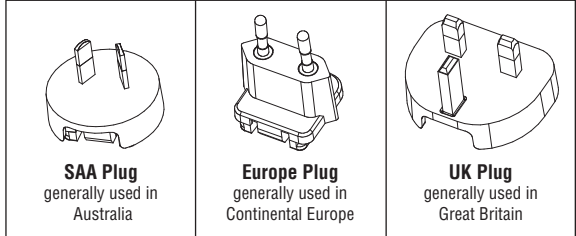

UNIVERSAL AC/DC POWER ADAPTER


The unit is equipped with a universal AC/DC power adapter. Three interchangeable input plugs are included for use in most countries around the world (Diagram A).

Removing input plug:

- 1. Unplug AC/DC power adapter from wall outlet.
- 2. Apply pressure in direction shown until it releases from power adapter (Diagram B).

Replacing input plug:

- 1. To replace input plug, align pins and brackets on the AC/DC power adapter with plug (Diagram B).
- 2. Gently push input plug into power adapter until it snaps into place.

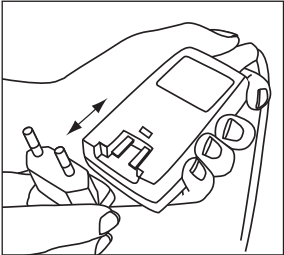

CLIPPER BLADE ADJUSTMENT

The clipper blade set is easy to adjust. From coarse to fine cuts, all that's needed is a flick of the adjustment lever with your thumb. In the upright position, blades are set for the finest, or shortest cuts (Diagram C).



ATTACHING THE CLIPPER COMBS

(Attachment comb sizes will vary in each kit)

You can set the blades for a coarser cut by attaching any of the snap-on blade attachment combs made for your Andis clipper. The blade attachments mount easily. To use a blade attachment, slip the cutter blade teeth into blade attachment. Snap the blade attachment down; it will snap on and off easily. Combs help guide hair to cutting blades and give you precise control of hair lengths. Each comb allows a different length of cut which is indicated on the combs: 1/16", 1/8", 1/4", 3/8", 1/2", 5/8", 3/4", 7/8" and 1".



Use the following chart to find the approximate lengths of cut. Different blade angles in relation to the skin, thickness and texture of the hair will vary the cutting length.

Model RACA (100-240V, 60/50Hz)

To find an Authorized Repair Station go to www.andis.com

Pour trouver un centre d'entretien agréé, visiter le site www.andis.com

Para encontrar un centro de servicio autorizado, visite www.andis.com

Von Andis autorisierte Reparatur Center finden Sie unter www.andis.com

Per trovare un centro autorizzato di assistenza accedere a www.andis.com

Ga naar www.andis.com voor een erkend reparatiecenter

Para encontrar uam Estação de Reparo Autorizada vá para www.andis.com

要查找授权维修点，请转至 www.andis.com

KEEP THIS FOR YOUR RECORDS
CONSERVER CETTE NOTICE
GUARDE ESTAS INSTRUCCIONES
DIESE ANLEITUNG AUFBEWAHREN
CONSERVARE PER USI FUTURI
BEWAAR DEZE GEBRUIKSAANWIJZING
GUARDE ISTO PARA OS SEUS REGISTROS
请保留此说明书作为记录



©2011 Andis Company
1800 Renaissance Blvd., Sturtevant, WI 53177 U.S.A.
1-262-884-2600 www.andis.com info@andisco.com

CLIPPING GUIDE


Description	Clipping Direction	Approx. Length of Cut	
		Fine	Coarse
Standard Andis Blade	With hair grain	1/16" (1.6 mm)	3/16" (4.8 mm)
	Against hair grain	1/32" (0.8 mm)	1/8" (3.2 mm)
1/16" Blade Attachment	With hair grain	3/16" (4.8 mm)	5/16" (7.9 mm)
	Against hair grain	3/32" (2.4 mm)	5/32" (3.9 mm)
1/8" Blade Attachment	With hair grain	1/4" (6.4 mm)	3/8" (9.5 mm)
	Against hair grain	1/8" (3.2 mm)	1/4" (6.4 mm)
1/4" Blade Attachment	With hair grain	3/8" (9.5 mm)	1/2" (12.7 mm)
	Against hair grain	1/4" (6.4 mm)	3/8" (9.5 mm)
3/8" Blade Attachment	With hair grain	1/2" (12.7 mm)	5/8" (15.9 mm)
	Against hair grain	3/8" (9.5 mm)	1/2" (12.7 mm)
1/2" Blade Attachment	With hair grain	5/8" (15.9 mm)	7/8" (22.2 mm)
	Against hair grain	1/2" (12.7 mm)	5/8" (15.9 mm)
5/8" Blade Attachment	With hair grain	3/4" (19 mm)	1" (25.4 mm)
	Against hair grain	5/8" (16 mm)	7/8" (22mm)
3/4" Blade Attachment	With hair grain	7/8" (22.2 mm)	1-1/8" (28.6 mm)
	Against hair grain	3/4" (19.0 mm)	1" (25.4 mm)
7/8" Blade Attachment	With hair grain	1" (25.4 mm)	1-1/4" (32 mm)
	Against hair grain	7/8" (22 mm)	1-1/8" (28.5 mm)
1" Blade Attachment	With hair grain	1-1/8" (28.6 mm)	1-3/8" (34.9 mm)
	Against hair grain	1" (25.4 mm)	1-1/4" (31.8 mm)

THE PRELIMINARIES

- 1. To make cutting smoother and easier, always start with a clean head of hair. Wash the hair with your favorite shampoo. Rinse. Repeat. We also recommend using a hair conditioner to untangle snarls and leave hair soft and easy to manage.
- 2. When drying the hair, just use a towel so as not to dry it too thoroughly. Leaving it damp makes the hair easier to work with.

USER MAINTENANCE

The internal mechanism of your clipper has been permanently lubricated at the factory. Other than the recommended maintenance described in this manual, no other maintenance should be performed, except by Andis Company or an Andis Authorized Service Station.

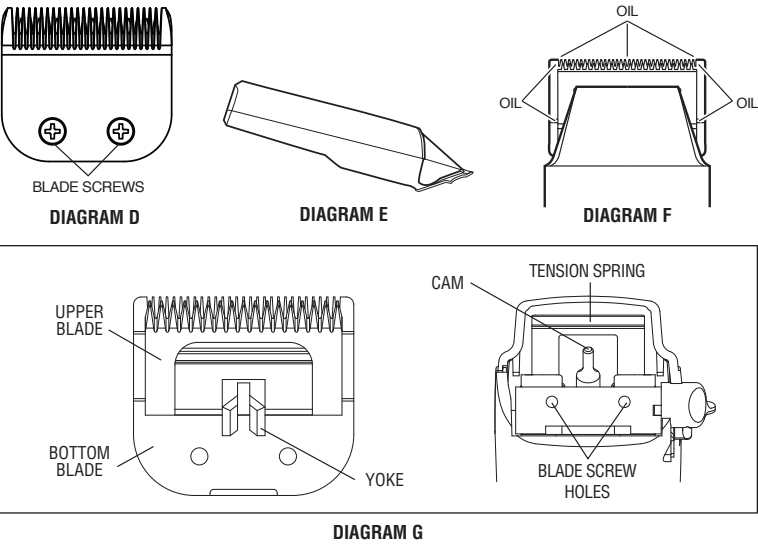

REPLACEMENT (REMOVAL) OF BLADE SET

To remove the blades, first unplug the clipper from the electrical outlet. Turn the clipper upside down, so that the blade teeth are pointing down. You may want to place the clipper on a flat surface to do this. Unscrew the screws on the blade (Diagram D). Remove the blade. To replace the blade, put the blade back into position while aligning the yoke of the upper blade with the cam and tension spring of the clipper (Diagram G). Line up the screw holes in the bottom blade with the two holes in the blade bracket, and replace screws. Do not over tighten screws.

BLADE TEMPERATURE

Due to the high speed nature of Andis clippers, please check for blade heat often, especially on close cutting blades. If blades are too hot, dip the **blades only** into Andis Blade Care Plus or apply Andis Cool Care Plus and then Andis Clipper Oil. If you have a detachable blade unit, you can change your blade in order to maintain a comfortable temperature; using multiple blades of the same size is popular among groomers.

CARE AND SERVICING OF YOUR ANDIS CLIPPER BLADES

(Clipper shown in diagrams may vary from the one that you have)

The blades should be oiled before, during, and after each use. If your clipper blades leave streaks or slow down, it's a sure sign that the blades need oil. The clipper should be held in a position shown in Diagram E to prevent oil from getting into the motor. Place a few drops of Andis Clipper Oil on the front and side of the cutter blades (Diagram F). Wipe excess oil off the blades with a soft dry cloth. Spray lubricants contain insufficient oil for good lubrication, but are an excellent clipper coolant. Always replace broken or nicked blades to prevent injury. You can clean the excess hair from your blades by using a small brush or old toothbrush. To clean the blades we suggest immersing the **blades only** into a shallow pan of Andis Clipper Oil, while the clipper is running. Any excess hair and dirt that has accumulated between the blades should come out. After cleaning, turn your clipper off, dry the blades with a dry cloth and start clipping or trimming again.

FACTORY REPAIR SERVICE

When the blades of your Andis clipper become dull after repeated use, it is advised to purchase a new set of blades available through your Andis Supplier or through an Andis Authorized Service Station.

CORRECT DISPOSAL OF THIS PRODUCT

This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



CAUTION: Never handle your Andis clipper while you are operating a water faucet, and never hold your clipper under a water faucet or in water. There is danger of electrical shock and damage to your trimmer. **ANDIS COMPANY will not be responsible in case of injury due to this carelessness.**