Deluxe Lectro-Kennel™

Care & Instructions

Thank you for purchasing K&H Manufacturing's Deluxe Lectro-Kennel™ heated pet pad.

When used correctly, your DELUXE LECTRO-KENNEL™ should provide years of hassle free warmth for your pet. Your DELUXE LECTRO-KENNEL™ is intended for use indoors and outdoors. Its unique heating system is designed to become warm, not hot. The DELUXE LECTRO-KENNEL™ is designed for use with animals only.

WARNING: This is an electrical product. Read all directions and precautions carefully before operating. Failure to properly follow all directions and instructions may lead to electrical shock of fire which could cause serious bodily injury.

For household use Only

Important safequards

When using electrical appliances, basic safety precautions should always be followed including the following:

- Read all instructions.
- To protect against electrical hazards, **DO NOT** immerse cord, plug, or appliance in water or other liquid.
- **Close supervision is necessary** when used by or near children.
- ALWAYS unplug from outlet when not in use.
- **DO NOT** operate any electrical appliance with a damaged cord of plug, or if the appliance malfunctions or has been damaged in any matter. **RETURN** all malfunctioning appliances to the factory for examination.
- **6 DO NOT** use appliance for other than its intended use.
- 7 DO NOT PUNCTURE PLASTIC HOUSING FOR ANY REASON.
- For use with 110-120 volt AC **ONLY.**
- **9 NOT** cover your DELUXE LECTRO-KENNEL™ with blankets or materials other than a fleece K&H LECTRO-COVER. Other coverings may not allow heat to radiate properly and could cause pad failure.
- When placing the pad in an enclosed area such as a doghouse, be sure pad covers no more than half of the floor space so your pet has the option of sleeping on or off the DELUXE LECTROKENNELTM

Care Instructions:

Your DELUXE LECTRO-KENNEL™ pad may be cleaned with a damp cloth when unplugged. The unit may be plugged in when the plug is thoroughly dry.

INSTRUCTIONS

- Place directly on a hard, flat surface inside a doghouse or kennel. Area chosen should be a sheltered area out of direct rain or snow.
- Plug into 110-120 volt AC outlet.
 Allow one to two hours for the
 DELUXE LECTRO-KENNEL™ to warm.
 The unit will feel slightly warm to the
 touch. When an animal lies on it,
 the pad will reach the setting on the
 digital readout.



- The DELUXE LECTRO-KENNEL™ has a built in adjustable temperature setting where it can be set between 80° and 100° F. To adjust the built in temperature control follow the instructions below.
 - Hold down both arrow buttons at the same time for 3 seconds to change the read out between Celsius and Fahrenheit.
 - To adjust the temperature higher, hold down the up arrow key for 3 seconds. The readout will begin to blink, adjust the temperature setting up by pushing the up arrow key.
 - To adjust the temperature down, hold down the down arrow for 3 seconds. The readout will begin to blink, adjust the temperature setting down by pushing the down arrow key.
- Unplug, clean, and store pad when not in use.

K&H Limited One Year Warranty

Our warranty is as follows: K&H Manufacturing warrants to the original consumer, that this product will be free of defects and workmanship for a period of one year from the date of purchase. The manufacturer's liability hereunder is limited to replacement of the product. This warranty is void if the product has been damaged by accident, unreasonable use, neglect, tampering, or other causes not arising from defects in material or workmanship.

To exercise your warranty: If, during the warranty period, your product malfunctions, return it to the place of purchase with your original purchase receipt. If this cannot be done, return the product, postage prepaid, to K&H Manufacturing, with dated proof of purchase or original date receipt. A return authorization number, obtained by calling (719) 591-6950 must accompany all returns to manufacturer. Please include a note explaining the problem when returning the product.