


Thank you for choosing Richell's Product. Please read this instruction manual carefully before using this product, and keep for future reference. If you give this product to someone else, please also give this instruction manual to the new owner. Please note some parts of the figures shown below may be slightly different from the actual product, for your better understanding of the structure and proper use.

Appropriate Pet Weight for Proper Usage

The Medium is designed for small to medium size dogs, 8.8 - 44 lbs.
and the Large is designed for medium to large size dogs, 17.6 - 88 lbs.


Features



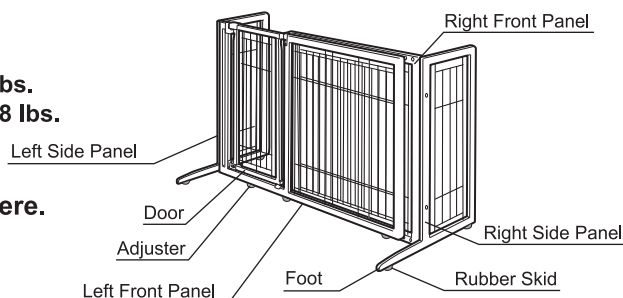


- Gate is freestanding, allowing for easy placement anywhere.
- Width is adjustable to fit different sized openings.
- Wooden frame coordinates well with home interiors.
- Rubber skids keep gate in place and prevent shifting.

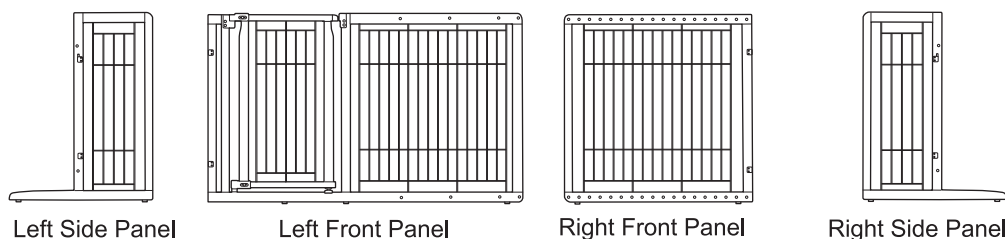

Parts

Before assembling this product, make sure the following parts are included:



Part Name	Part Set
 Bolts	(8)
 Spring Washers	(8)
 Flat Washers	(8)
 L-shaped Pin	(2)
 Screws	(1)

What are the following signs?

The following signs are special remarks for safety use of the product.
Keep these remarks in mind before using this product.

Warnings! : Remarks on inappropriate use which might cause death, serious injury and/or physical damage.


Cautions! : Remarks on inappropriate use which might cause slight injury and/or physical damage.

Important! : Remarks on inappropriate use which might cause trouble, damage and/or shorter life to product.

Instruction of Proper Use

Warnings!

- **IMPORTANT:** This product includes a bottom bar that is part of the main frame. The bottom bar should touch the floor when correctly installed. Pay close attention while stepping over the bottom bar for safety.
- This product cannot completely prevent pets from passing through. Do not place the gate in a location where passage could lead to possible danger. Choose location carefully.
- Do not stride over the gate to avoid unexpected accidents/injuries.
- Be careful not to stumble on the protruding feet of this product.
- Never place the product at the top of a staircase or near a glass door. Avoid places where it may be unsafe to place this product.
- This product is designed for indoor use only. Please use the Medium for small to medium size dogs and the Large for medium to large size dogs. Do not use this product for anything other than its intended purpose.
- Do not use this product while your pet is leashed to avoid unexpected accidents/injuries, such as dog entanglement.
- Make sure each part is properly fixed in place and pay special attention to new-born pups or tiny dogs to avoid unexpected serious injury to pets, and/or product damage by being caught between the wires or between wire and wooden frame.
- Pets may behave unexpectedly when startled by thunder, lightning, or other animals. To avoid possible injury/death during such times, pets should be supervised and not left unattended. We do not recommend using this product when pets are unattended.
- CHILDREN and ADULTS can trip over product under low-light/darkness. Place a night light near the product to avoid possible personal injury under low-light/dark conditions.

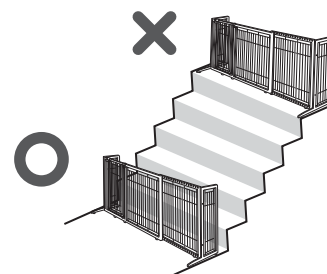

Cautions!

- Please use the Medium for dogs that weigh 8.8 - 44 lbs. and the Large for dogs that weigh 17.6 - 88 lbs. Do not use this product for dogs out of this weight range to avoid unexpected injury and/or escape.
- When opening/closing the door or side panel, make sure the area is clear and be careful not to pinch your hands or fingers.
- Make sure the door locks properly. Locks are positioned at the top/bottom of the door to keep your pets safely confined and to avoid unexpected injury and/or escape.
- Do not lean or hang on to this product to avoid unexpected accidents and/or product damage.
- Keep this product away from all heat sources at all times to avoid unexpected product damage or burn-related injuries to self/pets.
- Only use genuine Richell parts and do not alter the design of the gate to avoid accidents and/or injury.
- If you notice anything wrong with the product or installation site, discontinue its use at once.

Important!

- Make sure the product is securely fixed. If not, tighten the bolts as necessary.

How to Assemble

* Use a Phillips-head or Flat-head screwdriver for assembly.

1 Attach Left Side Panel to Left Front Panel

First, place Front and Side Panels parallel to each other.


- ① Tilt Front Panel and insert top hinge on the Front Panel onto stem of top hinge on Side Panel as shown.

- ② Align bottom hinge of Front Panel with bottom hinge of Side Panel.

- ③ Insert L-shaped Pin as shown.


- ④ Open Side Panel to 90 degrees.

Turn the top of L-shaped Pin to Front Panel.

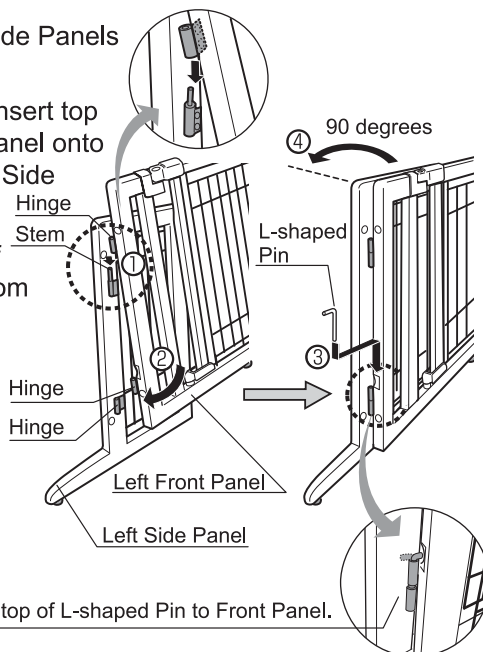

2 Attach Right Side Panel to Right Front Panel



Repeat steps ①-④ for Left Side Panel.

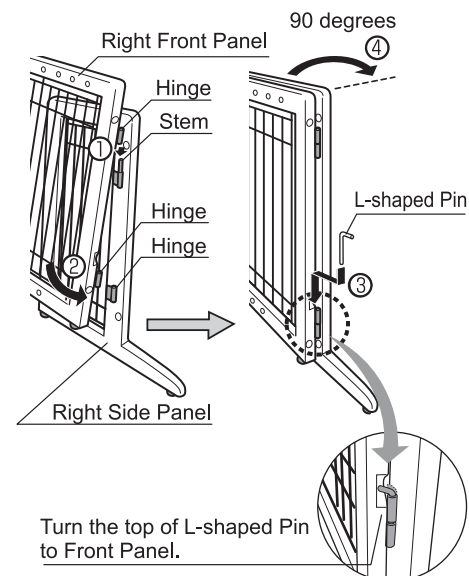

3 Attach Front Panels

- ① Align Adjustment Holes and Fixing Holes according to desired width. (The width of gate can be adjusted by intervals of 1.9").
- ② Insert Bolts into Adjustment and Fixing Holes with Flat Washers and Spring Washers at top and bottom of Left/Right Front Panel using screwdriver.


How to insert Bolt

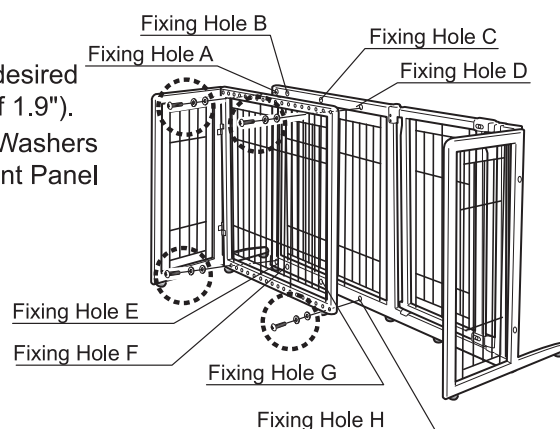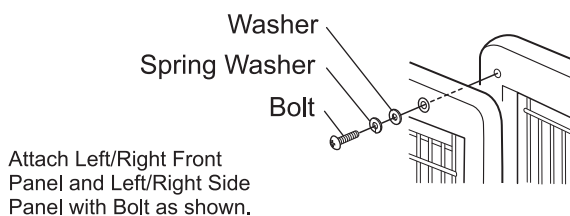

The positions of the Bolts will depend on the desired width of the gate. Please see Page 3 for Examples for Proper Assembly.



4 Secure the Side Panel

Attach Left/Right Side Panels to Left/Right Front Panel using Bolts as necessary. When dogs are able to push Side Panels as shown, use Bolts to attach Side Panels to Front Panels.

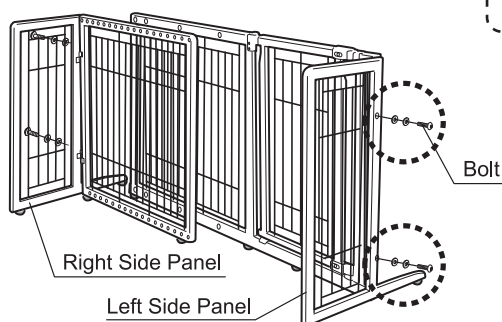

Cautions!


Make sure the top of L-shaped Pin is not protruding from the space between the Side Panel and Front Panel as shown below.

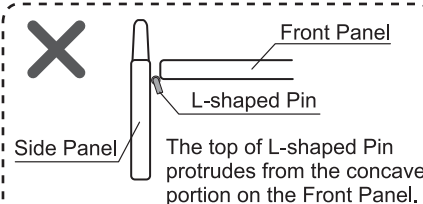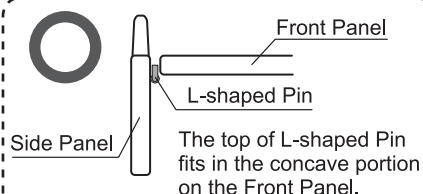

Examples for Proper Assembly


5 Level the Gate using the Adjuster

To level the product to make sure the Door opens/closes properly, turn the Adjuster on the bottom of Left Front Panel (see page 4 for **Assembly Check / How to Open and Close the Door**).

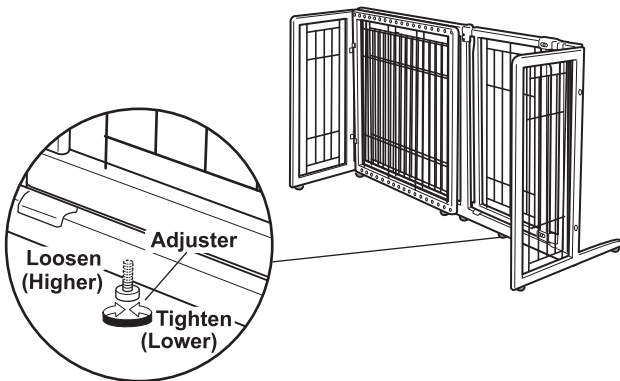


• For an opening width within 71.3"

Tighten Bolts using Fixing Holes **A/D** for the top and Fixing Holes **E/H** for the bottom of the gate.

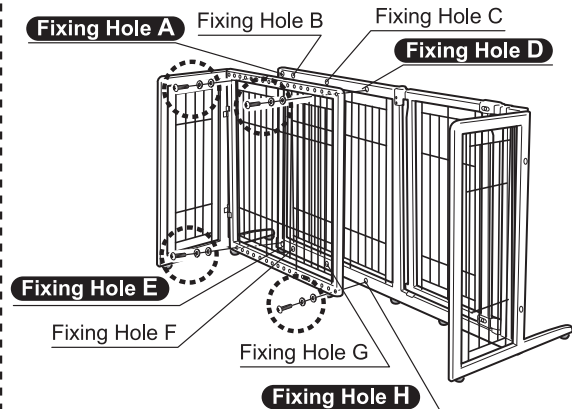


• For an opening width 71.3 - 80.8"

Tighten Bolts using Fixing Holes **A/C** for the top and Fixing Holes **E/G** for the bottom of the gate.

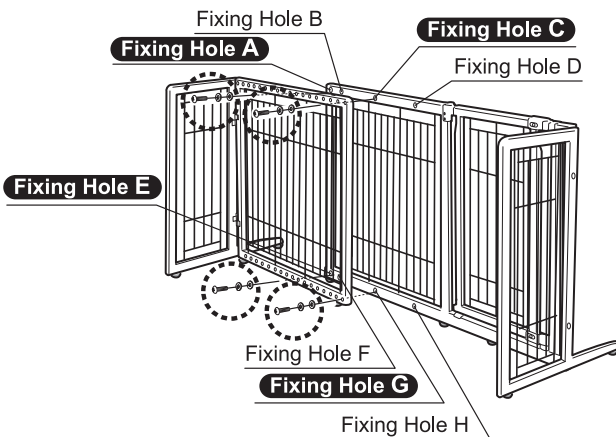


• For an opening width more than 80.8"

Tighten Bolts using Fixing Holes **A/B** for the top and Fixing Holes **E/F** for the bottom of the gate.

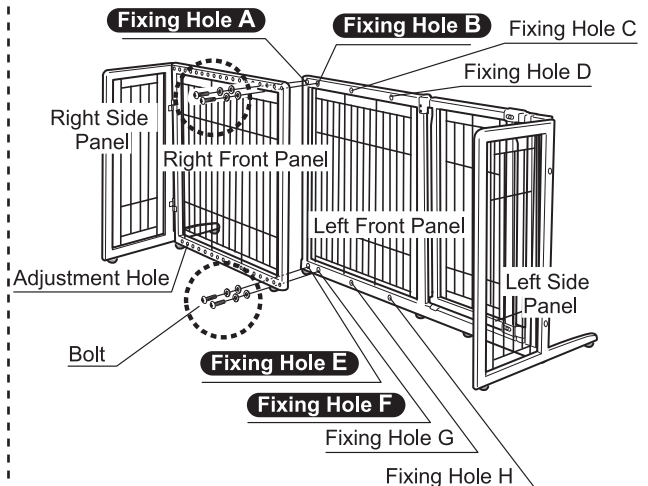


How to Adjust the Width of the Door


1. Loosen Adjuster Bolt on Left Front Panel.

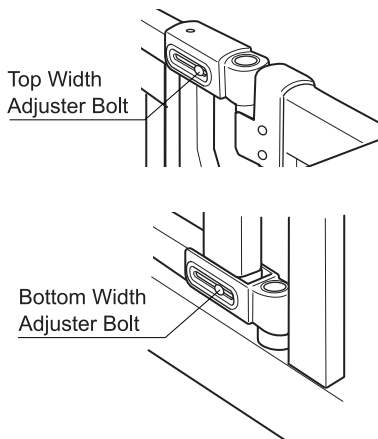

2. Slide the Door to adjust the width. Make sure the Door opens/closes correctly. Then tighten Top/Bottom Width Adjuster Bolts in the right position.

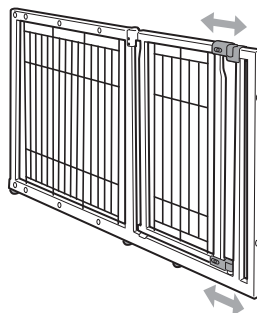

3. Make sure the space between the Top Lock on the Door and Left Front Panel is set to 0.04 - 0.12". Then stabilize the door using Screw.


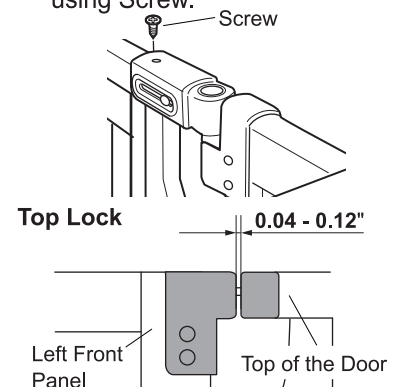


Assembly Check / How to Open and Close the Door

1. When correctly assembled, the gate should not feel loose or wobbly.
2. After the Door closes, make sure the Top/Bottom Locks work correctly.
3. Grip and lift the top of the Door so that the Door opens by releasing the Upper and Lower Locks.
4. The Door is designed to lock automatically with an Upper/Lower Locking System when closed.

Cautions!


If the Door fails to lock properly, the width of the Door may need to be adjusted (see [How to Adjust the Width of the Door](#)).

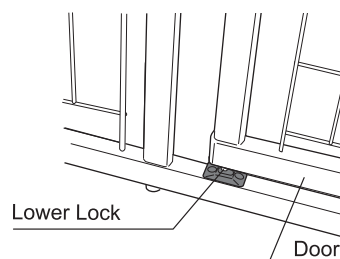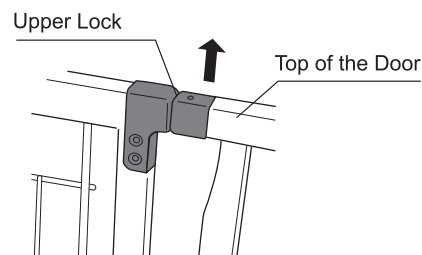

How to Disassemble


1. Disassemble Front Panels

Remove Bolts on Left/Right Front Panels.

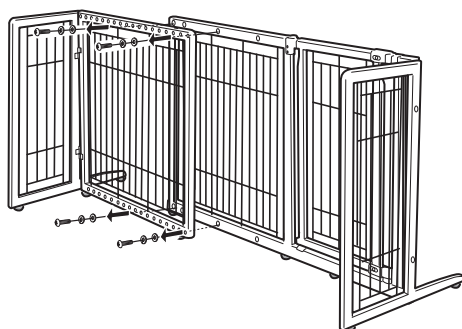


2. Disassemble Side Panels

Remove Bolts on Left/Right Side Panels.

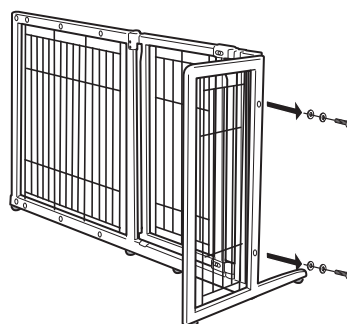

3. Disassemble each Panel

Remove L-shaped pin from lower hinge and lift Side Panel straight up to remove it.

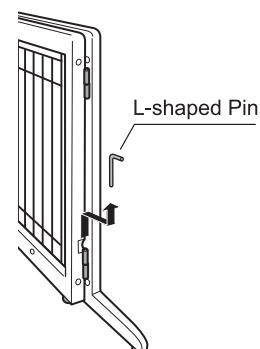

How to Clean

- Wipe off this product with washing cloth after squeezed firmly using a mild detergent and water. Do not use a scrub brush and/or a polishing powder as these may cause scratched, rust and discolor to the product.
- When using creosol or other disinfectants, make sure to dilute them, otherwise damage to the wooden finish or discoloration may occur.
- Do not use harsh chemicals such as thinner, benzene or alcohol as these may cause damage/discoloration to the finish.
- After cleaning, wipe dry with soft cloth or place in a shaded area to air dry; do not place product in direct sunlight.

Specifications

UPC/JAN	803840 94189-8 / 4973655 50211-2	803840 94190-4 / 4973655 50221-1
Dimension	61.8 - 90.2"W x 24"D x 28.1"H	61.8 - 90.2"W x 27"D x 36.2"H
Material	Frame: Rubber Wood (Lacquer finished) Wire: Steel (Polyester coating) Lock: Polypropylene Door Stem: Nylon Rubber Skid: Elastomer	

- Please note that product specifications and design may change without prior notice for the purpose of quality improvement.
- There may be coating cracks at some joints and each product may experience different coloration of the wood grain as frames are made of natural wood.
- If you find something wrong with this product, please let us know. Thank you!

For USA Customers



Designed by:
Richell Corporation, Japan
Distributed by:
Richell USA, Inc.
Grand Prairie, Texas 75050
Phone (972) 641-9795 Fax (972) 641-8495
Visit us at www.richellusa.com
MADE IN VIETNAM