

Instruction Manual Manual de instrucciones

UPC 94193/ 94904 JAN 5027/ 98796

Door Frame

取扱説明書 使用説明書 취급설명서 Manuel d'instruction

U.S. Patent No. 7, 739, 983 U.S. Patent No. 7, 954, 456

Side Panel

 
Thank you for choosing Richell's product. Please read this instruction manual carefully before using this product, and keep for future reference. If you give this product to someone else, please also give this instruction manual to the new owner. Please note some parts of the figures shown below may be slightly different from the actual product, for your better understanding of the structure and proper use.

Appropriate Pet Weight for Proper Usage

 
●The product is designed for small to medium size dogs, 6,6 - 33 lbs.

<u>Features</u>

- Gate is freestanding, allowing for easy placement anywhere.
- Width is adjustable to fit different sized openings.
- Rubber skids keep gate in place and prevent shifting.

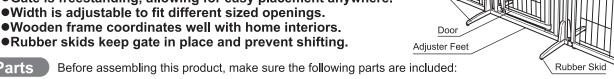



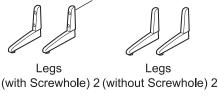

Screw Hole

Part Name Part Set **Bolts** (4)Spring Washers (4)Flat Washers (4)Screws (1)

Main Frame What are the following signs?

The following signs are special remarks for safety use of the product.

Keep these remarks in mind before using this product.

Warnings! : Remarks on inappropriate use which might cause death, serious injury and/or physical damage.

Cautions!) : Remarks on inappropriate use which might cause slight injury and/or physical damage.

[Important!] : Remarks on inappropriate use which might cause trouble, damage and/or shorter life to product.

Instruction of Proper Use

Warnings!

●IMPORTANT: Pay close attention while stepping over the bottom bar of the door frame for safety.

 This product cannot completely prevent pets from passing through. Do not place the gate in a location where passage could lead to possible danger. Choose location carefully.

 Make sure the door locks properly. Locks are positioned at the top/bottom of the door to keep your pets safely confined and to avoid unexpected injury and/or escape.

•Do not stride over the gate to avoid unexpected accidents/injuries. Use the door to pass through.

•Be careful not to stumble on the protruding feet of this product.

- Never place the product at the top of a staircase or near a glass door. Avoid places where it may be unsafe to place this product.
- ●This product is designed to use for small to medium size dogs and indoor use only. Do not use this product for any purpose other than its intended use.
- •Do not use this product while your pet is leashed to avoid unexpected accidents/injuries, such as dog entanglement.
- •Make sure each part is properly fixed in place and pay special attention to new-born pups or tiny dogs to avoid unexpected serious injury to pets, and/or product damage by being caught between the wires or between wire and wooden frame.
- Pets may behave unexpectedly when startled by thunder, lightening, or other animals. To avoid possible injury/death during such times, pets should be supervised and not left unattended. We do not recommend using this product when pets are unattended.
- CHILDREN and ADULTS can trip over product under low-light/darkness. Place a night light near the product to avoid possible personal injury under low-light/dark conditions.

Cautions!

- ●This product is designed for use with small to medium size dogs; 6.6 33 lbs. Do not use this product for pets out of this weight range to avoid unexpected injury and/or escape.
- •When opening/closing the door or side panel, make sure the area is clear and be careful not to pinch your hands or fingers.
- •Do not lean or hang on to this product to avoid unexpected accidents and/or product damage.
- Keep this product away from all heat sources at all times to avoid unexpected product damage or burn-related injuries to self/pets.
- Only use genuine Richell parts and do not alter the design of the gate to avoid accidents and/or injury.
- •Make sure to use this product on flat, solid floor surface.
- •If you notice anything wrong with the product or installation site, discontinue its use at once.

Important!


- Make sure the product is securely fixed. If not, tighten the bolts as necessary.
- This product is designed for indoor use only. Do not use it outdoors.
- There may be coating cracks at some joints and each product may experience different coloration of the wood grain as frames are made of natural wood.

How to Assemble * Use a Phillips-head screwdriver for assembly.

1. How to open the Side Panel

First, open the Side Panel to stand the gate up (the gate does not stand by itself at this time).

- 1 Push up gently on the Door Frame.
- 2 Then lift up the Top Width Adjustment Connector to open the Side Panel.

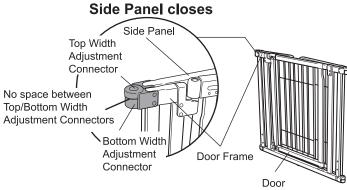

2. Adjust the Side Panel to desirable angle


Open the Side Panel to adjust the gate to desirable angle (see Step 1 How to open the Side Panel). Then push down on the Door Frame, Make sure the Top/Bottom Width Adjustment Connectors are securely in place. After adjusting the Side Panels to the desirable angle, the Top/Bottom Width Adjustment Connectors should not shift. Repeat this step to adjust the opposite Side Panel.


Cautions!


Do not use force to push down the Door Frame. Applying unnecessary force may cause damage to the Width Adjustment Connector.

3. Attach Legs to Main Frame

- (1)Open the Side Panel to stand the gate up (see Step 1 How to open the Side Panel).
- ②Attach the Leg (without screwhole) to the holes on bottom of Door Frame. Then attach the Leg (with screwhole) to the hole on the opposite side of the Door Frame.
- 3Attach the Leg (without screwhole), Leg (with screwhole) and Main Frame using Bolts as shown.

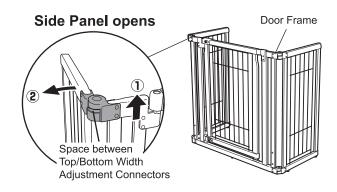


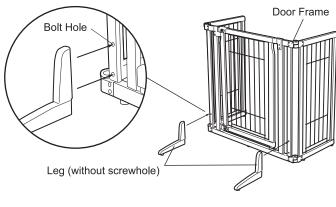

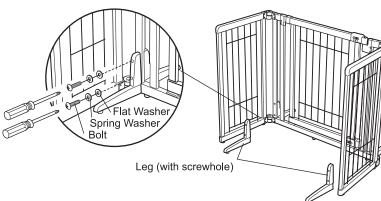

4. Level the Gate using the Adjuster Feet

To level the product to make sure the Door opens/closes properly, turn the Adjuster Feet located on the bottom of Door Panel (See Assembly Check / How to Open and Close the Door).

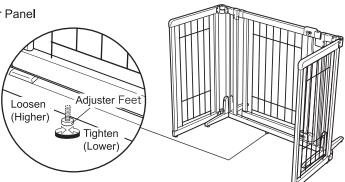


Assembly Check / How to Open and Close the Door

- 1. When correctly assembled, the gate should not feel loose or wobbly.
- 2. After the Door closes, make sure the Top/Bottom Locks work correctly.
- **3.** Grip and lift the top of the Door so that the Door opens by releasing the Upper and Lower Locks.
- **4.** The Door is designed to lock automatically with an Upper/Lower Locking System when closed.

Cautions!


If the Door fails to lock properly, the width of the Door may need to be adjusted (see How to Adjust the Width of the Door).


How to Adjust the Width of the Door

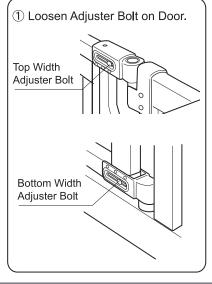


② Slide the Door to adjust the width.


Make sure the Door opens/close
correctly. Then tighten the
Top/Bottom Width Adjuster Bolts
in the right position.

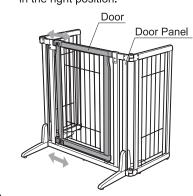

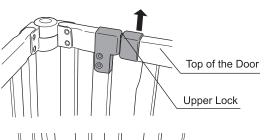

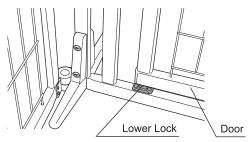


3 Make sure the space between the Top Lock on the Door and Door Frame is within 0.04". Then stabilize the door by using a screw as show in the figure below.

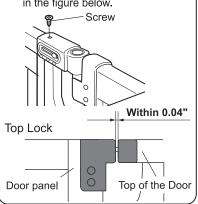

Examples of Product Configurations

For UPC803840 94193-5 JAN4973655 50271-6

● For an opening width within ● For an opening wid

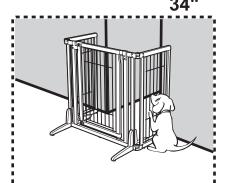

● For an opening width of 34 - 56.5"

 


● For an opening width of 56.5 - 63"



When using this product for an opening width of 56.5 - 63":

● The area that overlaps with the wall and Side Panel has to be more than 2 inches wide. The space between the wall and this product has to be within 1/2 inches.

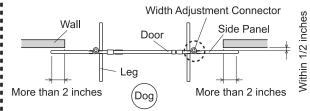

Warnings!

- Confine your pet on the correct side as shown in the figure above to avoid unexpected escape from space between the wall and this product.
- Never confine your pet on the incorrect side of the gate; this is to avoid the gate tipping over and causing possible injury to your pet.

For UPC803840 94904-7 JAN4973655 98796-4


• For an opening width within

55"

• For an opening width of 55 - 77.8"




● For an opening width of 77.8 - 84"

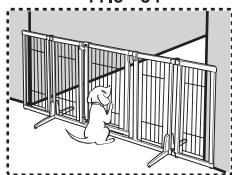

When using this product for an opening width of 77.8 - 84":

● The area that overlaps with the wall and Side Panel has to be more than 2 inches wide. The space between the wall and this product has to be within 1/2 inches.

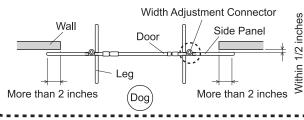


Warnings!

- Confine your pet on the correct side as shown in the figure above to avoid unexpected escape from space between the wall and this product.
- Never confine your pet on the incorrect side of the gate; this is to avoid the gate tipping over and causing possible injury to your pet.

How to Fold the Gate

 1. Remove the Bolts on the Leg to separate the Leg from the Main Frame.

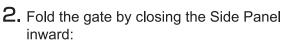

- 1 Hold the Side Panel then gently lift up on the Door Panel.
- 2 Then lift up the Top Width Adjustment Connector to close the Side Panel inward.







Side Panel closes

How to Clean

- •Wipe off this product with washing cloth after squeezed firmly using a mild detergent and water. Do not use a scrub brush and/or a polishing powder as these may cause scratched, rust and discolor to the product.
- •Do not use creosol or other disinfectants. These may cause damage/discoloration to the wooden finish.
- •Do not use harsh chemicals such as thinner, benzene or alcohol. These may cause damage/discoloration to the wooden finish.
- •After cleaning, wipe dry with soft cloth or place in shaded area to air dry; do not place product in direct sunlight. This may cause discoloration, deformation, or rust.

Specifications

UPC/JAN		803840 94193-5 / 4973655 50271-6	803840 94904-7 / 4973655 98796-4
Dimension	Minimum Width	34"W x 26"D x 32"H	55"W x 26"D x 32"H
	Maximum Width	63"W x 20.5"D x 32"H	84"W x 20.5"D x 32"H
Material		Frame: Rubberwood Wire: Steel (Polyester coating) Lock: Polypropylene	
		Door Stem: Nylon Frame Stem: Polyacetal R	ubber Skid: Elastomer

- Please note that product specifications and design may change without prior notice for the purpose of quality improvement.
- •If you find something wrong with this product, please let us know. Thank you!



For USA Customers

MADE IN VIETNAM

Designed by: Richell Corporation, Japan Distributed by: Richell USA. Inc.

Grand Prairie, Texas 75050 Phone (972) 641-9795 Fax (972) 641-8495 Visit us at **www.richellusa.com**