MANUFACTURER'S 12 MONTH LIMITED WARRANTY

This Andis product is warranted against defective material or workmanship for one year from the date of purchase. All implied warranties arising and by virtue of State law shall also be limited to one year. Any Andis product determined to be defective in material or workmanship during the warranty period will be repaired or replaced without cost to the consumer for parts and labor. The defective product must be returned via parcel post insured or U.P.S., with proof of purchase to any Andis Authorized Service Station or to: Andis, 1800 Renaissance Blvd., Sturtevant, Wisconsin 53177. IN CANADA please call: 1-800-335-4093. Enclose or attach a letter describing the nature of the problem. Due to foreign matter sometimes found in hair, trimmer blades, or resharpening of blades, are not subject to the one year warranty. Andis will not be liable under this warranty for any defect, failure or malfunction of any of its products caused by normal wear, abuse, misuse, unauthorized adjustments or dissembling. Andis will not be liable for any consequential damages resulting from any defect in material or workmanship of any of its products. Some States do not allow limitations on how long an implied warranty lasts or exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you. The Warranty gives you specific legal rights, and you may also have other rights which may vary from State to State.

Date Purchased _____ Model_____

To find an Authorized Service Station near you log on to www.andis.com or contact our customer service department: 1-800-558-9441 (U.S.) 1-800-335-4093 (Canada)

GARANTÍA LIMITADA DEL FABRICANTE DE 12 MESES

Este producto Andis está garantizado contra material o mano de obra defectuosos durante un año a partir de la fecha de compra. Todas las garantías implícitas provenientes y en virtud de las leyes estatales también deberán ser limitadas a un año. Cualquier producto Andis que se determine esté defectuoso en materiales o mano de obra durante el período de garantía será reemplazado o reparado sin costo al consumidor por piezas y mano de obra. El producto defectuoso debe ser devuelto junto con el comprobante de compra a cualquier estación de reparación Andis autorizada o a: Andis, 1800 Renaissance Blvd., Sturtevant, WI 53177 EEUU, o en Canadá a: 1-800-335-4093. Incluya o anexe una carta describiendo la naturaleza del problema. Debido a materias extrañas que algunas veces se encuentran en el cabello, las cuchillas de la maquinilla y el afilado de las mismas no están cubiertos por la garantía de un año. Andis no se hace responsable dentro de esta garantía por ningún defecto, falla o mal funcionamiento de sus productos ocasionados por el desgaste normal, abuso, mal uso, ajustes o desensamble no autorizados. Andis no es responsable por daños posteriores ocasionados por cualquier defecto en el material o la mano de obra de cualquiera de su productos. Algunos estados no permiten limitaciones en el tiempo de cobertura de una garantía implícita o exclusión o limitación de daños consecuentes o incidentales; por lo tanto, es posible que las limitaciones arriba mencionadas no se apliquen a su caso. La garantía le da derechos legales específicos, y usted puede tener otros derechos que pueden variar de estado a estado.

Fecha de compra _____ Modelo_____

Para encontrar una estación de servicio autorizado cerca de su localidad, visite www.andis.com o póngase en contacto con nuestro departamento de servicio al cliente: 1-800-558-9441 (EE.UU.) 1-800-335-4093 (Canadá)

GARANTIE LIMITÉE DE 12 MOIS

Andis garantit cet appareil au premier acquéreur contre tout défault de fabrication ou de matériau pour une durée de 12 mois à partir de la date d'achat. Toute autre garantie implicite en vertu d'une loi d'État se limite aussi à une durée de 12 mois. Si, à cause d'un défaut de fabrication ou de matériau, cet appareil Andis vient à tomber en panne sous usage normal pendant la période de garantie, Andis s'engage à le remplacer ou à le réparer sans frais de pièces ou de main-d'œuvre pour son propriétaire. L'appareil défectueux doit être retourné par colis postal assuré, accompagné de la preuve d'achat à n'importe quel centre de réparation Andis autorisé ou à Andis, 1800 Renaissance Blvd., Sturtevant, WI 53177 USA. AU CANADA, veuillez composez le : 1-800-335-4093. Vous devez y joindre une lettre expliquant le defaut de l'appareil en question. En raison des substances étrangères que peuvent contenir les cheveux, les lames et leur aiguisage ne sont pas couverts par la garantie de 12 mois. Andis n'est pas responsable sous la présente garantie de tout défaut, toute panne ou toute défectuosité de n'importe lequel de ses produits causé par un usage normal, un usage abusif, réglage non autorisé ou un démontage. Andis n'est pas non plus responsable de dommages indirects causés par tout défaut de fabrication ou de matériau de l'un de ses produits. Certaines provinces interdisent les restrictions de durée d'une garantie implicite ou les exclusions ou restrictions des dommages accidentels ou indirects; il est donc possible que ces exclusions ou restrictions ne vous soient pas applicables. Cette garantie vous confère des droits légaux spécifiques, lesquels pourront varier selon le territoire.

Date d'achat_____ Modèle_____

Pour le centre de SAV le plus proche, consultez le site www.andis.com ou contactez notre service clientèle au : 1-800-558-9441 (É.-U.) 1-800-335-4093 (Canada)

KEEP THIS FOR YOUR RECORDS
GUARDE ESTE DOCUMENTO EN SUS ARCHIVOS
CONSER VEZ CE DOCUMENT DANS VOS DOSSIERS

Andis Company
1800 Renaissance Blvd. Sturtevant, WI 53177
1-800-558-9441 Canada: 1-800-335-4093
info@andisco.com **www.andis.com**

Form #60108 Rev. B
© 2009 Andis Company, USA
Printed in China

andis®



MODEL RACD

Congratulations – you just went First Class when you bought this Andis product. Careful workmanship and quality design have been the hallmarks of Andis products since 1922.

¡Felicidades! Al adquirir este producto Andis, usted ha hecho una compra de primera clase. Trabajo esmerado y diseños de calidad han distinguido a los productos Andis desde 1922.

Toutes nos félicitations pour l'achat de cet appareil, un produit Andis de première classe. La qualité de fabrication et de conception est l'apanage des produits Andis depuis la fondation de la société en 1922.

IMPORTANT SAFEGUARDS

When using an electrical appliance, basic precautions should always be followed, including the following: Read all instructions before using the Andis Clipper.

DANGER: To reduce the risk of electric shock:

1. Do not reach for an appliance that has fallen into water. Unplug immediately.
2. Do not use while bathing or in a shower.
3. Do not place or store appliance where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid.
4. Always unplug this appliance from the electrical outlet immediately after using.
5. Unplug this appliance before cleaning, removing, or assembling parts.

WARNING: To reduce the risk of burns, fire, electric shock, or injury to persons:

1. An appliance should never be left unattended when plugged in.
2. Close supervision is necessary when this appliance is used by, on or near children or individuals with certain disabilities.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by Andis.
4. Never operate this appliance if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped into water. Return the appliance to an Andis Authorized Service Station for examination.
5. Keep the cord away from heated surfaces.
6. Never drop or insert any object into any opening.
7. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
8. Do not use this appliance with a damaged or broken blade or comb, as injury to the skin may occur.
9. To disconnect turn control to “off” then remove plug from outlet.
10. **WARNING:** During use, do not place or leave appliance where it may be (1) damaged by an animal or (2) exposed to the weather.

SAVE THESE INSTRUCTIONS

THIS APPLIANCE IS INTENDED FOR HOUSEHOLD USE

To reduce the risk of electric shock, this appliance has a polarized plug (one blade is wider than the other). This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician to install the proper outlet. Do not change the plug in any way.

OPERATING INSTRUCTIONS

Please read the following instructions before using your new Andis Clipper. Give it the care that a fine precision built instrument deserves and it will give you years of service. Before starting clipper remove blade guard. Plug cord into electrical outlet, operate at 120 volt, 60 cycle AC electrical current or as noted on the unit. To start clipper move switch button to “on” position, to stop, move switch button back to original position. After using your Andis Clipper, rewrap cord and store in a safe place.

USER MAINTENANCE

The internal mechanism of your clipper has been permanently lubricated at the factory. Other than the recommended maintenance described in this manual, no other maintenance should be performed, except by Andis Company or an Andis Authorized Service Station.

CARE AND SERVICING OF YOUR ANDIS CLIPPER BLADES

Blades should be oiled before, during, and after each use. If your clipper blades leave streaks or slow down, it’s a sure sign blades need oil. The clipper should be held in the position shown in Diagram B to prevent oil from getting into the motor. Place a few drops of Andis Clipper Oil on the front and side of the cutter blades (Diagram A). Wipe excess oil off blades with a soft dry cloth. Spray lubricants contain insufficient oil for good lubrication, but are an excellent clipper blade coolant. Always replace broken or nicked blades to prevent injury. You can clean the excess hair from your blades by using a small brush or worn out toothbrush. To clean the blades we suggest to immerse the **blades only** into a shallow pan of Andis Clipper Oil, while the clipper is running. Any excess hair and dirt that has accumulated between the blades should come out. After cleaning, turn your clipper off and dry blades with a dry cloth and start clipping again.


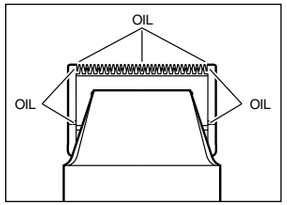


DIAGRAM A


DIAGRAM B

BLADE SETS

Your Andis Clipper includes 4 detachable blade sets: size #10, #7FC and #4FC. The blade size is indicated on the blade set. Use the clipping guide chart in this manual to find the approximate length of cut for each blade set.

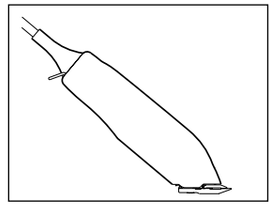

REMOVING BLADE SET

To remove blade set, first make sure your clipper motor is switched "OFF". Push blade release button on top of clipper (Diagram C). After the blade releases from the clipper, slide it off the blade hinge (Diagram D). **NOTE:** Hair may accumulate in the front cavity of the housing under the blade. If this happens, you can clean out the hair by brushing out the cavity with a small brush or an old toothbrush while the blade is off the clipper.


DIAGRAM C


DIAGRAM D

REPLACING OR CHANGING BLADE SET

To replace or change your blade set, slide the blade bracket onto the hinge of the clipper (Diagram E). Push the blade toward the clipper to lock into position.



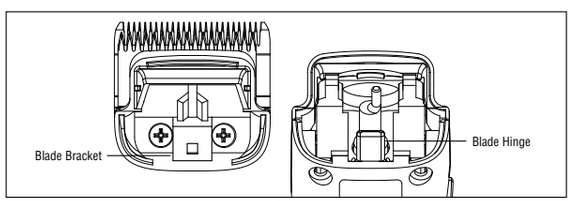



DIAGRAM E

ATTACHING THE SAFEGUARDS

The safeguard blade attachments mount easily. Just snap them on. Snap them off. You can always set the blades for a coarser cut by attaching any of the safeguard blade attachments made for your Andis Clipper. To use safeguard, slip the cutter blade teeth into safeguard. Snap the safeguards down; they snap on and off easily. These attachments guide hair into the clipper blades and give you precise control of hair lengths. The length of trim is indicated on the blade attachment: 1/4", 1/2", 3/4", & 1". Use the chart to find the approximate lengths of cut. Different blade angles in relation to the skin, thickness and texture of the hair will vary the cutting length.

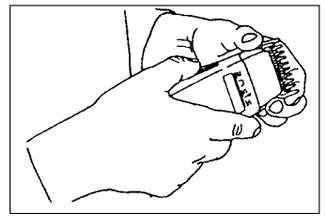

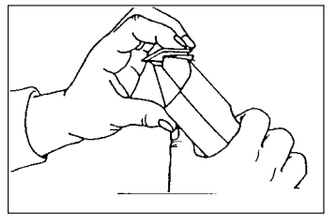

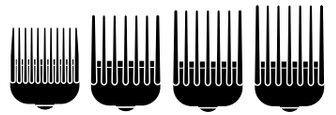

CLIPPING GUIDE

Description	Clipping Direction	Approximate Length of Cut
Size #10 Blade	With hair grain Against hair grain	1/16" 1/32"
Size #7FC Blade	With hair grain Against hair grain	1/8" 1/16"
Size #4FC Blade	With hair grain Against hair grain	3/8" 1/4"
1/4” Comb Attachment*	With hair grain Against hair grain	3/8" 1/4"
1/2” Comb Attachment*	With hair grain Against hair grain	5/8" 1/2"
3/4” Comb Attachment*	With hair grain Against hair grain	7/8" 3/4"
1” Comb Attachment*	With hair grain Against hair grain	1-1/8" 1"

*Approximate length of cut when used with a size #10 blade.

FACTORY REPAIR SERVICE

When the blades of your Andis Clipper become dull after repeated use, it is advised to purchase a new set of blades available through your Andis Supplier or through an Andis Authorized Service Station. If you wish your clipper to be serviced as well, it should be carefully packed and mailed either Parcel Post Insured, or U.P.S. to any Andis Authorized Service Station.