

MONACO™ Pet Stroller

Model Number G2350 - Patterns vary



Stroller Assembly Parts List



1 Rear Wheel Axle Assembly



2 Rear Wheels



1 Front Wheel Assembly



Parent Tray



Removable Basket

How to Assemble Your Stroller



1. Place rear wheels on rear wheel axel assembly



3. Place dual-front wheel onto front stroller leg until it snaps into place.



2. Turn the stroller frame upside down and place the rear wheel assembly on the the frame until it locks in place.



4. Slide removeable basket onto the track underneath the pet compartment.

Proper use of your new stroller



Image #1

PRODUCT CAPACITIES

1. Pet compartment capacity: 60 lbs.
2. Storage basket capacity: 10 lbs.

FOLDING THE STROLLER

1. Unzip the pet compartment.
2. Remove items complete from basket and fold stroller with basket attached.
3. Push left button and push down the bigger button on the handle(indicated by the arrow in image #1) . Push backward and allow the stroller to fold in half.
4. Lock black plastic latch on the side of the frame.

OPENING THE STROLLER

1. Unlatch black plastic latch as indicated in image #2 with the white arrow.
2. Lift up on the handle and pull stroller open to upright position.

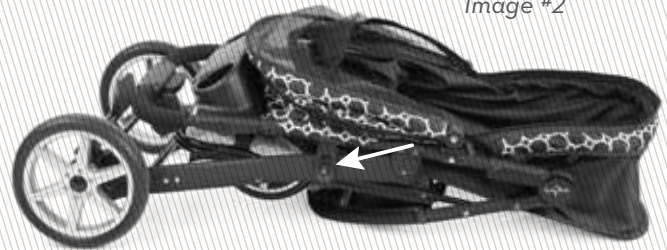


Image #2

For additional information on benefits and features, please go to www.gen7pets.com and see our product instructional videos.

Proper care for your new stroller

- Clean Fabric with mild household soap and warm water.
- Clean Stroller frame with mild household soap and warm water.
- If wheel squeaks or rotates with difficulty, apply light oil. (e.g. WD-40, 3-in-1, or sewing machine oil)
- Regularly check stroller for loose or missing parts.