

# **Booster Bath**®

## **Large Assembly Instructions**

Tools Needed: Phillips head screwdriver



1

Confirm complete engagement as shown.

The two piece Booster Bath is designed to snap together one time only and is not designed to come apart once connected.

Confirm all #13 snaps are in their proper locations before applying firm downward pressure.



2

Push rubber bumpers into receiving holes at the bottom of each leg.



3

Attach legs as shown. **Note:** Make sure that the legs marked with an "A" are located in front of the Booster Bath. Legs marked "B" are design to be attached at the rear.




4

Push drain hose on as shown. Flip tub upright when complete.




5

Install 4 mat clips using 8 small screws as shown.

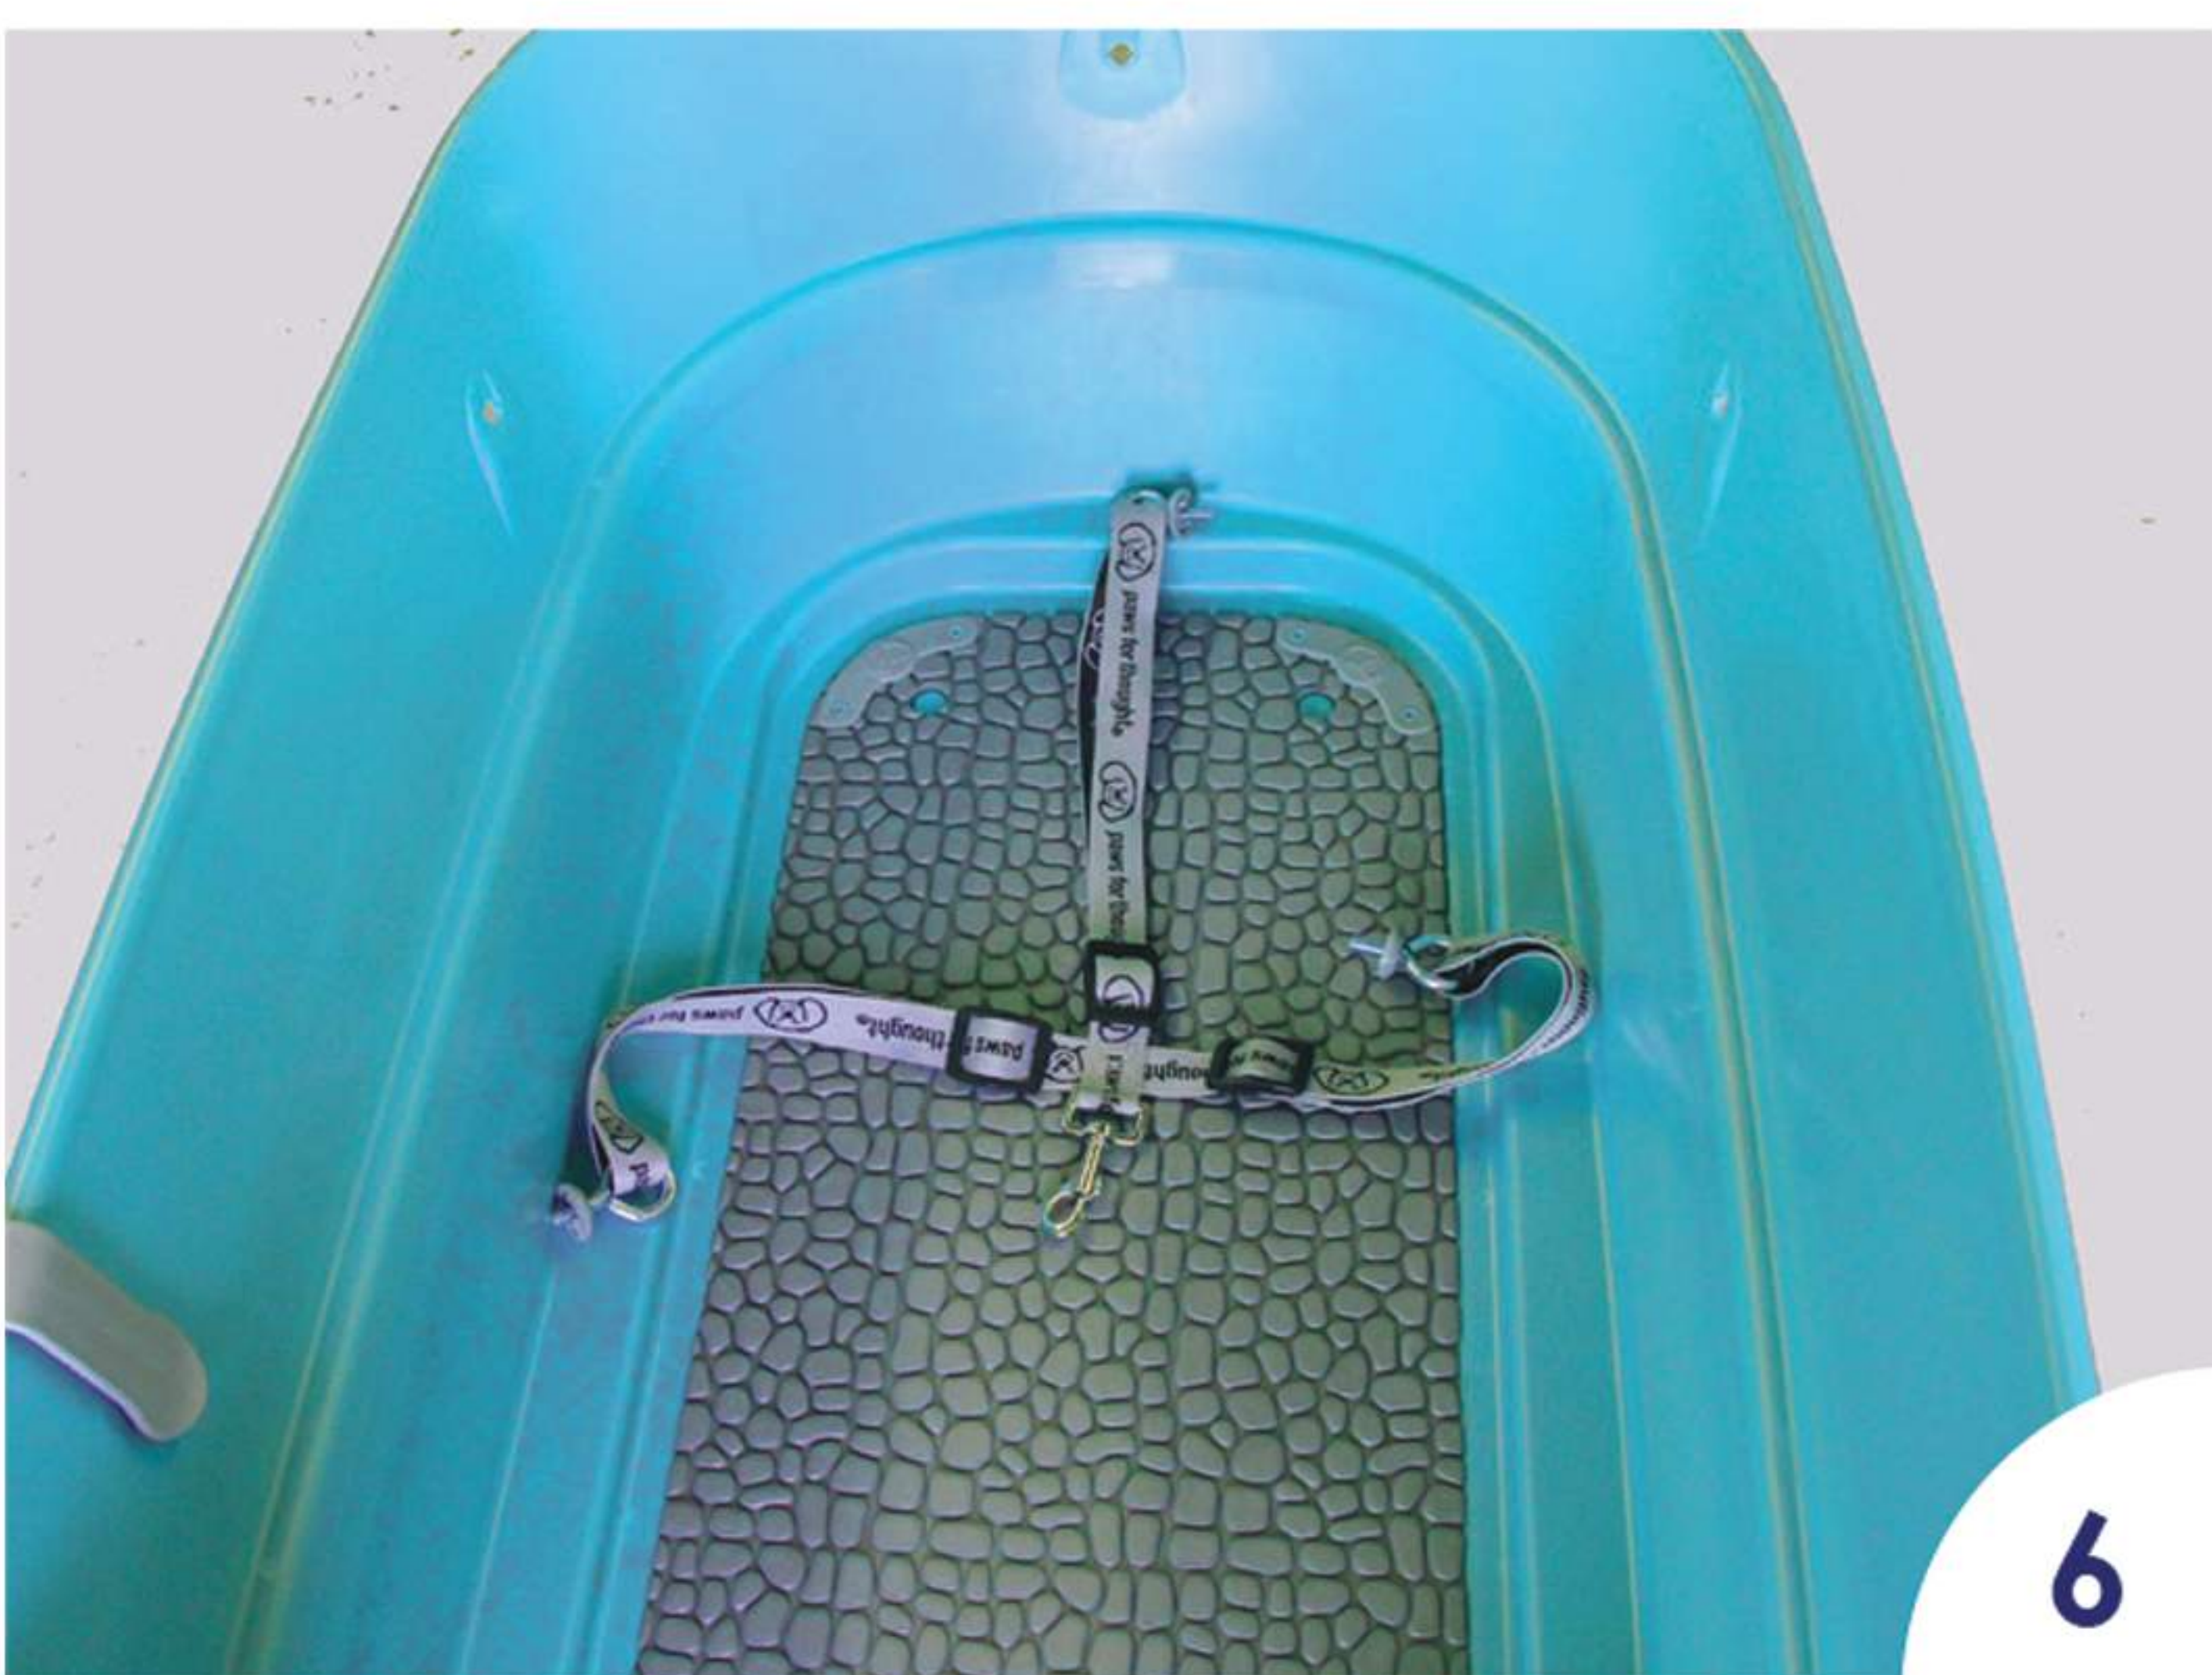

6

Place leash restraint in T-formation as shown.

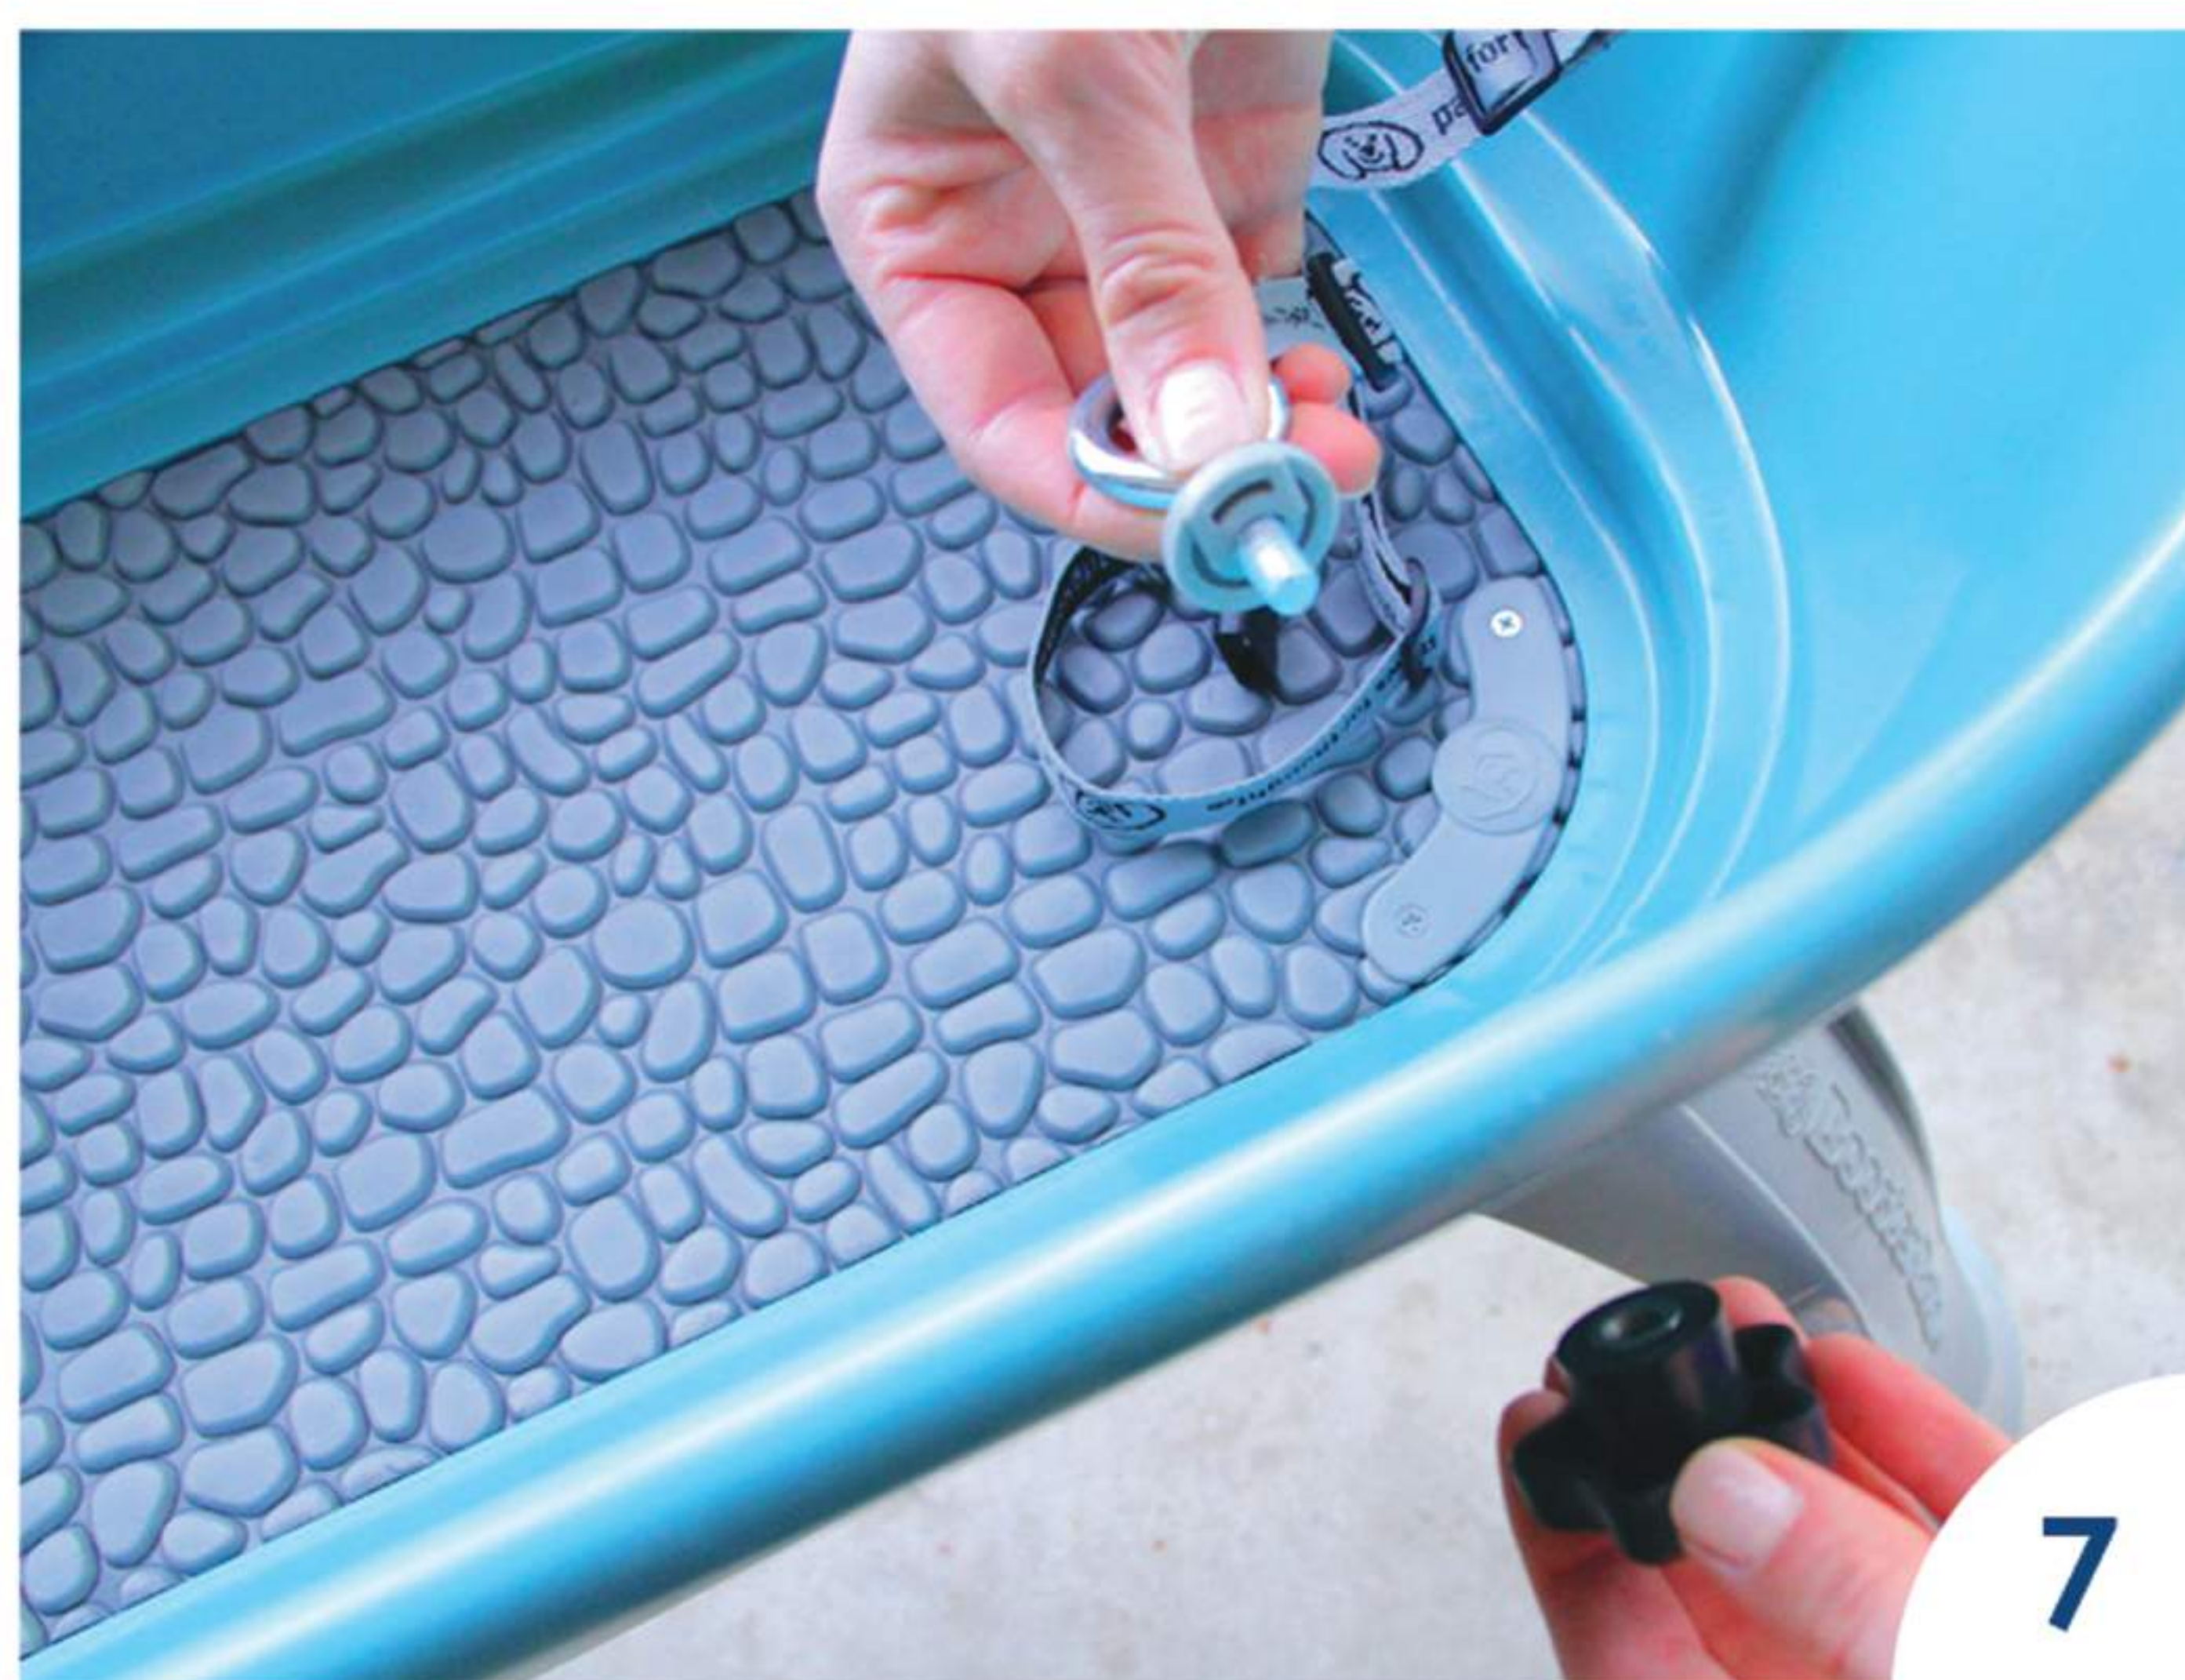

7

Place plastic washers over steel eyehooks. Push eyehook through hole in side wall of tub and screw on the 3 plastic knobs firmly.



8

Install Shampoo Caddy in rear sidewall of tub.



**For any questions or concerns please contact us at [info@boosterbath.com](mailto:info@boosterbath.com)**



### Large Parts List

Item #	Name	Materials	Quantity
			1
1	Instruction Sheet	Paper	3
2	Star Knobs	Plastic / Stainless insert	3
3	Mat Retainer	Grey Plastic (PP)	4
4	Grey Eyehook Washer	Grey Plastic (PP)	3
5	Screw: Flat 8 - 5/8 SMS	Stainless Steel (SS)	8
6	Leg Rubber Bumper (Square)	TRP	4
7	Large Restraint	Polyester	1
8	Mat - Large	Grey Foam	1
9	Fan Nozzle (Grey)	Grey Plastic (PP)	1
10	Drain Hose, 5 Feet	Grey Plastic (PP)	1
11	Legs	Grey Plastic (PP)	4
12	Shampoo Caddy	Grey Plastic (PP)	1

**If any parts are missing or damaged or for warranty service please contact Booster Bath. Do not contact the retailer.**

Booster Bath

888-300-5139

CustomerService@BoosterBath.com

<http://www.BoosterBath.com>