




XLarge Assembly Instructions

Tools Needed: Phillips head screwdriver




1. Push "stainless steel bolts" through four holes in bottom of tub.

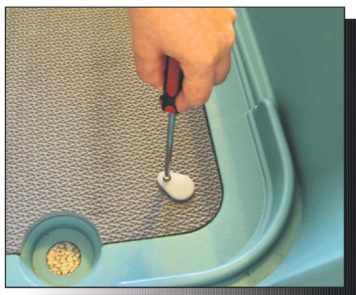

2. Attach plastic bolt caps using small Philip screws.




3. Insert "rubber-bumper" in cavity at bottom of each leg.

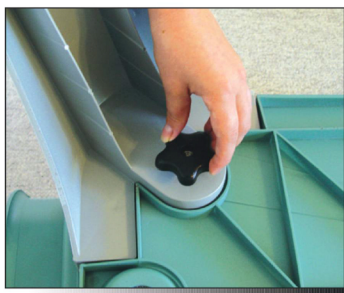


4. Turn tub over and place "legs" over bolts. Spin "five star knobs" on bolts firmly, when complete, turn tub upright.



5. Flex "shampoo caddy" into it's three hole location starting with bottom hole.

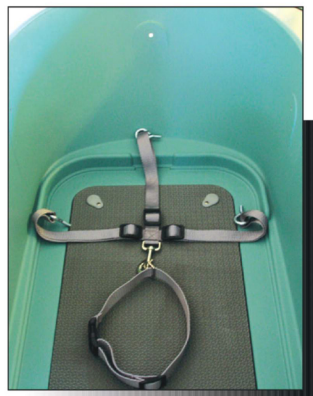

6. Place "leash restraint" in "T" configuration in bottom of tub as shown.

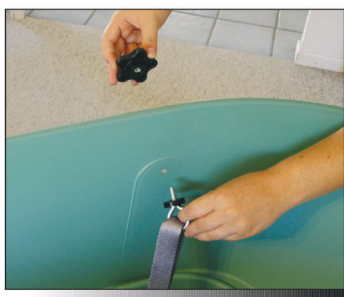

7. Place thick washer over end of eyehook and push through sidewall of tub, spin on five star knobs firmly.



8. Attach drain hose by pushing through large hole in rear of tub and securing with threaded cap.





XL Booster Bath

| Item # | Name | Materials | Quantity |
|---------------|-------------------------|----------------------------|-----------------|
| 1 | Instruction Sheet | Paper | 1 |
| 2 | 5 Star Knobs | Plastic / Stainless insert | 7 |
| 3 | Mat Retainer | Grey Plastic (PP) | 4 |
| 4 | Black Eyehook Washer | Black Plastic | 3 |
| 5 | Screw: Flat 8 - 5/8 SMS | Stainless Steel (SS) | 4 |
| 6 | Leg Bolt | Stainless Steel (SS) | 4 |
| 7 | Round Leg Bumper | Black Rubber | 4 |
| 8 | XL restraint | Polyester | 1 |
| 10 | Mat - X-Large | Grey Foam | 1 |
| 11 | Fan Nozzle | Grey Plastic (PP) | 1 |
| 12 | Drain Hose, 5 Feet | Grey Plastic (PP) | 1 |
| 13 | Cap, Drain hose | Grey Plastic (PP) | 1 |
| 14 | Legs | Grey Plastic (PP) | 4 |
| 15 | Shampoo Caddy | Grey Plastic (PP) | 1 |

If any parts are missing or damaged or for warranty service please contact Booster Bath. Do not contact the retailer.

Booster Bath
888-300-5139

CustomerService@BoosterBath.com
<http://www.BoosterBath.com>