



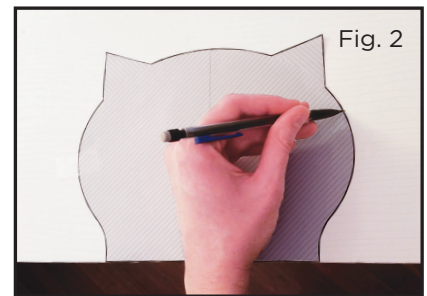

Installation Instructions

Patent Pending

1. Remove door from doorway by pulling hinge pins.
Hint: Position flat screw driver to catch top of pin and tap upward with hammer. Begin with the bottom hinge and work upwards. Be sure to support door so it does not fall and cause damage or injury.
2. Lay the door down on a sturdy work surface. Double-check that you're working on the bottom of the door. (Fig. 1)
3. Locate the "Purrfect Portal Cut-Out Template" and cut out the template along the bold outer line. DO NOT cut the cat ears off! Be sure to cut along the bold outer line.
4. Mark a centerline at the bottom of the door. Place the template on the door and align it with the center mark on the door.
5. Use a pencil to trace the outer edge of the template. (Fig. 2)
Hint: If you tape the template onto the door, it's easier to draw an outline around the entrance hole.
6. Carefully, use a jig saw or similar tool to cut out the "head" portion of the opening. DO NOT cut the holes for the ears at this time. (Fig. 3)
7. After the "head" portion is cut, cut the 2 "ear" areas. (Fig. 4)
8. Locate the Purrfect Portal part labeled "A". You want to install part "A" on the side of the door that faces "in" once installed (this is the side of the door that has less foot traffic and is less visible). Place the Purrfect Portal side "A" on the door surface.
9. Make sure the bottom edge of the Purrfect Portal is up against the bottom edge of the door. (Fig. 5)
10. Insert and tighten a screw in each of the 4 holes. Do not overtighten screws. Insert a rubber screw cap cover into each hole.
11. Flip door to opposite side.
12. Repeat installation steps 9 & 10 using Purrfect Portal part labeled "B".

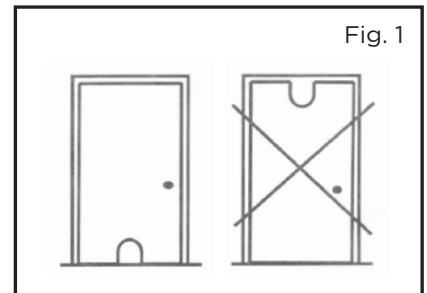


Need help? We love to help!
Please email us at Support@PurrfectPortal.com

Patent Pending



Door Hole Template

Patent Pending

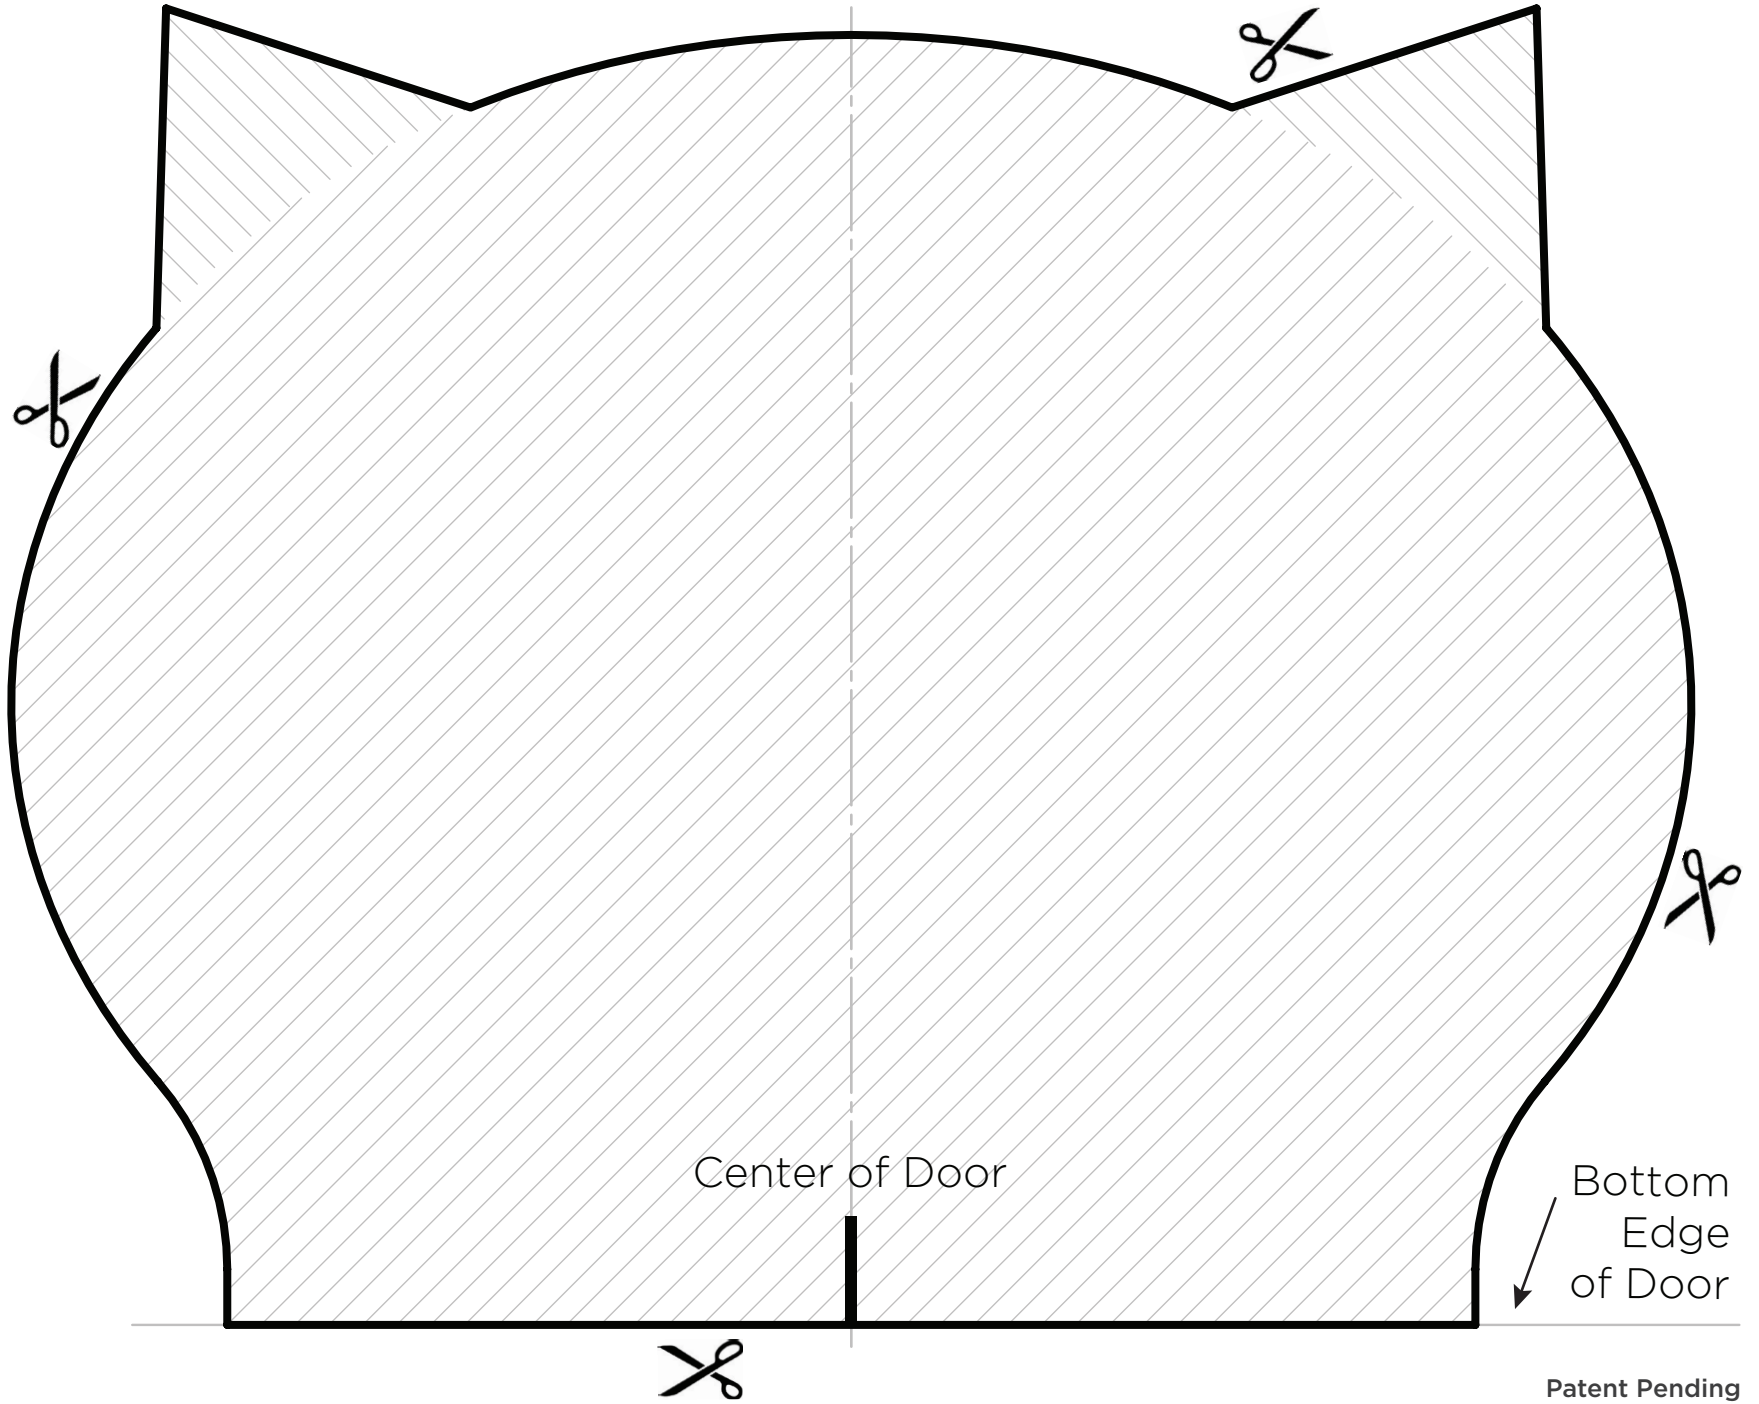

Patent Pending