


HOW TO UNWRAP AND RESHAPE BED:

FRISCO DOG BED

1 Remove Bed From Plastic Bag


Carefully cut the bag open about 1 inch from its edge.

Caution: Do not cut the bed itself!

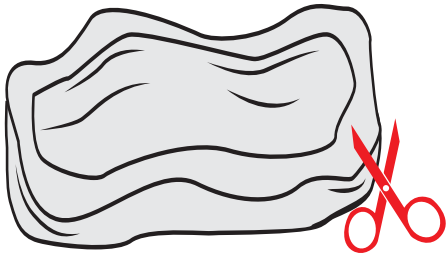

2 Fluff the Bed

After removing the bed, hold it in both hands, and shake it vigorously while hanging it vertically to separate the filling. Optional: You can place the bed in the dryer on air/fluff for 15 minutes to help with this step.

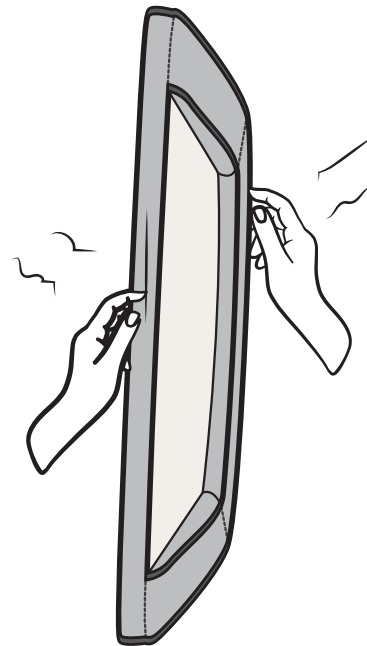

3 Allow the Bed to Expand

For optimal rebound, it is recommended to let the bed sit for 24-48 hours before use