WALL LINER FITTING INSTRUCTIONS
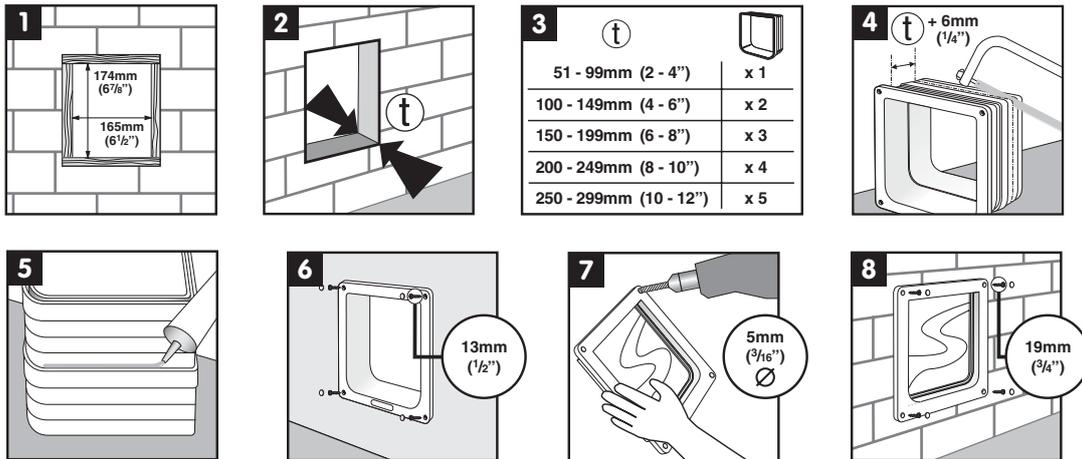
For use with the *CAT MATE* Lockable Cat Flap with Door Liner (Ref 234) and *CAT MATE* 4-Way Locking Cat Flap with Door Liner (Ref 235).

(D) **EINBAUANLEITUNG FÜR TUNNELELEMENTE**

(F) **INSTRUCTIONS DE MONTAGE DES CADRES-INTÉGRÉS**

(E) **INSTRUCCIONES DE AJUSTE DE LAS GUARNICIONES PARA MAMPARA**

(NL) **KATTENDEUR TUNNELS - MONTAGE INSTRUCTIES**

3

(t)	
51 - 99mm (2 - 4")	x 1
100 - 149mm (4 - 6")	x 2
150 - 199mm (6 - 8")	x 3
200 - 249mm (8 - 10")	x 4
250 - 299mm (10 - 12")	x 5

1 Make a suitably sized hole in wall and line it with 19mm (¾") plywood or similar material to take screws, as shown in Fig 1. (We recommend the bottom of the hole is approximately level with your pet's stomach.)

2 Determine thickness of wall (t).

3 Determine number of Wall Liners required. (Use an additional liner for each 50mm (2") of wall thickness.)

4 Assemble required number of Wall Liners on internal frame (frame without swinging flap). Cut length to wall thickness (t) + 6mm (¼") using a hacksaw, as shown in Fig 4. Use moulded lines as a guide to ensure a square cut.

5 If desired, glue Wall Liners together using Superglue or ABS solvent adhesive. Place glue into outer joint(s).

6 Attach interior frame and Wall Liners to inside of wall, using short 13mm (½") screws.

7 Drill out four screw holes in exterior frame to allow close clearance on screws. (Recommended drill 5mm (³⁄₁₆") diameter.)

8 Position exterior frame on outside of wall and screw on using 19mm (¾") screws. Finally, fit screw caps.

A helpful tip...

To train your pet to use the cat flap, prop it open at first and use food as an encouragement.

CUSTOMER HELPLINE UK : +44 (0) 1932 700 001 USA : (936) 760 4333   **www.pet-mate.com**