Mega Kit SPO0587

THIS UNIT CONTAINS:

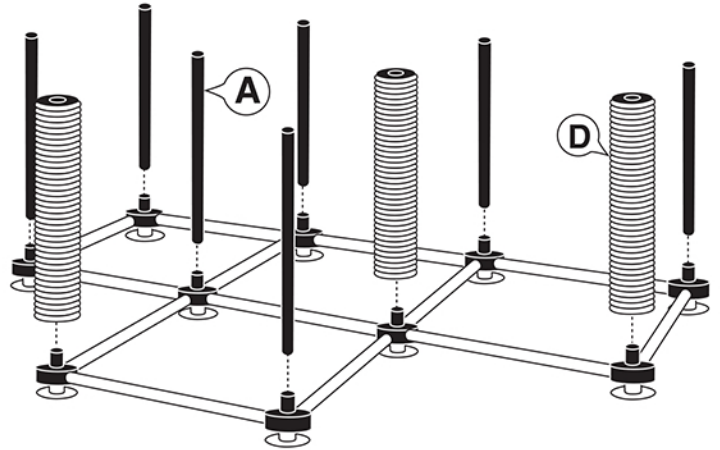|								
A x 48 (15172)	**B** x 28 (10089) **CAP** x 10 (10140)	**D** x 4 (25054)	**E** x 3 (20059)	**HH** x 4 (15589)	**JJ** x 2 (10496)	**F** x 2 (30554)	**G** x 1 (30493) **N** x 2 (30518)	**V** x 1 (30615)

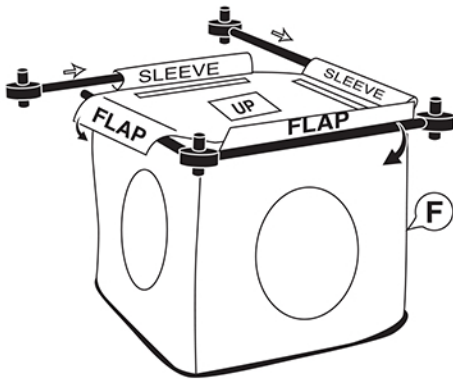## STEP 1

Assemble base as shown.
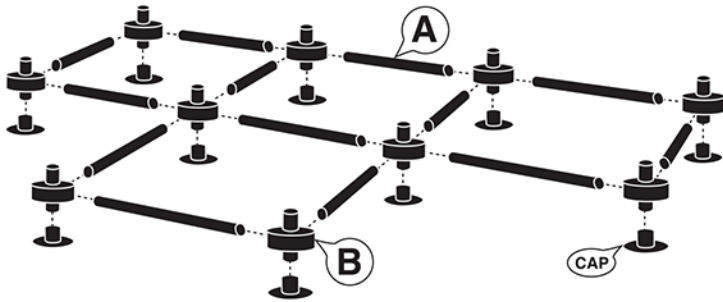
STEP 2

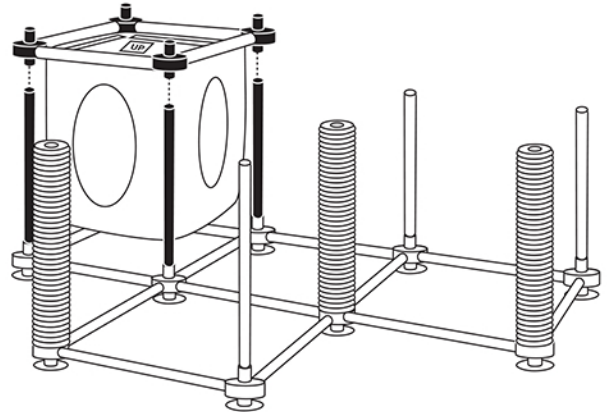Insert **PIPES "A"** and **POSTS "D."**

STEP 3

Using **CUBE "F,"** slide pipes through **SLEEVES** and hook and loop **FLAPS** over pipes as shown. Insert pipes into joints.
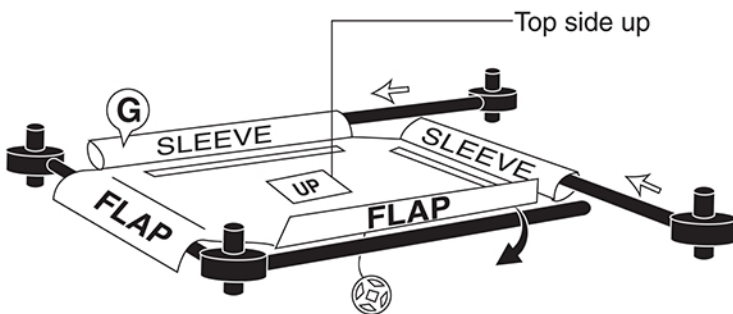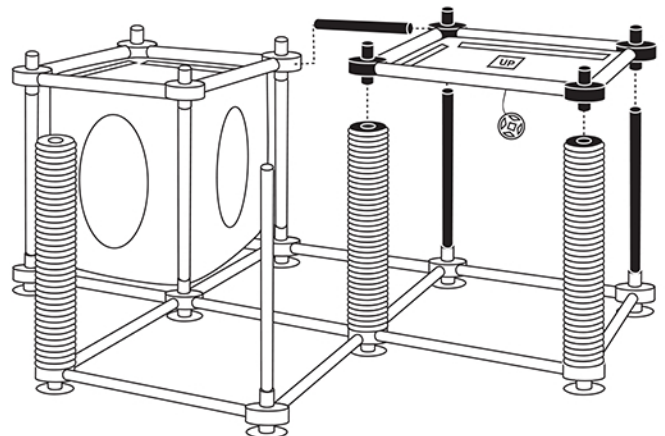
STEP 4

Attach **CUBE "F"** to assembled unit.

STEP 5

Using **PLATFORM "G,"** slide pipes through **SLEEVES** and hook and loop **FLAPS** over pipes as shown. Insert pipes into joints.
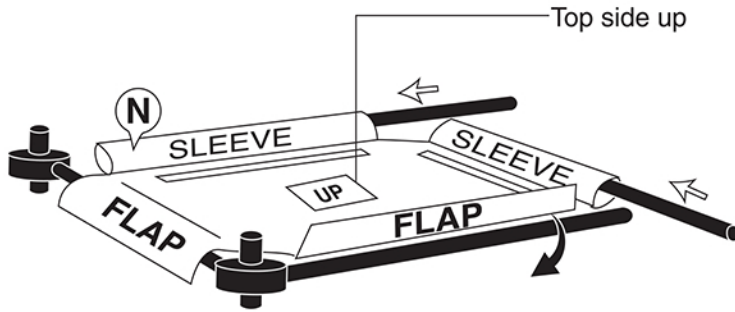
Top side up

STEP 6

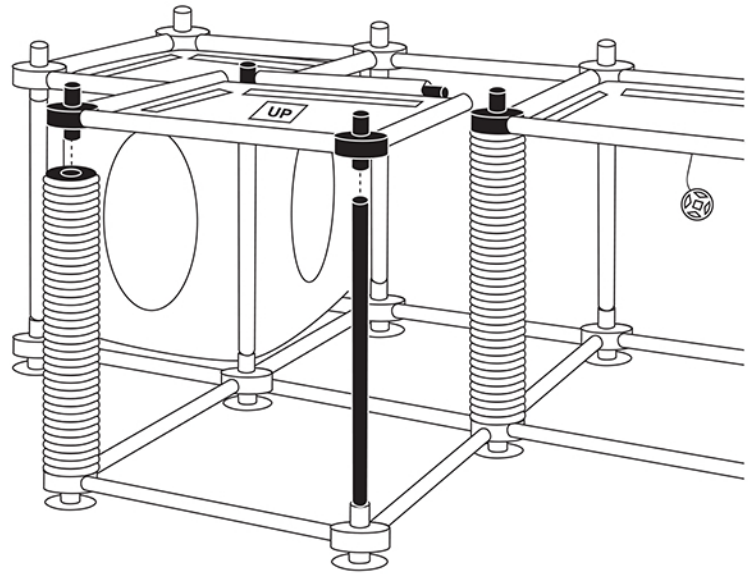Attach **PLATFORM "G"** to assembled unit. Insert pipe into joints.

STEP 7

Using **PLATFORM "N,"** slide pipes through **SLEEVES** and hook and loop **FLAPS** over pipes as shown. Only assemble pieces shown. Insert pipes into joints.
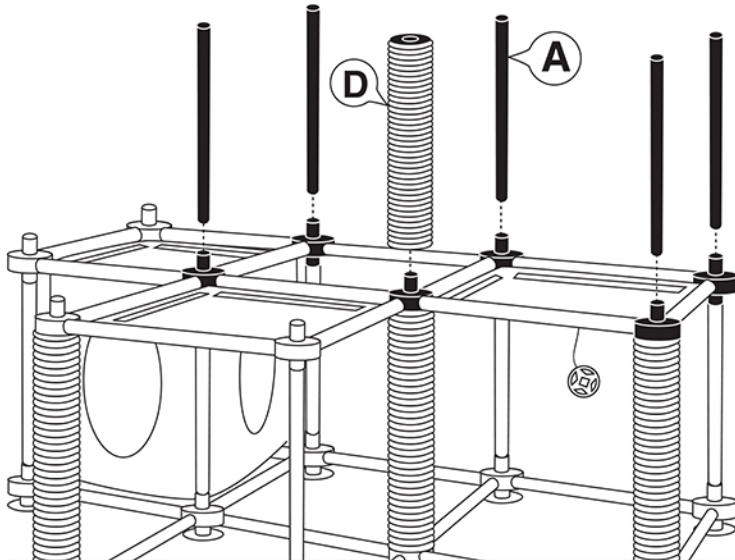
Top side up

N SLEEVE SLEEVE FLAP UP FLAP

STEP 8

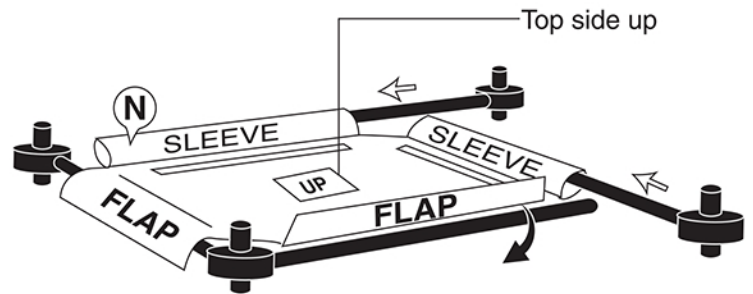Attach **PLATFORM "N"** to assembled unit.

UP

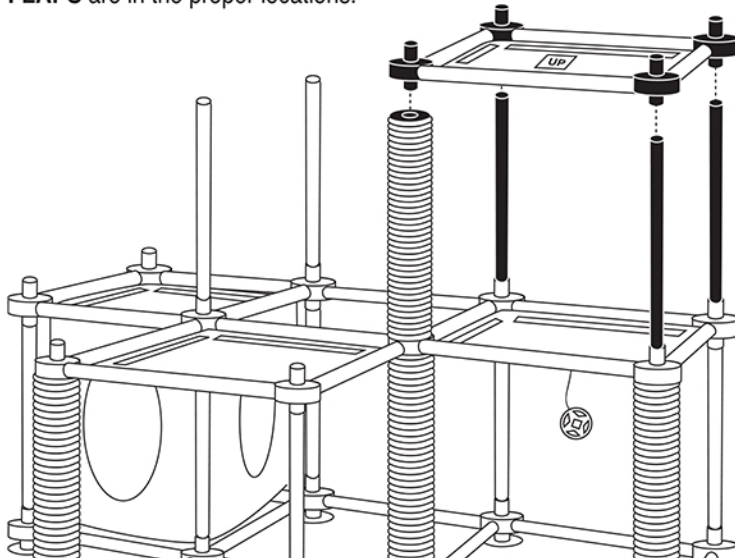## STEP 9

Insert **PIPES "A"** and **POST "D."**

D A

STEP 10

Using second **PLATFORM "N,"** slide pipes through **SLEEVES** and hook and loop **FLAPS** over pipes as shown. Insert pipes into joints.
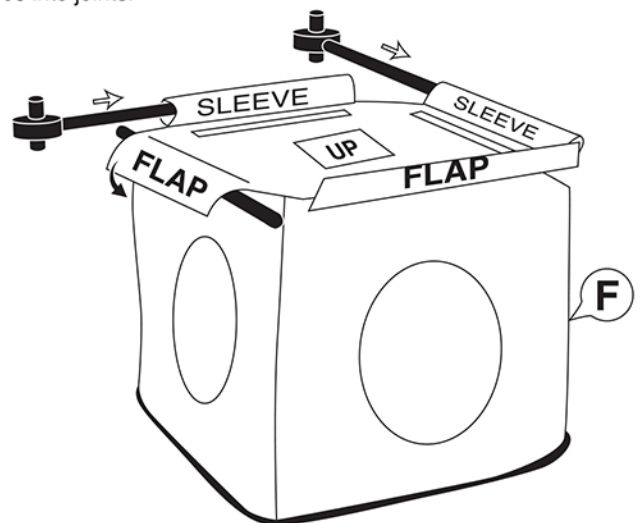
Top side up

N SLEEVE SLEEVE FLAP UP FLAP

STEP 11

Attach **PLATFORM "N"** to assembled unit. Make sure **SLEEVES** and **FLAPS** are in the proper locations.
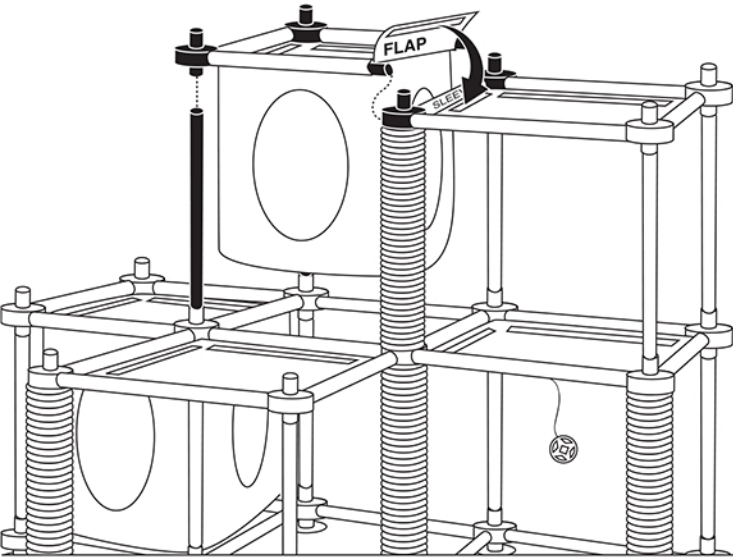
UP

STEP 12

Using second **CUBE "F,"** slide pipes through **SLEEVES** and hook and loop **FLAP** over pipe as shown. Only assemble pieces shown. Insert pipes into joints.
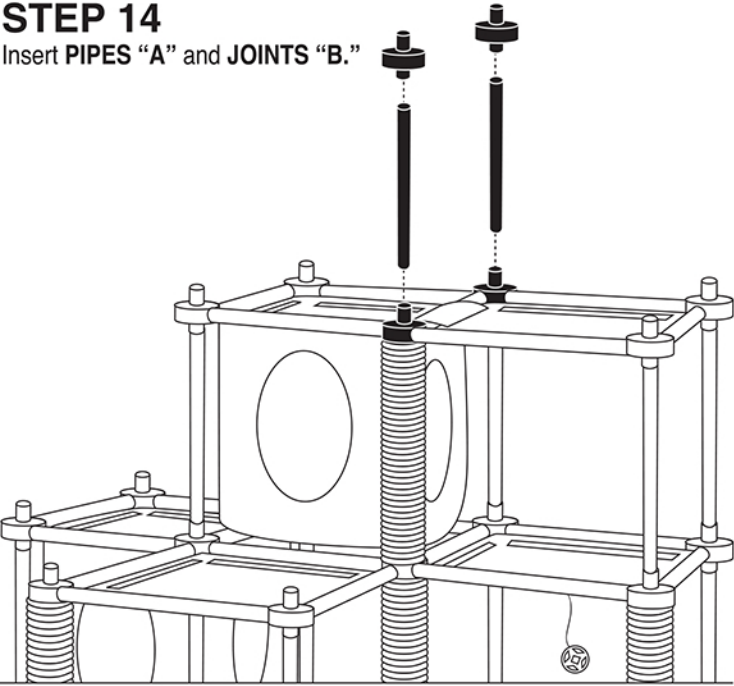
SLEEVE SLEEVE FLAP UP FLAP F

STEP 13

Attach **CUBE "F"** to assembled unit. Hook and loop **CUBE FLAP** over **PLATFORM SLEEVE** as shown.
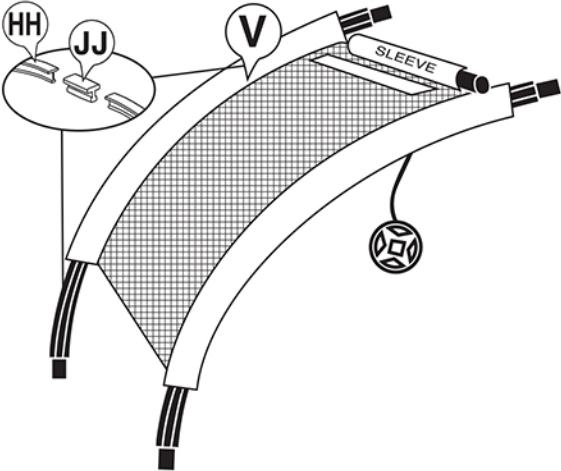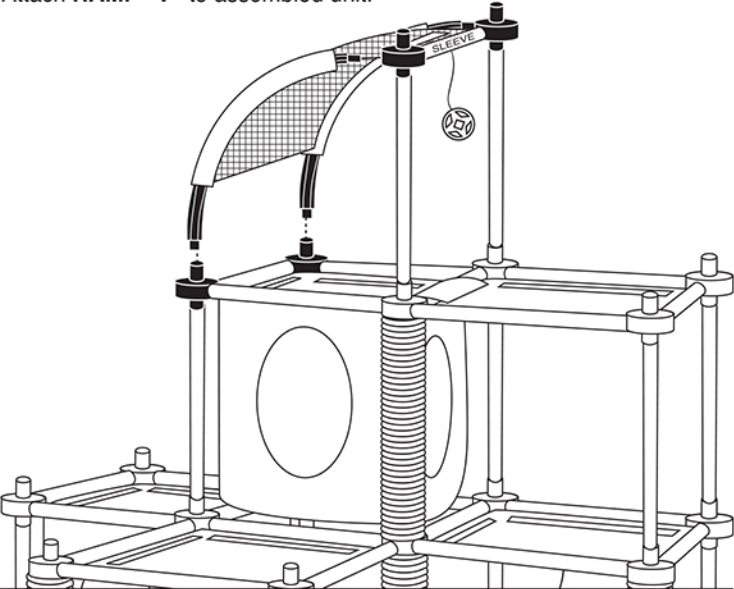
STEP 14

Insert **PIPES "A"** and **JOINTS "B."**

STEP 15

Slide connected **PIPES "HH"** and **"JJ"** through **SLEEVES** of **RAMP "V"**. Insert straight pipes through end **SLEEVES** of **RAMP**.

STEP 16

Attach **RAMP "V"** to assembled unit.

STEP 17

Attach **Toys "E"** anywhere!