


360 ROTATION DIGITAL THERMO- HYGROMETER INSTRUCTION

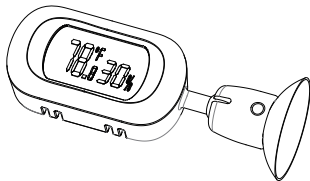

Dongguan ETAN Pet Supplies Co.,Ltd.
No.59,Liantang Road,Sanzhongcun,Qingxi Town,
Dongguan,Guangdong,China,523651
Tel: **86-769-87841199**
Email: **reptizoo.tmall.com**
Overseas Sales: **postmaster@repti-zoo.com**
China Sales: **market_one@repti-zoo.com**
www.repti-zoo.com



Thanks for choosing REPTIZOO 360 Rotation Digital Thermo- Hygrometer. In order to use this 360 Rotation Digital Thermo- Hygrometer properly and ensure its service life, please read the instructions manual carefully before using it.

PRODUCT CHARACTERISTICS

1. Display temperature and humidity.
2. It is convenient to monitor conditions of your pet from different views with equipped suction cup and bracket.
3. Measurement range: temperature: 14~122°F , humidity: 20%~90%.
4. Monitoring frequency: 20 seconds, measurement accuracy: $\pm 2^{\circ}\text{F}$, $\pm 5\%$.

HOW TO USE


1. Remove screen protective film before use.
2. Can adjust the angles 360 degree.



3. Before fixing it, be sure to clean the place where the sucker needs to be bonded. Must remove air, also can put a few water in order to make it stick sustainably.

4. Battery replacement:

- Open battery cover and take out exhausted battery(LR1130).

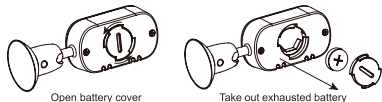

- Install the new battery (LR1130) and close the battery cover.
 - » Place the battery diagonally in the battery compartment.
 - » Push the battery to deform the positive pole to its maximum.
 - » Press down the battery into the battery compartment.

